



**KODAK**

**Portable Speaker**

BTSP114



# **IMPORTANT SAFETY INSTRUCTIONS**

- Read these instructions carefully.
- Keep these instructions in a safe place and follow all instructions.
- Do not use this product near water.
- Cleaning: Do not use liquid cleaners or aerosol cleaners. Clean only with a dry damp cloth.
- Do not place near any heat sources such as radiators, heat registers, stoves, or other apparatuses (including amplifiers) that produce heat.
- Only use attachments/accessories specified by the manufacturer.
- Refer all servicing to qualified service personnel. Servicing is required when the product has been damaged in any way, such as objects have fallen into the product, does not operate normally, or has been dropped.

## **FCC Warning**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## **WARNING**

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

## **IC Warning**

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

This device complies with Canadian ICES-003 and RSS-247

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

L'appareil numérique du CIEM conforme canadien peut - 3 (b) / nmb - 3 (b).

This device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS 102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

Cet appareil est conforme à l'exemption des limites d'évaluation courante dans la section 2.5 du CNR - 102 et conformité avec RSS 102 de l'exposition aux RF, les utilisateurs peuvent obtenir des données canadiennes sur l'exposition aux champs RF et la conformité.


This equipment complies with Canada radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Cet équipement est conforme Canada limites d'exposition aux radiations dans un environnement non contrôlé.

Cet équipement doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et votre corps.

## LOCATION OF CONTROLS

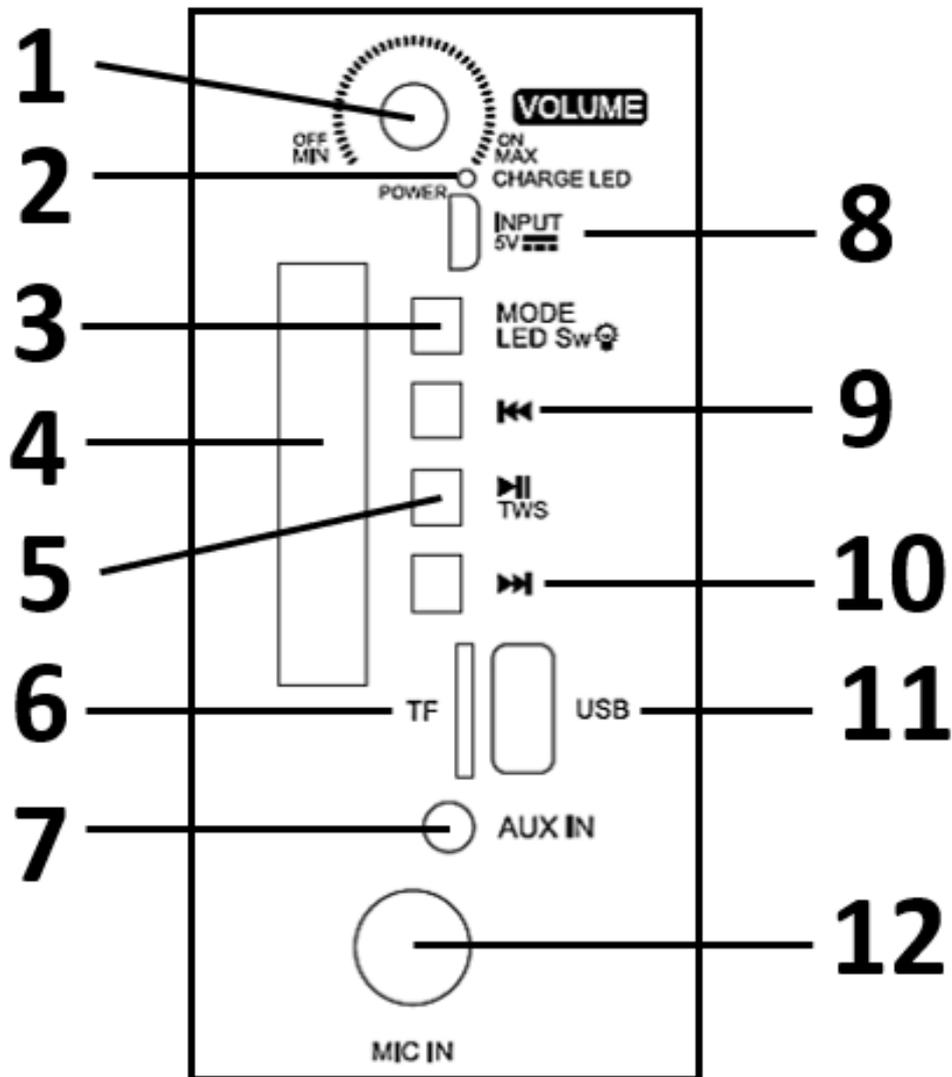

1. ON / OFF / Volume Control Knob	7. Aux-in Port
2. Charge Indicator Light	8. Micro USB Charging Port
3. Mode Button	9. Previous Button
4. LED Display	10. Next Button
5. Play / Pause / TWS Button	11. USB Input
6. MicroSD Input	12. Microphone

## CHARGING THE SPEAKER

Using the Charging Cable provided, plug the Micro USB Tip into the Micro USB Charging Port and plug the other end (USB Tip) into a USB port on your computer or USB wall charger (not included). The LED Indicator Light will illuminate red while charging and turn off when completed. A full charge will take approximately 4 hours.

**NOTE: The input for charging is 5V, 1A. Do not use a charger with more than 5V, 2.4A rating.**

### Product and Battery Disposal

This product contains a built-in lithium battery and should not be disposed of in normal household waste. The battery in this device is not intended to be removed by the individual or end user. For disposal and recycling, please contact your local waste management authorities. The recycling and processing of electronic waste will make a significant contribution towards helping protect the environment.

Warning: To reduce the risk of fire and burns, do not disassemble, crush, puncture, short external contacts or dispose of in fire or water.

## POWER ON/OFF

To turn on/off the speaker, turn the ON/OFF knob.

## BLUETOOTH MODE

Pairing a Bluetooth Enabled Device for the First Time to your Bluetooth Speaker

NOTE: Refer to the user manual for your Bluetooth enabled device for instructions on pairing and connecting Bluetooth devices.

1. Keep the unit and your Bluetooth enabled device within 1 metre at all times during the pairing process.
2. Turn on the speaker and press the Mode Button and toggle to the Bluetooth mode.
3. Turn on the Bluetooth function on your Bluetooth enabled device and search for Bluetooth devices. When the search is complete, select “**BTSPK114**” from the Bluetooth device list.

### NOTE:

- If pairing was unsuccessful, turn off the speaker first and repeat the steps above to re-pair again.
  - After successful pairing, paired devices will remember each other. Unless pairing information is deleted, re-pairing is not required after the first time.
  - If you want to pair the unit with other Bluetooth enabled devices, please disconnect/remove the existing device and pair with the new device according to the steps above.
4. To increase or decrease the volume on the speaker, turn the Volume Knob
  5. To skip songs forward or backward, press the Previous or Next Button.
  6. To pause and resume playback, press the Play/Pause button.

## MICROPHONE

Connect the microphone to sing along to your favourite tunes.

## FM MODE

Press the Mode Button to cycle through to the FM Mode. Press and hold the Play/Pause Button to start the auto search function. Once the auto search feature is completed, all stations with signal will be saved into memory. Use the Previous or Next Buttons to search through the saved stations.

**Tips for Best Reception: If the FM reception is weak, change the position or location of the unit or try placing the unit near a window until you get the best reception.**

## AUX-IN (AUDIO INPUT) MODE

Using a 3.5mm aux-in cable (not included) plug one end into a smartphone, tablet, MP3 player or other audio source and the other into the Aux-in Port. Press the Mode Button to cycle through to the Aux-in Mode.

## USB MODE

This unit allows you to play music from a USB thumb drive with MP3 formatted files. Insert the USB thumb drive. Press the Mode Button to cycle through to the USB Mode.

## MICRO SD MODE

This unit allows you to play music from a MicroSD memory card with MP3 formatted files. Insert the MicroSD card. Press the Mode Button to cycle through to the MicroSD Mode.

**NOTE: To insert the MicroSD card, use your fingernail to help push it in all the way until it clicks in. To remove the MicroSD card, push it in all the way and it will click out. The microSD memory card can be left in the speaker or taken out. It will not affect the function of the speaker as you cycle through the different modes.**

## LED LIGHTS

To turn on and off the LED lights on the speaker, press and hold the Mode Button.

## TWS FUNCTION

You can connect another BTSPK114 speaker for double the sound using the TWS function. Turn on both speakers to the Bluetooth Mode. Connect one of the speakers to your Bluetooth enabled device. Press and hold the TWS Button and the 2 speakers will connect automatically. Press and hold again to disconnect.

**Need help? Please call us.**

**If you encounter any difficulties with this product, please call or email us and our representatives will be ready to help you.**

**Toll free: 1-800-593-6669 (Monday to Friday: 9am – 5pm EST)**

**Email: [support@borne-lifestyle.com](mailto:support@borne-lifestyle.com)**

**Thank you for your purchase. We want you to start enjoying your product.**

**The Kodak trademark is used under license from Kodak.**

## **LIMITED WARRANTY**

Warning: Some Products may contain components that are small enough to be swallowed. Keep out of the reach of children.

Before returning your Product for service under this Warranty, (i) please read the instruction manual carefully and visit our website at [www.borne-lifestyle.com](http://www.borne-lifestyle.com) for product updates and extended support documentation (e.g., Frequently Asked Questions, Common Troubleshooting Guides); (ii) please contact Edco Electronics Support if you are still having trouble with your Product.

Subject to the terms and conditions herein, Edco Electronics warrants to the original purchaser of the Product (“Customer”) that the Product will be free from defects in material or workmanship under normal, noncommercial use (“Defects”) for a period of 1 year.

Warranty Period encompasses separate “Coverage Periods” for Parts and Labor, with each Coverage Period to begin from the original date of Customer purchase. Parts are covered for a period of 1yr. Labour is covered for 90 days. If Customer returns a defective Product during the applicable Warranty Period, Edco Electronics will, at its option during the specified Coverage Periods for Parts and Labor (as applicable), either: (i) repair the Product or (ii) replace the Product with a new or refurbished Product, in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges for which the Customer is responsible. The foregoing states the Customer’s exclusive remedy and Edco Electronics’ sole liability for breach of the limited warranty contained herein.

This Warranty specifically excludes any Product (or, as applicable, any component thereof) that has Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product by any party other than Edco Electronics or a party authorized in writing by Edco Electronics; (c) any damage to Product due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product; (d) cosmetic damage to the Product caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions; or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer’s commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the data stored on Product is relied upon for medical or lifesaving applications. Edco Electronics expressly disclaims any warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify Edco Electronics for any damages claimed against Edco Electronics for such uses.

This Warranty specifically and expressly excludes any Product that is purchased by Customer as a “floor” or “display” model. Any such Product is purchased by Customer “AS IS” and Edco Electronics disclaims any Warranties, express or implied, in relation thereto.

EXCEPT FOR THE EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCT IS PROVIDED “AS IS”, AND EDCO ELECTRONICS DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY OF (I) MERCHANTABILITY, (II) FITNESS FOR A PARTICULAR PURPOSE, OR (III)

NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL EDCO ELECTRONICS BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE). ADDITIONALLY, EVEN IF EDCO ELECTRONICS HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, EDCO ELECTRONICS' AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT COSTS PAID BY THAT CUSTOMER FOR THE PRODUCT CAUSING SUCH DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction.

To obtain Warranty service, Customer must call Edco Electronics Support prior to making a Product Return. Customer must include with Product Return the following items: (i) a dated sales receipt that indicates the place of purchase, model number of Product, and amount paid; (ii) a detailed description of Customer's problem with Product; (iii) Customer's full name, phone number, and return address, and; (iv) a money order for any applicable shipping costs made out to Edco Electronics Inc. to cover return shipping charges to US and Canadian destinations only. Edco Electronics will not make return shipments to a P.O. Box. For shipping to international addresses, actual freight will be charged to Customer. Failure to enclose any of these items may delay the processing of your Warranty claim. Return your Product freight-prepaid in its original packaging, or packaging that affords an equal measure of protection. Please allow 4 to 6 weeks for the processing of your claim.

Edco Electronics Inc.  
8484 Esplanade,  
Montreal, Quebec H2P 2R7  
Canada  
Toll Free: 1-800-593-6669 (Monday to Friday: 9am to 5pm EST)  
Email: [support@borne-lifestyle.com](mailto:support@borne-lifestyle.com)