

CAUTION-ELECTRIC TOY
 NOT RECOMMENDED FOR CHILDREN
 UNDER 6 YEARS OF AGE. AS WITH ALL
 ELECTRIC PRODUCTS, PRECAUTIONS
 SHOULD BE OBSERVED DURING HANDLING
 AND USE TO PREVENT ELECTRIC SHOCK.
 INPUT: 120V AC-60Hz-
 3W ONLY
 OUTPUT: 7VDC, 0.15A

OPERATING INSTRUCTIONS

BATTERY CHARGING:

(THE RECHARGEABLE Ni-Cd BATTERY PACK IS NOT CHARGED. PLEASE CHARGE IT FOR 8 HOURS PRIOR TO USE)

- 1) Plug the wall pack battery charger into wall outlet.
- 2) Click the battery pack into the charger. Make certain the battery pack is secure in charger.
- 3) To disconnect, push the button of the charger (See Diagram 1) and simultaneously slide battery pack out.
- 4) You should charge the battery pack for 8 hours the first two times. Then subsequent charges will require minimum 4 hours.
- 5) After charging, the battery will be warm. This condition is normal for fully charged batteries.
- 6) If the speed of the car slows down suddenly, it is time to recharge.
- 7) After use, the battery pack will be hot! Wait at least 20 minutes until it cools before recharging. Recharging a warm or hot battery pack will greatly shorten the use life of the battery.

BATTERY PACK CARE

- If battery pack and connector are wet, thoroughly dry before charging.
- Battery pack can be charged for much longer periods without harm. However we recommend unplugging the battery pack if battery pack will not be used for several days.

CAUTIONS

- Do not charge battery pack that is hot, wet or shows leakage or corrosion.
- May explode if disposed of in fire!
- Do not disassemble the battery pack.


HOW TO INSTALL BATTERIES IN VEHICLE :

1. Push the ON/OFF switch to "OFF" position on the underside of the vehicle. (See Diagram 2)
2. Insert the 6.0 volt battery pack into battery compartment. (See Diagram 2)
3. Turn the locking latch to the anti-clockwise direction to lock the battery pack securely in place (See Diagram 3).


HOW TO INSTALL BATTERY IN TRANSMITTER :

1. Slide open the battery case cover at the back of the transmitter and put a 9-volt battery inside following the engraved signs. (See Diagram 4)
2. Replace the battery case cover.


NOTE : REMOVE BATTERY AFTER YOU HAVE FINISHED USING YOUR VEHICLE.

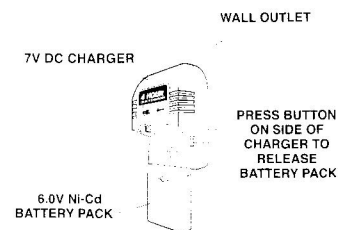


(DIAGRAM 1)

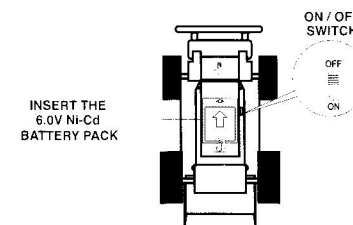


(DIAGRAM 2)

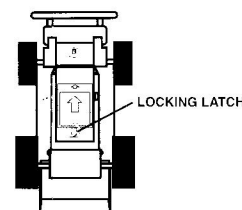


(DIAGRAM 3)

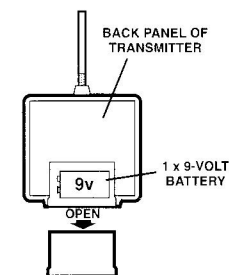

(DIAGRAM 4)

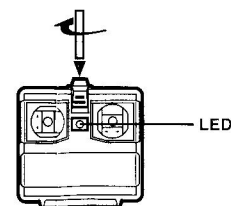

(DIAGRAM 5)

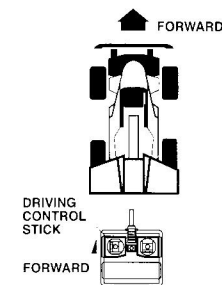

(DIAGRAM 6)

HOW TO PLAY :

- A. Screw the antenna on the top of the transmitter and extend to full length. (See Diagram 5)
B. Push the ON/OFF switch to the "ON" position of the vehicle. (See Diagram 2)

FORWARD RUNNING :

- C. Push the Driving Control Stick forward for forward running. (See Diagram 6)

REVERSE RUNNING :

- D. Pull the Driving Control Stick backward for reverse running. (See Diagram 7)

FRONT WHEELS STEERING ADJUSTMENT :

- E. If the vehicle does not run straight forward, adjust the lever for satisfactory alignment on the underside of the vehicle. (See Diagram 8)
F. If the vehicle runs towards left, turn "Steering Alignment Lever" towards "R".
G. If the vehicle runs towards right, turn "Steering Alignment Lever" towards "L".

STEERING OPERATION:

- H. Turn the Steering Control Stick to the left or right while pushing the Driving Control Stick forward at the same time, the vehicle will turn left or right and run forward. (See Diagram 9)
I. Turn the Steering Control Stick to the left or right while pulling the Driving Control Stick backward at the same time, the vehicle will turn left or right and run backward. (See Diagram 10)

STOP OPERATION:

- J. Release both Control Sticks, the vehicle will stop. (See Diagram 11)






PERFORMANCE TIPS:

- Don't drive in grass, sand or carpet.
- Don't go through water.
- Be sure to rest your vehicle for at least 30 minutes after every 15 minutes of operation.
- Make sure ON/OFF switch on your vehicle is on "OFF" when not in use.
- Don't bend antenna.
- Electrical, CB interference, mobile phones, air conditioning, elevators and steel girders in building will affect the operation of your vehicle.
- Don't leave the vehicle or transmitter near sources of heat or under direct sunlight for long periods of time.
- Remove the batteries from the vehicle and transmitter when not in use.

FCC NOTE : THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

ATTENTION PARENTS:

IT IS RECOMMENDED THAT THIS TOY AND ALL ACCESSORIES BE PERIODICALLY EXAMINED FOR POTENTIAL HAZARDS AND THAT ANY POTENTIALLY HAZARDOUS PARTS BE REPAIRED OR REPLACED.

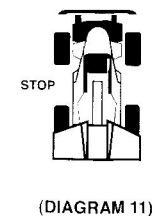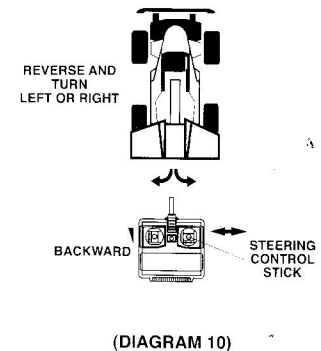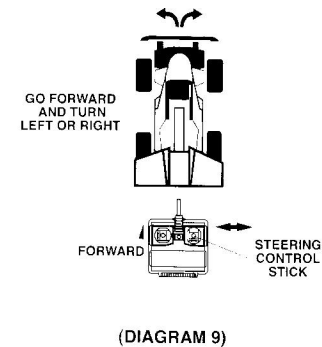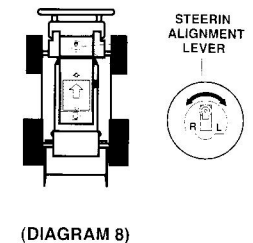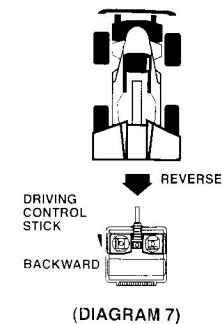

© 2004 SCIENTIFIC TOYS, LTD.
CHAI WAN, HONG KONG.
PRINTED IN CHINA
O.I.No. 2827