

Wireless Display
HDMI™ Extender

JVAW53



EN : Quick Installation Guide
ES : Guía De Instalación Rápida
FR : Guide D'installation Rapide
DE : Kurzanleitung Für Installation

NL : Snelle installatiegids
PT : Guia de instalação rápida
日本語 : クイックインストールガイド
繁体中文 : 快速安裝手冊

STOP!

If you have any issues with this product, please try the instructions below before returning the product.

TECHNICAL SUPPORT

Customer Service : **888-988-0488**Technical Support : **888-689-4088**Email : **service@j5create.com**Service Hours : **Mon. - Fri. 10:00 - 18:00 E.S.T**Live Chat : **www.j5create.com/livechat**Support Ticket : **tickets.j5create.com**

SOPORTE TÉCNICO

Número gratuito : +1-888-988-0488

Horario de atención :

Lun-Vier. 10:00-18:00 U.S.A-E.S.T

Email : service@j5create.com

SUPPORT TECHNIQUE

Numéro gratuit : +1-888-988-0488

Heures d'ouverture :

Lun. - Ven. 10:00 - 18:00 U.S.A-E.S.T

Email : service@j5create.com

TECHNISCHER SUPPORT

Kostenloser Anruf bei : +1-888-988-0488

 
Sprechstunden :

Mon. – Frei. 10.00-18.00 U.S.A-E.S.T

E-mail : service@j5create.com


English

1. Hardware Features Overview

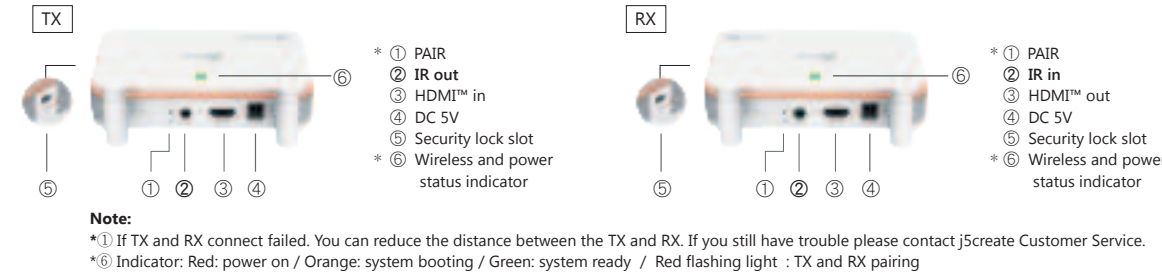


2. Hardware Installation

 - Step 1.** Plug in the power adapter and ensure the power led lights are on.
- Step 2. (Optional): IR remote control setting**
Connect the IR blaster cable into the IR out port.
- Step 3. (Optional)** Place the IR sensor on the source device, and mount the IR blaster head beside the device
- Step4.** Directly connect the HDMI™ cable from the Transmitter HDMI™ in connector to your HDMI™ video source device.
- Step 1.** Plug in the power adapter and ensure the power led lights are on.
- Step 2. (Optional): IR remote control setting**
Connect the IR extension cable (green connector) into the IR out port.
- Step 3. (Optional)** Place and mount the IR sensor in front of the device.
- Step 4.** Directly connect the HDMI™ cable from the Receiver HDMI™ out connector to your HDMI™ monitor.

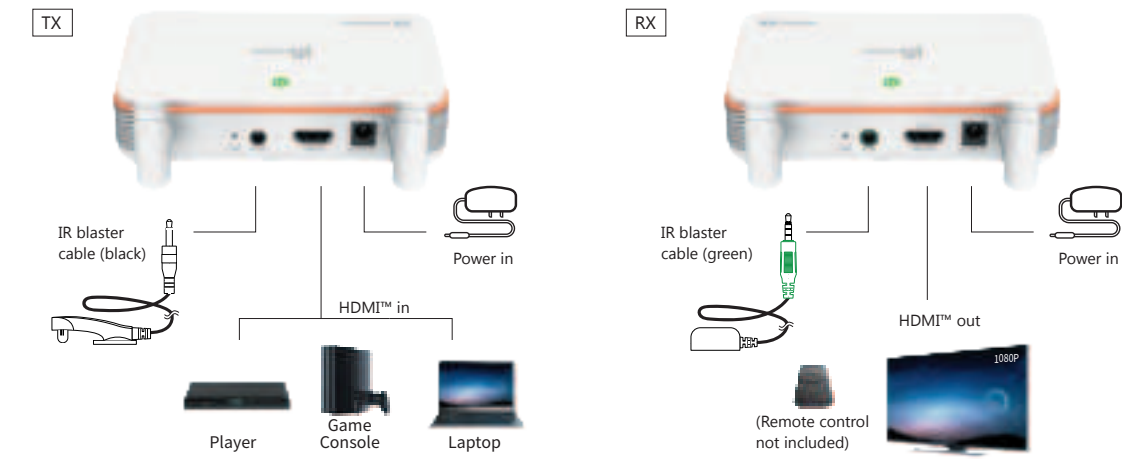


3. Receiver : OSD (on-screen display) status

 Startup screen : OSD show connecting.

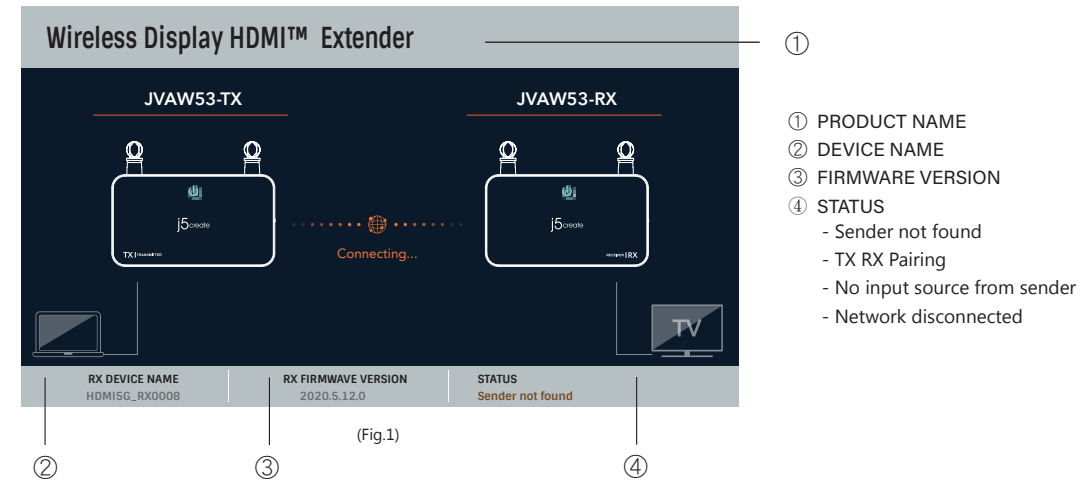


If connecting devices via HDMI™ port fails:

 Please check your HDMI™ cable or signal from your source device.

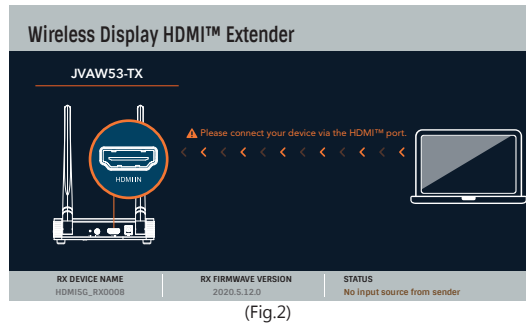


Network disconnected.

 You can reduce the distance between the TX and RX. If you still have trouble, please contact j5create Customer Service.

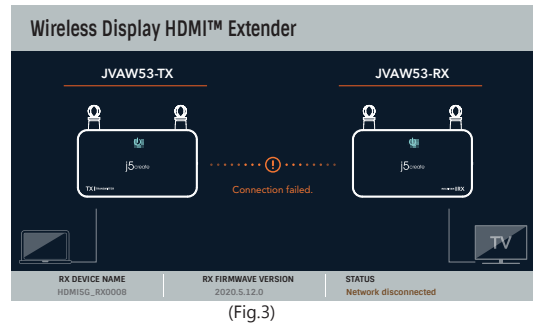


Español

 1. Información general de las características de hardware

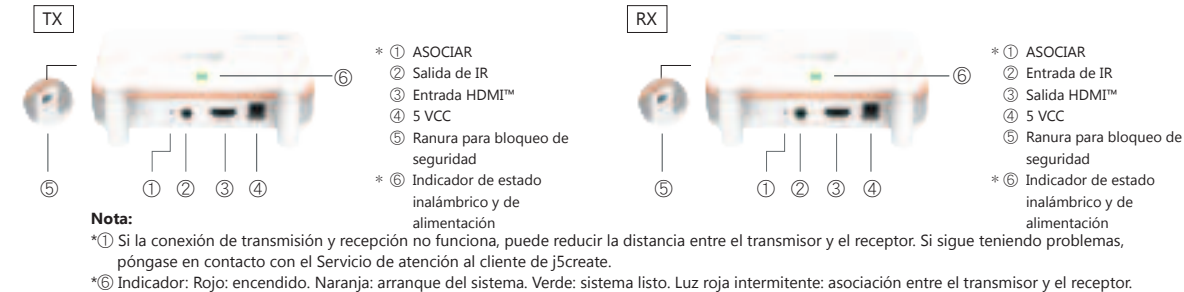


2. Instalación del hardware

 - Paso 1.** Enchufe el adaptador de alimentación y asegúrese de que las luces LED de alimentación estén encendidas.
- Paso 2. (Opcional): Configuración del mando a distancia de IR**
Conecte el cable del IR Blaster al puerto de salida de IR.
- Paso 3. (Opcional)** Coloque el sensor de IR en el dispositivo fuente y monte el cabezal del IR Blaster al lado del dispositivo
- Paso 4.** Conecte directamente el cable HDMI™ desde el conector de entrada HDMI™ del transmisor al dispositivo fuente de video HDMI™.
- Paso 1.** Enchufe el adaptador de alimentación y asegúrese de que las luces LED de alimentación estén encendidas.
- Paso 2. (Opcional): Configuración del mando a distancia de IR**
Conecte alargador (conector verde) de IR al puerto de salida IR.
- Paso 3. (Opcional)** Coloque y monte el sensor de infrarrojos delante del dispositivo.
- Paso 4.** Conecte directamente el cable HDMI™ desde el conector de salida HDMI™ del receptor al monitor HDMI™.

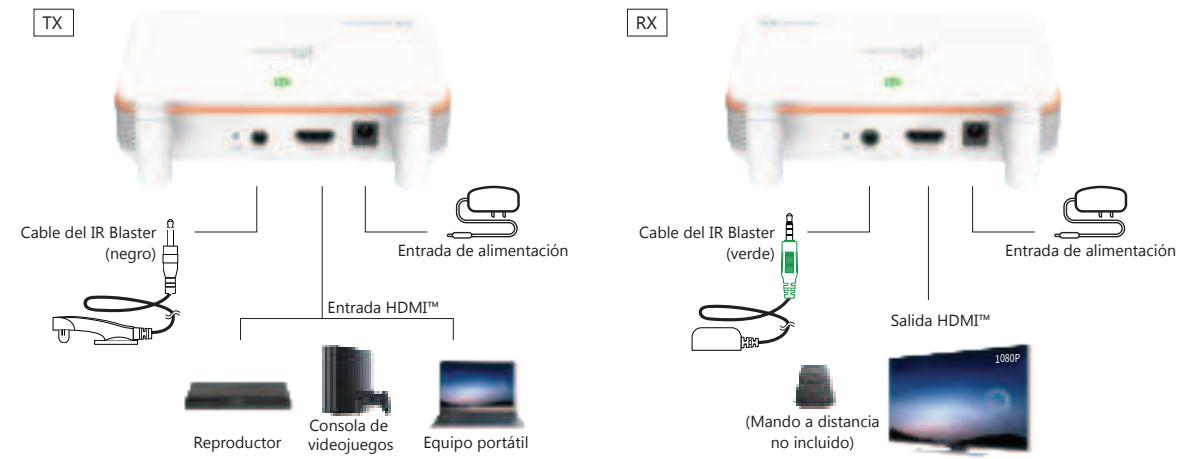


3. Receptor: Estado de los menús OSD (visualización en pantalla)

 Pantalla de inicio: la pantalla OSD muestra la conexión.

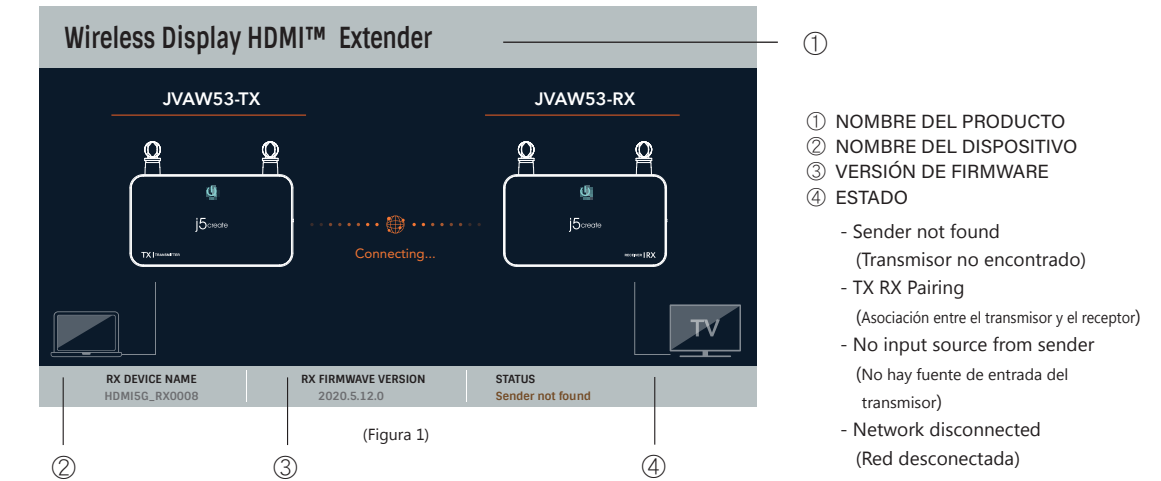


Si hay error en la conexión de dispositivos a través del puerto HDMI™:

 Compruebe el cable HDMI™ o la señal procedente del dispositivo fuente.

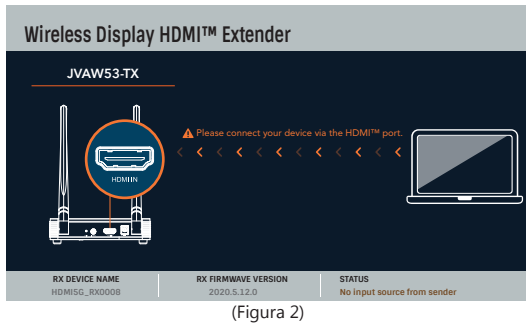


Red desconectada.

 Puede reducir la distancia entre el transmisor y el receptor. Si sigue teniendo problemas, póngase en contacto con el Servicio de atención al cliente de j5create.

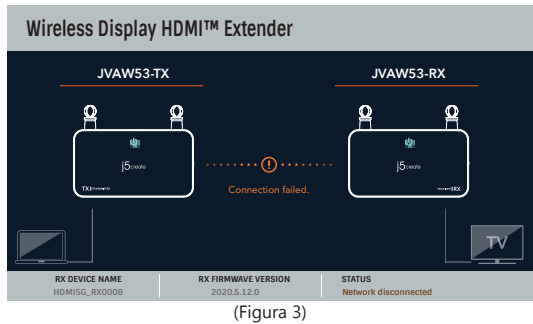


Français

 1. Aperçu des connecteurs du matériel

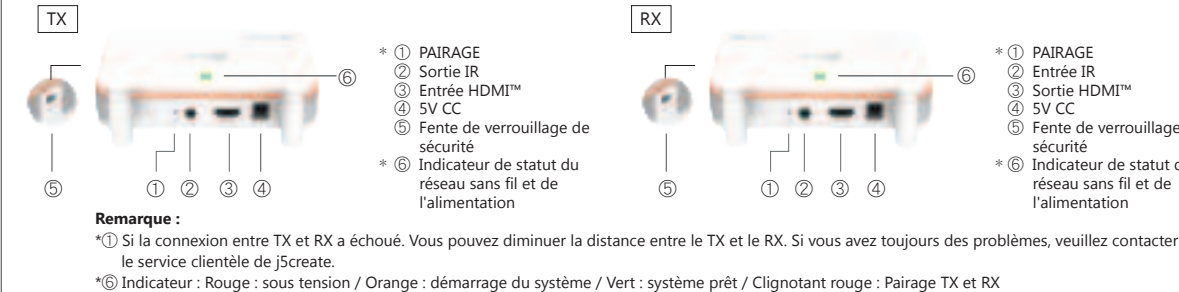


2. Installation matérielle

 - Étape 1.** Branchez l'adaptateur secteur et assurez-vous que les voyants lumineux sont allumés.
- Étape 2. (Optionnel) : Réglage de la télécommande IR**
Branchez le câble d'extension IR (connecteur vert) dans le port de sortie IR.
- Étape 3. (Optionnel)** Placez le capteur IR sur l'appareil source, et installez la tête du blaster IR à côté de l'appareil.
- Étape 4.** Connectez directement le câble HDMI™ du connecteur d'entrée HDMI™ de l'émetteur à votre appareil source vidéo HDMI™.
- Étape 1.** Branchez l'adaptateur secteur et assurez-vous que les voyants lumineux sont allumés.
- Étape 2. (Optionnel) : Réglage de la télécommande IR**
Branchez le câble d'extension IR (connecteur vert) dans le port de sortie IR.
- Étape 3. (Optionnel)** Placez et installez le capteur IR devant l'appareil.
- Étape 4.** Connectez directement le câble HDMI™ du connecteur de sortie HDMI™ du récepteur à votre moniteur HDMI™.

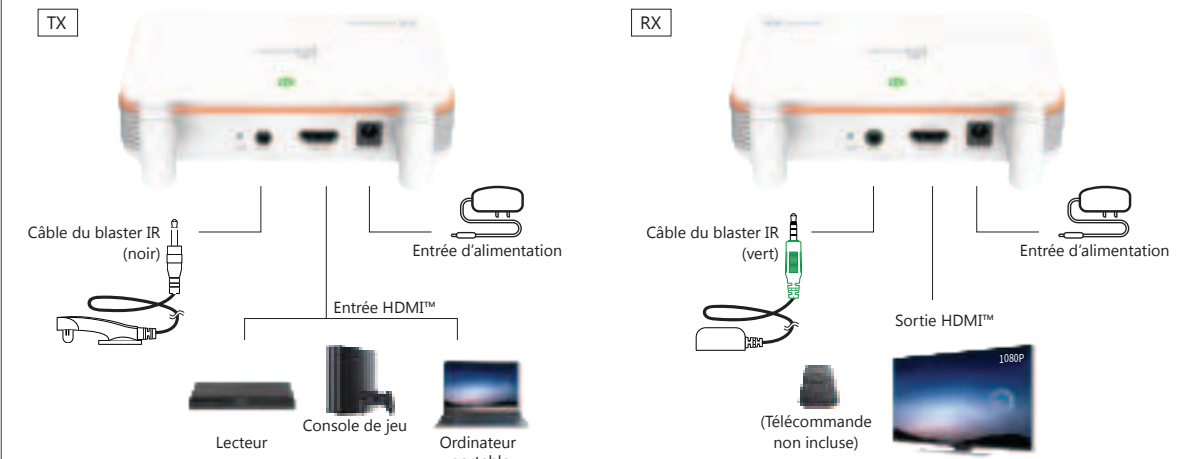


3. Récepteur : Statut de l'OSD (affichage à l'écran)

 Écran de démarrage : L'OSD indique la connexion.

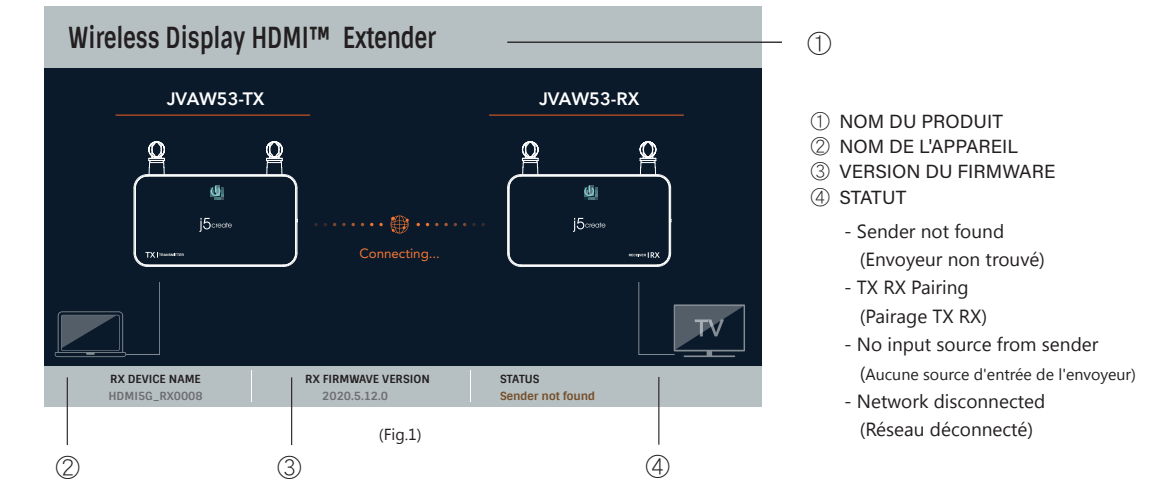


Si la connexion des appareils via le port HDMI™ échoue :

 Veuillez vérifier votre câble HDMI™ ou le signal provenant de l'appareil source.

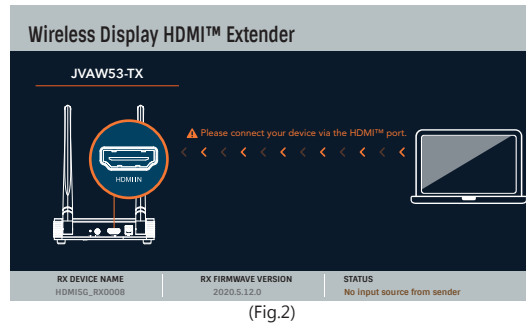


Réseau déconnecté.

 Vous pouvez diminuer la distance entre le TX et le RX. Si vous avez toujours des problèmes, veuillez contacter le service clientèle de j5create.

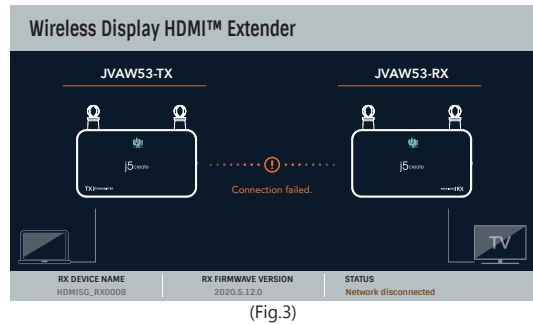


Deutsch

 1. Hardwarefunktionen im Überblick

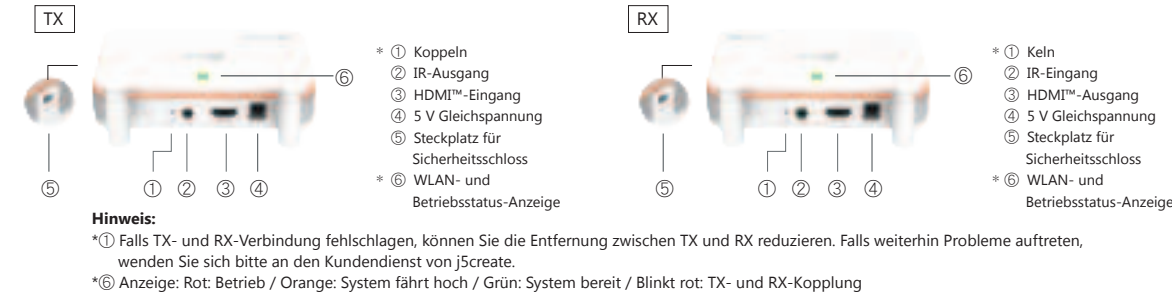


2. Hardwareinstallation

 - Schritt 1.** Schließen Sie das Netzteil an und stellen Sie sicher, dass die LED-Betriebsanzeigen leuchten.
- Schritt 2. (Optional): IR-Fernbedienung einrichten**
Verbinden Sie das IR-Verlängerungskabel (grüner Anschluss) mit dem IR-Ausgang.
- Schritt 3. (Optional)** Platzieren Sie den IR-Sensor am Eingangsgerät und montieren Sie den IR-Blaster-Kopf neben dem Gerät.
- Schritt 4.** Verbinden Sie das HDMI™-Kabel vom HDMI™-Eingang des Senders direkt mit Ihrem HDMI™-Videoeingangsgerät.
- Schritt 1.** Schließen Sie das Netzteil an und stellen Sie sicher, dass die LED-Betriebsanzeigen leuchten.
- Schritt 2. (Optional): IR-Fernbedienung einrichten**
Verbinden Sie das IR-Verlängerungskabel (grüner Anschluss) mit dem IR-Ausgang.
- Schritt 3. (Optional)** Platzieren und montieren Sie den IR-Sensor vor dem Gerät.
- Schritt 4.** Verbinden Sie das HDMI™-Kabel vom HDMI™-Eingang des Empfängers direkt mit Ihrem HDMI™-Monitor.

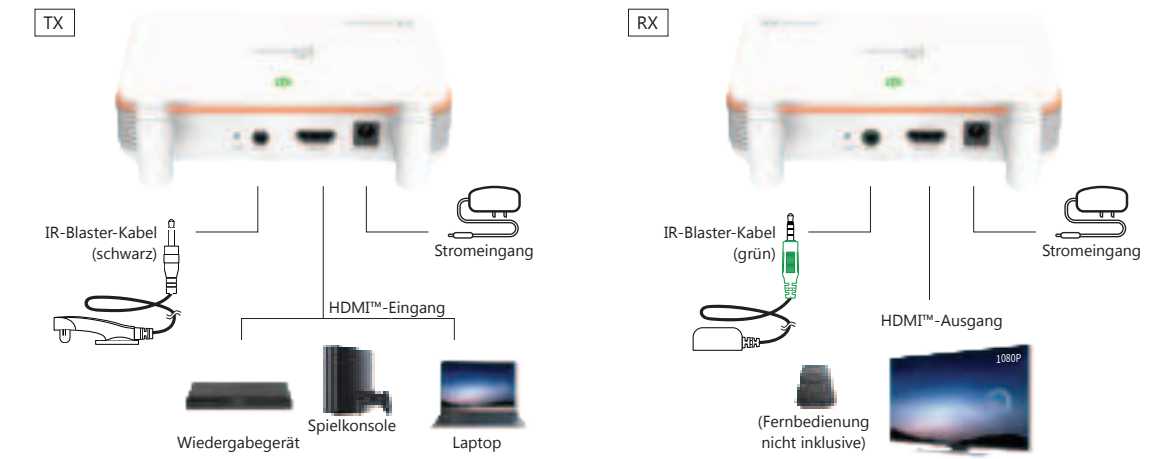


3. Empfänger: Status der Bildschirmanzeige

 Startbildschirm: Verbindungsanzeige.

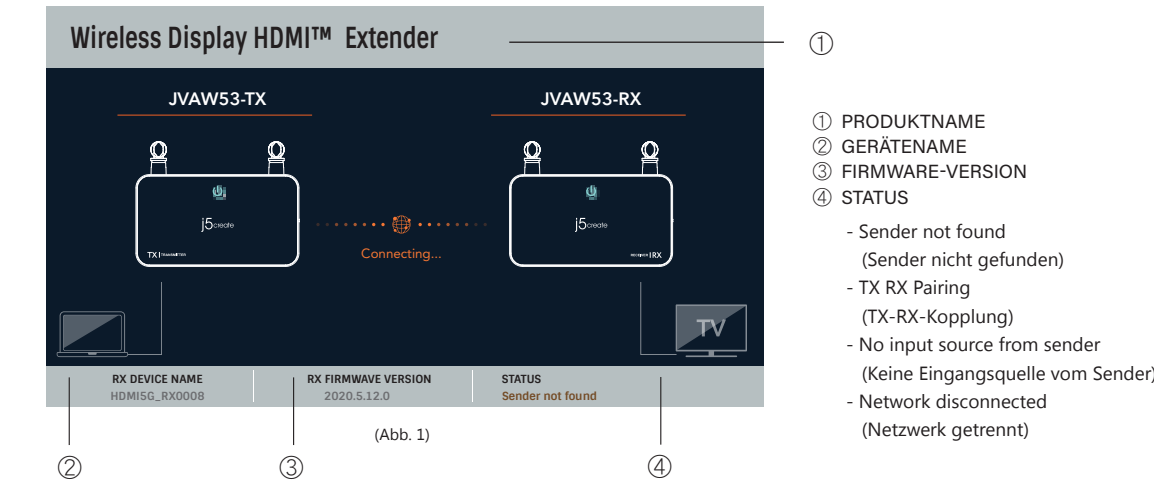


Falls die Verbindung von Geräten per HDMI™-Anschluss fehlschlägt:

 Bitte prüfen Sie Ihr HDMI™-Kabel oder Signal von Ihrem Eingangsgerät.

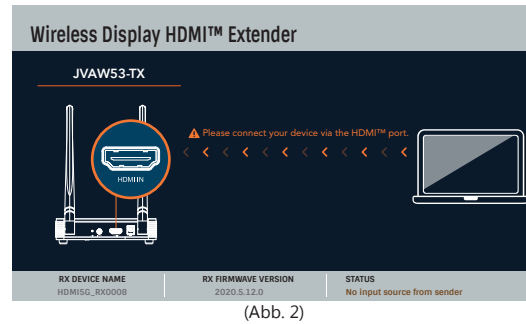


Netzwerk getrennt.

 Sie können die Entfernung zwischen TX und RX reduzieren. Falls weiterhin Probleme auftreten, wenden Sie sich bitte an den Kundendienst von j5create.

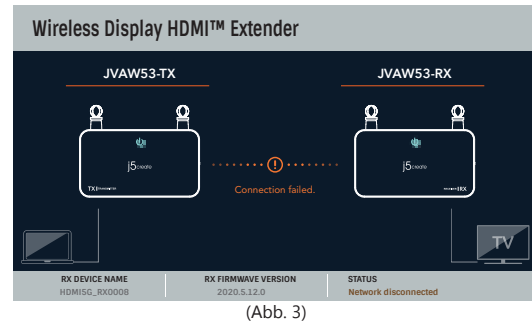

Nederlands

 1. Overzicht van hardwarefuncties

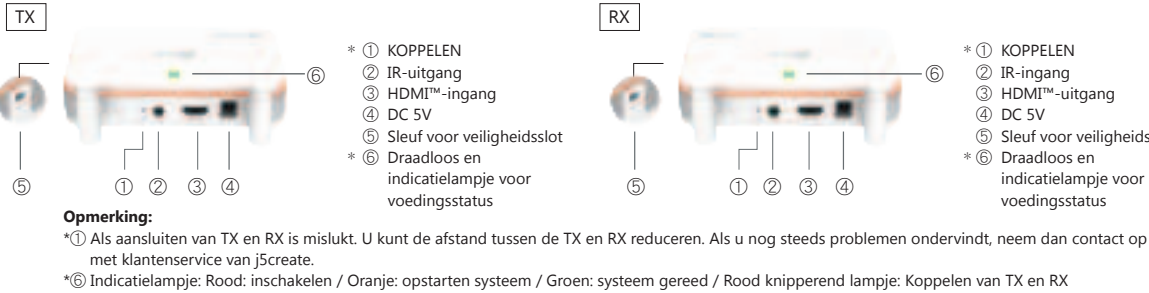

2. Hardware-installatie

Stap 1. Sluit de voedingsadapter aan en zorg ervoor dat de LED-voeding-slampjes branden.

Stap 2. (Optioneel): Instelling IR-afstandsbediening

Sluit de IR-blasterkabel aan op de IR-uitgang.

Stap 3. (Optioneel) Plaats de IR-sensor op het bronapparaat, en monteer de IR-blasterkop naast het apparaat

Stap 4. Sluit de HDMI™-kabel direct aan van de HDMI™-ingang van de zender op uw HDMI™-videobronapparaat.


Stap 1. Sluit de voedingsadapter aan en zorg ervoor dat de LED-voeding-slampjes branden.

Stap 2. (Optioneel): Instelling IR-afstandsbediening

Sluit de IR-verlengkabel (groene connector) aan op de IR-uitgang.


Stap 3. (Optioneel) Plaats de IR-sensor op het apparaat.

 Stap 4. Sluit de HDMI™-kabel direct aan van de HDMI™-uitgang van de ontvanger op uw HDMI™-monitor.

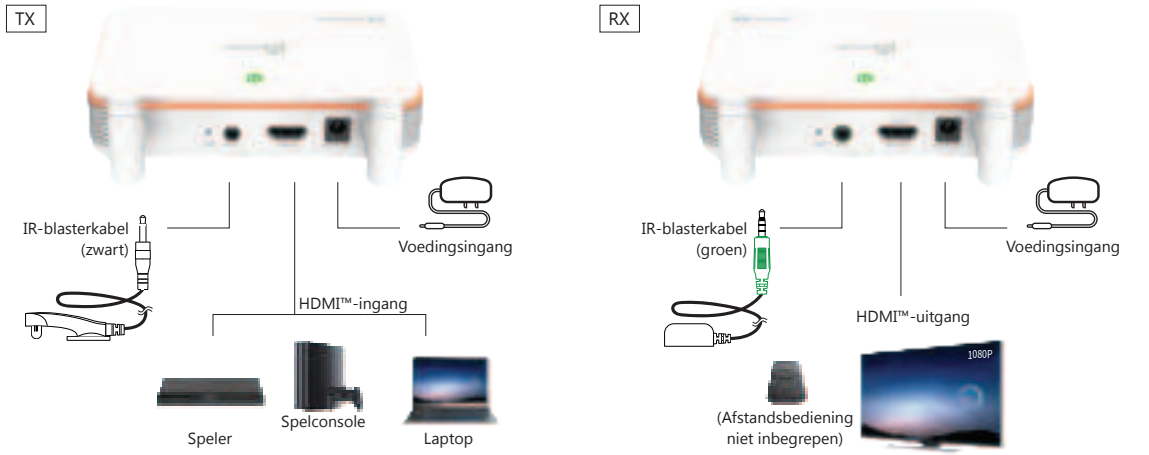


3. Ontvanger. OSD-status

 Opstartscherm: OSD toont verbinden.

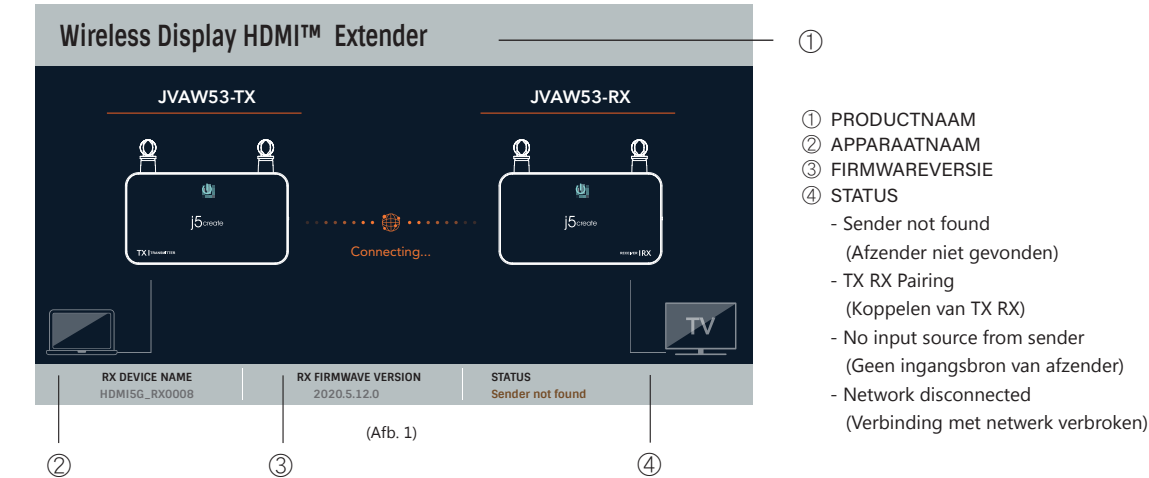


Indien het aansluiten van apparaten via de HDMI™-poort mislukt:

 Controleer uw HDMI™-kabel of het signaal van uw bronapparaat.

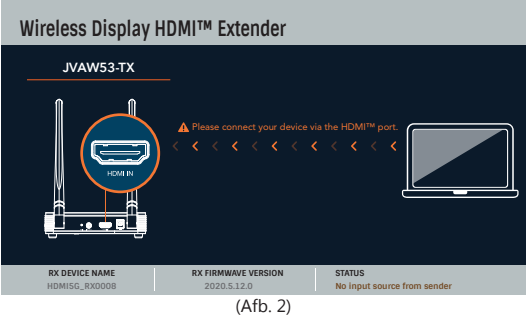


Verbinding met netwerk verbroken.

 U kunt de afstand tussen de TX en RX reduceren. Als u nog steeds problemen ondervindt, neem dan contact op met klantenservice van J5create.

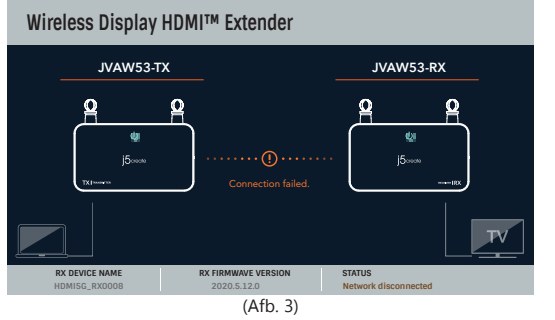

Português

 1. Especificações de hardware

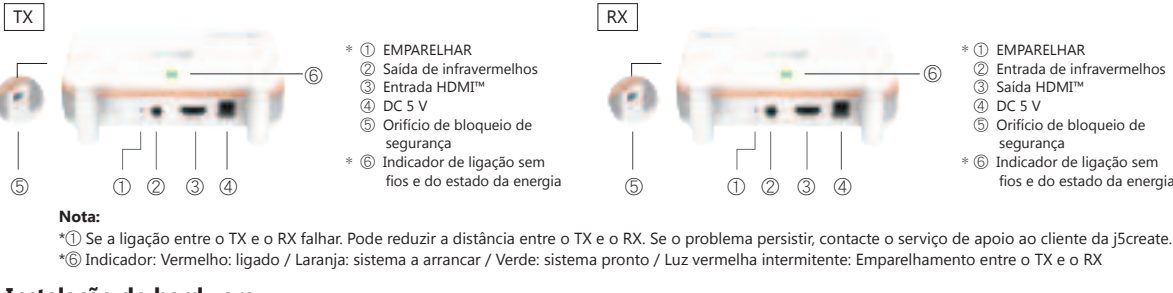

2. Instalação do hardware

Passo 1. Ligue o transformador e certifique-se de que as luzes led de energia estão acesas.

Passo 2. (Opcional): Configuração do controlo remoto por infravermelhos

Ligue o cabo transmissor de infravermelhos na porta de saída de infravermelhos.

Passo 3. (Opcional) Coloque o sensor de infravermelhos no dispositivo e instale a cabeça do transmissor de infravermelhos ao lado do dispositivo

Passo 4. Ligue diretamente o cabo HDMI™ do conector de entrada do transmissor HDMI™ ao seu dispositivo de fonte de vídeo HDMI™.

Passo 1. Ligue o transformador e certifique-se de que as luzes led de energia estão acesas.

Passo 2. (Opcional): Configuração do controlo remoto por infravermelhos

Ligue o cabo de extensão de infravermelhos (conector verde) na porta de saída de infravermelhos.


Passo 3. (Opcional) Coloque o sensor de infravermelhos à frente do dispositivo.

Passo 4. Ligue diretamente o cabo HDMI™ do conector de saída do recetor HDMI™ ao seu monitor HDMI™.




3. Recetor: Estado do OSD (apresentado no ecrã)

 Ecrã inicial: O OSD exibe a ligação.

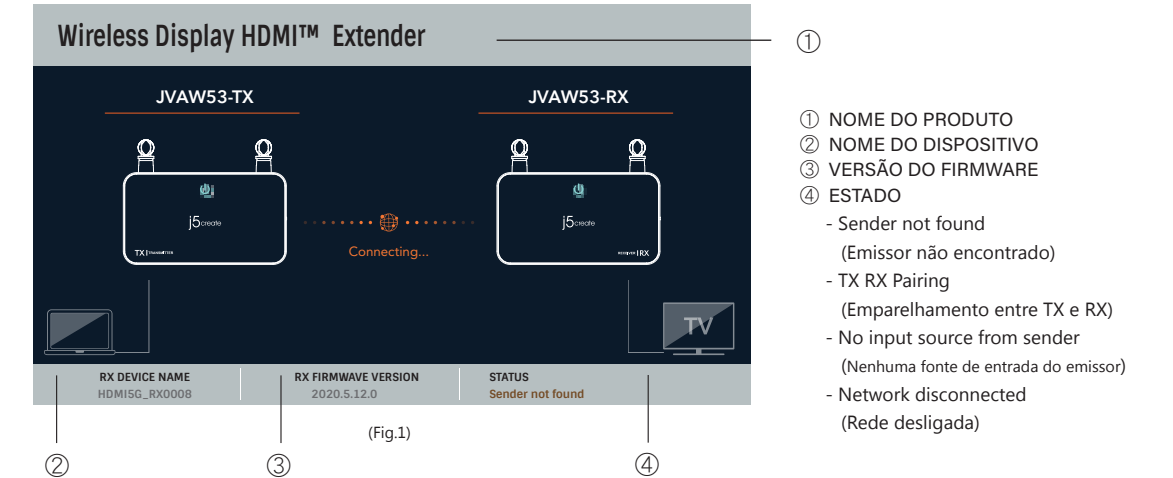


Se a ligação dos dispositivos através da porta HDMI™ falhar:

 Verifique o cabo HDMI™ ou o sinal do seu dispositivo.

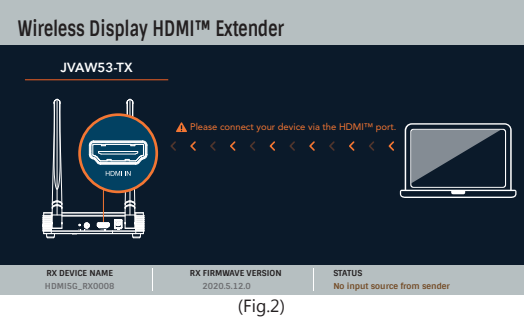


Rede desligada.

 Pode reduzir a distância entre o TX e o RX. Se o problema persistir, contacte o serviço de apoio ao cliente da J5create.

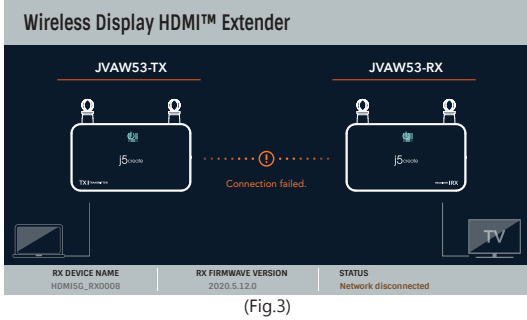

日本語

 1. ハードウェア機能の概要

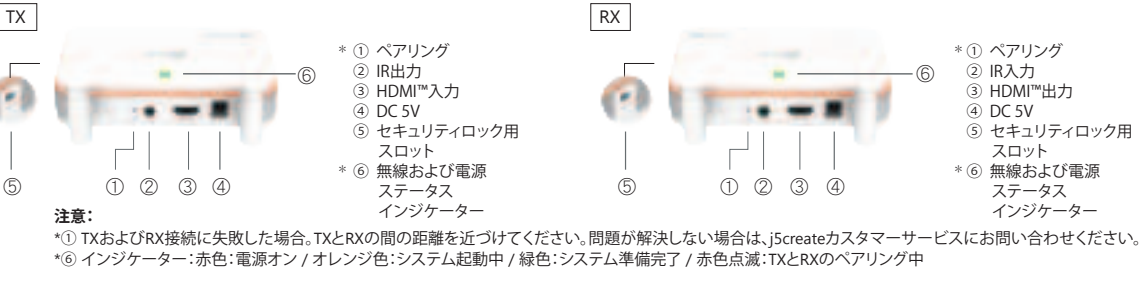

2. ハードウェアの設置

ステップ1: 電源アダプターを接続し、電源LEDライトが点灯していることを確認します。

ステップ2: (オプション): IRリモコンの設定

IR出力ポートにIR延長ケーブル(緑色のコネクタ)を接続します。

ステップ3: (オプション) ソースデバイスの上にIRセンサーを配置し、デバイスの横にIRブラスターヘッドを取り付けます

ステップ4: HDMI™ビデオソースデバイスに送信機HDMI™のHDMI™ケーブルを接続します。


ステップ1: 電源アダプターを接続し、電源LEDライトが点灯していることを確認します。

ステップ2: (オプション): IRリモコンの設定

IR出力ポートにIR延長ケーブル(緑色のコネクタ)を接続します。


ステップ3: (オプション) デバイスの前面にIRセンサーを配置して取り付けます。

 ステップ4: HDMI™モニターに送信機HDMI™出力コネクタのHDMI™ケーブルを接続します。

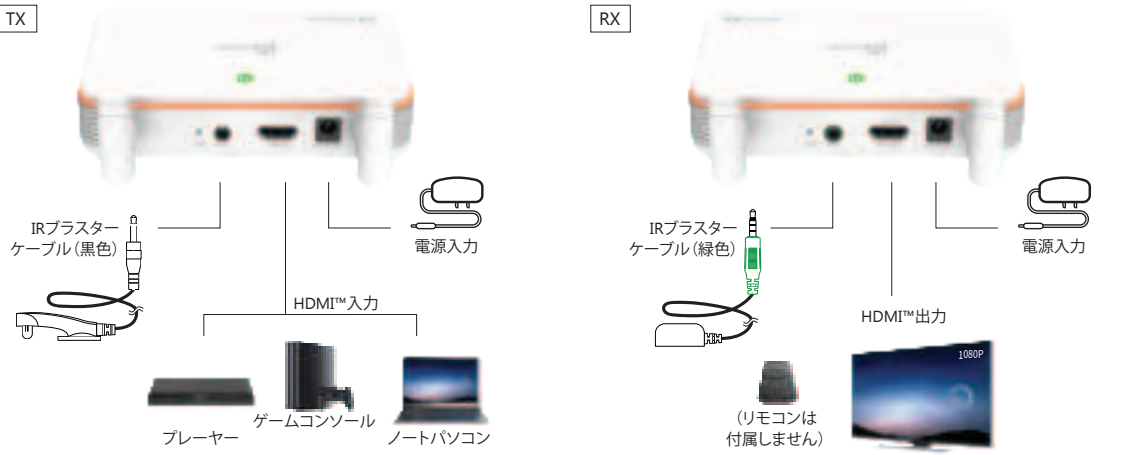


3. 受信機: OSD (オンスクリーンディスプレイ) のステータス

 起動画面: OSDに接続中であることが表示されます。

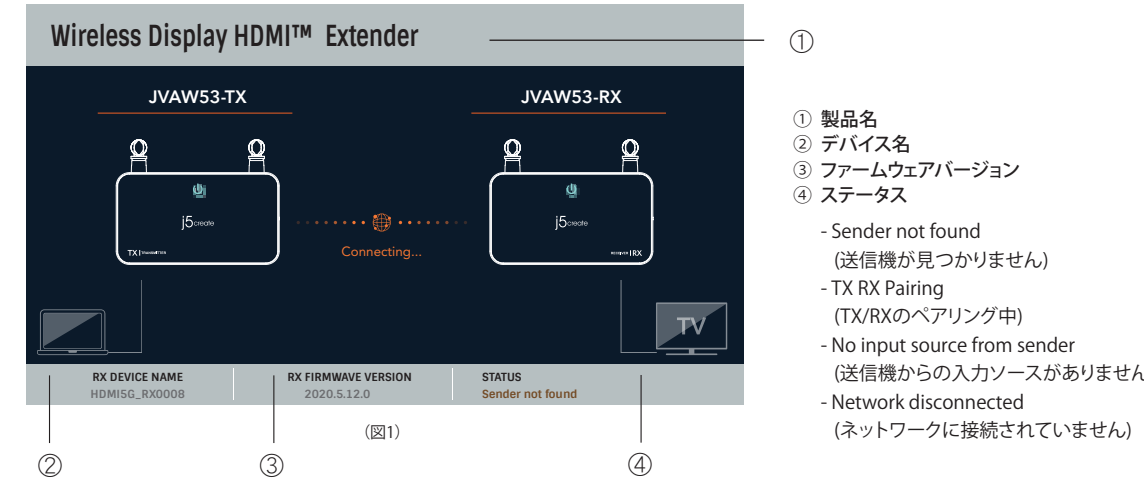


HDMI™ポート経由でのデバイス接続に失敗した場合:

 TXとRXの間の距離を近づけてください。問題が解決しない場合は、J5createカスタマーサービスにお問い合わせください。

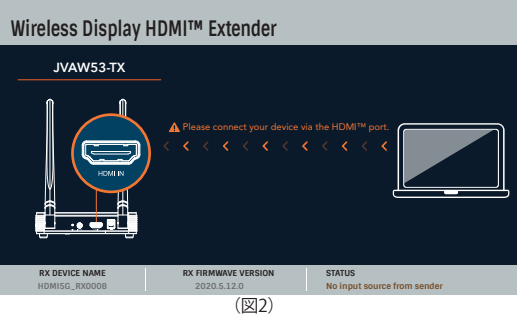

ネットワークに接続されていません。

 TXとRXの間の距離を近づけてください。問題が解決しない場合は、J5createカスタマーサービスにお問い合わせください。

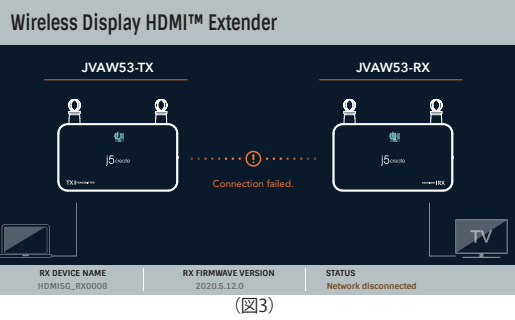

繁体中文

1. 硬體功能概述



2. 硬體安裝

步驟1. 插入電源變壓器，並確保電源指示燈點亮。

步驟2. (選用) 紅外線遙控器設置: 將紅外發射器電纜連接到紅外線訊號輸出孔。

步驟3. (選用) 將紅外線訊號發射器放置在HDMI™輸入設備旁。


步驟4. 將HDMI™線直接插入HDMI™影像來源設備的接口。

步驟1. 插入電源變壓器，並確保電源指示燈點亮。

步驟2. (選用): 紅外線遙控器設置: 將紅外延長電纜(綠色連接器)連接到紅外線訊號輸出孔。


步驟3. (選用) 將紅外線訊號接收器放置在HDMI™輸出設備旁。

 步驟4. 從接收器HDMI™孔直接連接到HDMI™顯示器的接口。

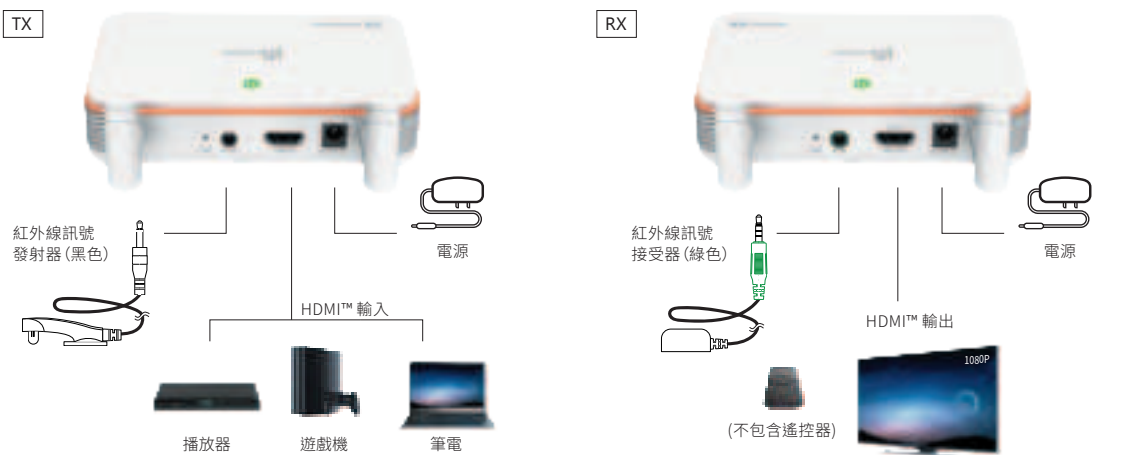

3. 接收器: OSD (螢幕顯示) 狀態

 開機畫面: OSD顯示正在連接。


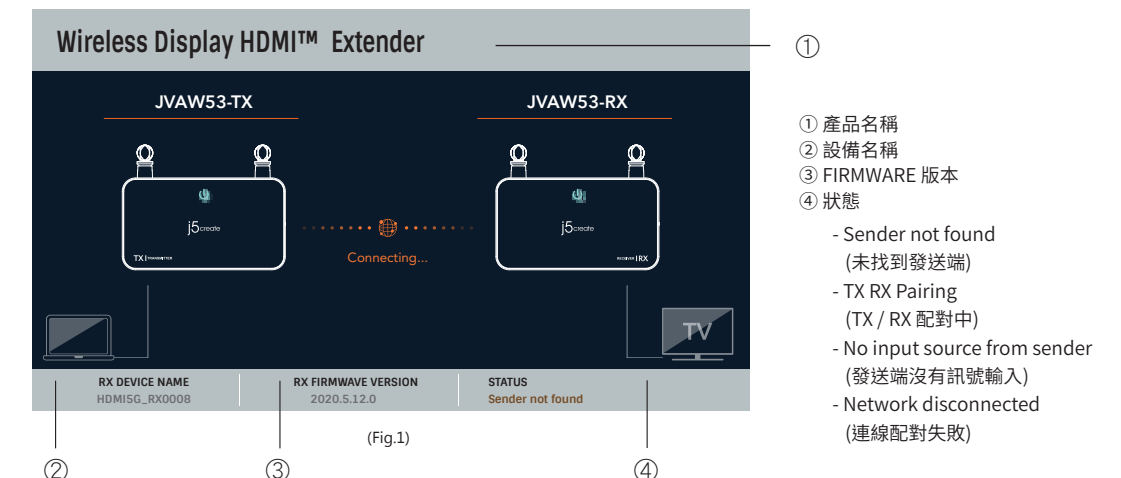


如果HDMI™連接設備失敗:

請檢查您的HDMI™電纜或來源設備的信號。

連線配對失敗:

  您可以縮短TX和RX之間的距離。如果仍然有問題，請聯繫J5create客戶服務。

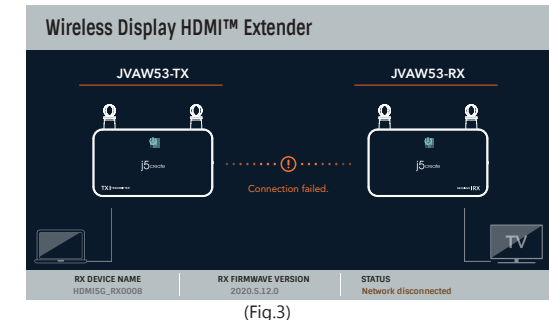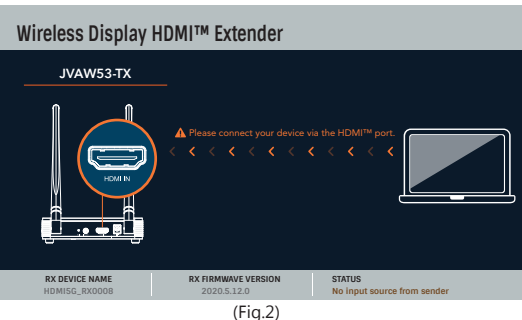

The User Manual

Contains detailed instructions and a troubleshooting section, many common issues can be easily resolved by reading the user manual.

Online Support

Please visit the J5create website (www.j5create.com) to find the latest software for your device. If you are still experiencing issues, you can submit a trouble ticket through our J5 web support. Your ticket will be responded to within 24 hours.

Telephone Support

Please call on +1-888-689-8888 and one of our support technicians will be very happy to assist you. We stand behind our products and it is our goal to provide you with world class support.

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

You are cautioned that any changes or modifications to this product not explicitly approved by the manufacturer in writing could void the user's authority to operate the equipment and any assurances of Safety or Performance, and could result in violation of Part 15 of the FCC Rules.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

- This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body.

FCC-Erklärung zur Strahlenbelastung

Dieses Gerät entspricht den FCC-Grenzwerten für Strahlung unkontrollierter Umgebung.

- Dieses Gerät sollte so installiert und betrieben werden, dass es eine Mindestentfernung von 20 cm zwischen dem Kühler und Ihrem Körper.

Limited Warranty

J5create offers a limited 1-year warranty. User's wear & tear damage is not included. The user shall call or email J5create customer service with the defect information of the product and obtain a return authorization number. Users are responsible for one-way return freight cost and we will take care of one-way freight back. In order to obtain a return authorization number, users should have the following information handy when calling or emailing the service team:

- (i) a copy of the original purchase invoice to verify your warranty
- (ii) a product serial number
- (iii) a description of the problem
- (iv) customer's name, address, and telephone number

J5create does not warrant that the operation of the product will be uninterrupted or error-free. J5create is not responsible for damage arising from failure to follow instructions relating to the product's use. This warranty does not apply to: (a) consumable parts, unless damage has occurred due to a defect in materials or workmanship; (b) cosmetic damage, including but not limited to scratches, dents, and broken plastic on ports; (c) damage caused by use with non-J5create products; (d) damage caused by natural disasters; (e) damage caused by human misuse (lost, accident, abuse, misuse or other external causes); (f) damage caused by operating the product outside the permitted or intended uses described by J5create; (g) damage caused by service (including upgrades and expansions) performed by anyone who is not a representative of J5create or a J5create Authorized Service Provider; (h) a product or part that has been modified to alter functionality or capability without the written permission of J5create; or (i) if any J5create serial number on the product has been removed or defaced. If such a situation occurs, J5create will calculate the cost of materials and repair for your reference. This warranty is given by J5create in lieu of any other warranties expressed or implied.

Limitation of Warranty

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE (OR BY COUNTRY OR PROVINCE). OTHER THAN AS PERMITTED BY LAW, J5create DOES NOT EXCLUDE, LIMIT OR SUPSEND OTHER RIGHTS YOU MAY HAVE, INCLUDING THOSE THAT MAY ARISE FROM THE NONCONFORMITY OF A SALES CONTRACT, FOR A FULL UNDERSTANDING OF YOUR RIGHTS YOU SHOULD CONSULT THE LAWS OF YOUR COUNTRY, PROVINCE OR STATE. TO THE EXTENT NOT PROHIBITED BY LAW IN YOUR STATE, PROVINCE, JURISDICTION OR COUNTRY, THIS WARRANTY AND THE REMEDIES SET FORTH ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED.

J5create's RESPONSIBILITY FOR MALFUNCTIONS AND DEFECTS IN HARDWARE AND/OR SOFTWARE IS LIMITED TO REPAIR OR REPLACEMENT AS SET FORTH IN THIS WARRANTY. J5create's LIABILITY DOES NOT EXTEND BEYOND THE REMEDIES PROVIDED FOR IN THIS LIMITED WARRANTY AND J5create DOES NOT ACCEPT LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR THIRD-PARTY CLAIMS AGAINST YOU FOR DAMAGES, FOR PRODUCTS NOT BEING AVAILABLE FOR USE, OR FOR LOST OR DAMAGED DATA OR SOFTWARE. J5create DOES NOT WARRANT THAT THE OPERATION OF ANY J5create PRODUCT WILL BE UNINTERRUPTED OR ERROR FREE.

J5create's LIABILITY IN ANY SITUATION WILL BE NO MORE THAN THE AMOUNT YOU PAID FOR THE SPECIFIC PRODUCT THAT IS THE SUBJECT OF A CLAIM. THIS IS THE MAXIMUM AMOUNT FOR WHICH WE ARE RESPONSIBLE. EXCEPT FOR THE EXPRESS WARRANTIES CONTAINED IN THIS WARRANTY AND TO THE EXTENT NOT PROHIBITED BY LAW, J5create DISCLAIMS ALL OTHER WARRANTIES AND CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, INCLUDING WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY, MERCHANTABLE QUALITY AND FITNESS FOR A PARTICULAR PURPOSE AND WARRANTIES AND CONDITIONS AGAINST HIDDEN OR LATENT DEFECTS. SOME STATES, PROVINCES, JURISDICTIONS OR COUNTRIES DO NOT ALLOW DISCLAIMERS OF IMPLIED WARRANTIES AND CONDITIONS, SO THIS DISCLAIMER MAY NOT APPLY TO YOU.

TO THE EXTENT SUCH WARRANTIES AND CONDITIONS CANNOT BE DISCLAIMED UNDER THE LAWS OF THE UNITED STATES, CANADA (AND ITS PROVINCES) OR OTHERWISE, J5create LIMITS THE DURATION AND REMEDIES OF SUCH WARRANTIES AND CONDITIONS TO THE DURATION OF THIS EXPRESS LIMITED WARRANTY AND, AT J5create's OPTION, REPAIR OR REPLACEMENT SERVICES. SOME STATES, PROVINCES, JURISDICTIONS OR COUNTRIES MAY NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY OR CONDITION MAY LAST, SO THE LIMITATION DESCRIBED ABOVE MAY NOT APPLY TO YOU.

NO WARRANTIES OR CONDITIONS, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE LIMITED WARRANTY PERIOD HAS EXPIRED. SOME STATES, PROVINCES, JURISDICTIONS OR COUNTRIES DO NOT ALLOW DISCLAIMERS ON HOW LONG AN IMPLIED WARRANTY OR CONDITION LASTS, SO THIS LIMITATION MAY NOT APPLY TO YOU.

WARRANTY SUPPORT ONLY APPLIES WHEN THE COVERED PRODUCT IS LOCATED WITHIN THE COUNTRY IN WHICH J5create ORIGINALLY SOLD THE SYSTEM AS REFLECTED IN J5create'S RECORDS. IF YOU NEED SUPPORT FOR THE PRODUCT OUTSIDE OF THE COUNTRY OF ORIGIN (FOR EXAMPLE, WHILE TRAVELING, OR IF THE SYSTEM HAS BEEN RELOCATED TO A NEW COUNTRY), THEN J5create MAY OFFER YOU OTHER SUPPORT OPTIONS FOR AN ADDITIONAL CHARGE.

For more information please visit our website at <http://www.j5create.com> Copyright© 2020 J5create. All rights reserved. All trade names are registered trademarks of their respective owners. Features and specifications are subject to change without notice. Product may not be exactly as shown in the diagrams.

HDMI is a trademark of HDMI Licensing Administrator, Inc., its affiliates or its respective owners, registered or used in many jurisdictions worldwide. Bluetooth is a trademark of Bluetooth SIG, Inc., its affiliates or its respective owners, registered or used in many jurisdictions worldwide. Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and/or names or their products and are the property of their respective owners. All company, product and service names used are for identification purposes only. Use of these names, logos, and brands does not imply endorsement. We disclaim any interest in the marks of the others.

建檔日期：2020-04-30

修改日期：2020-05-20

製作版本：V1- 版

料 號：5EDVAW53100101

客戶名稱：j5create

產品名稱：JVAW53

需求內容：QIG

尺 寸：756X297mm

材 質：70p模造紙，
黑白雙面印刷

成型尺寸：84x148.5mm

W摺後對摺