

Setup Guide

Panic Button



PDF
Adobe



In-App Setup

1. Disarm your Ring Alarm.
2. Download and open Ring app. Select Set Up a Device, then tap Security, tap Panic Buttons, and select Panic Button (2nd Gen).
3. Scan QR code with Ring app. Use the one on your device, or the one on the box, to continue setup.

Installation

Once your Panic Button is set up in the Ring app, it's ready to place on a table or shelf. It can also be mounted to a wall, or discreetly under a desk or table.

Tape Mounting. Clean the mounting location, then peel the film off of the mounting tape.

Press the Panic Button firmly to the mounting location and hold for 20 seconds to make sure the tape is securely attached.




Screw Mounting. You'll need two flat head No. 4 x 5/8" (3mm x 15mm) screws and two No. 4 x 3/4" (5mm x 19mm) wall anchors.

Battery Replacement. To change the batteries, first disarm your Ring Alarm.

Twist the bottom cover to unlock and pull to separate, then set it aside.

Dislodge and remove both batteries. Insert two new CR2032 batteries, **making sure the positive (+) side is visible.**

Replace the back cover and twist to secure it.

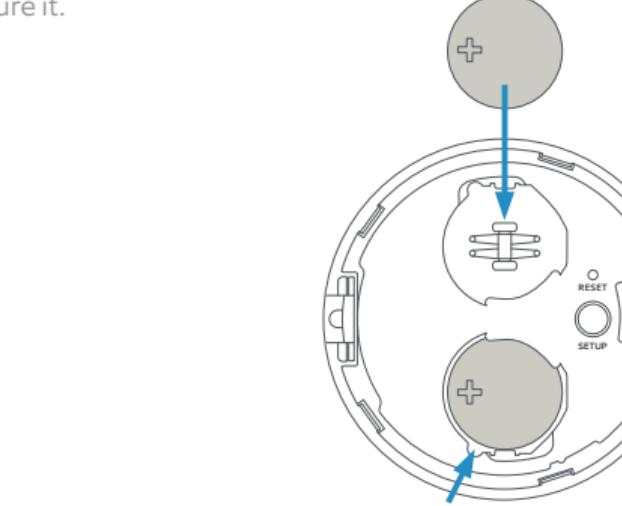

ENGLISH**IMPORTANT PRODUCT INFORMATION**

! SAFETY INFORMATION: FAILURE TO FOLLOW THESE SAFETY INSTRUCTIONS COULD RESULT IN FIRE, ELECTRIC SHOCK, OR OTHER INJURY OR DAMAGE.

WARNING: Your device should only be used in accordance with the specific instructions for use and intended purpose of the device. Using your device in any way other than its intended purpose could cause injury to yourself or others, and/or damage to the device or property.

WATCH FOR SMALL PARTS! Your device and accessories may present a choking hazard to small children. Keep them out of reach of small children.

CAUTION: The device is not waterproof and as such should not be submerged in water, doing so could cause injury to yourself, others and/or damage to the device.

CAUTION: To reduce the risk of falling, take extra caution when using a ladder or similar equipment to mount the product.

! BATTERY SAFETY

No obvious symptoms: Unfortunately, it is not obvious when a button or coin battery is stuck in a child's oesophagus (food pipe). There are no specific symptoms associated with this. The child might:

- cough, gag or drool a lot;
- appear to have a stomach upset or a virus;
- be sick;
- point to their throat or stomach;
- have a pain in their abdomen, chest or throat;
- be tired or lethargic;
- be quieter or more clingy than usual or otherwise "not themselves";
- lose their appetite or have a reduced appetite; and
- not want to eat solid food / be unable to eat solid food.

The lithium coin batteries accompanying this device cannot be recharged. Do not open, disassemble, bend, deform, puncture, or shred the battery. Do not modify, attempt to insert foreign objects into the battery or immerse or expose to water or other liquids. Do not expose the battery to fire, explosion, high temperature or other hazard. Fires involving lithium batteries can usually be controlled with flooding with water, except in confined spaces where a smothering agent should be used.

If dropped and you suspect damage, take steps to prevent any ingestion or direct contact of fluids and any other materials from the battery with skin or clothes. If a battery leaks, remove all batteries and recycle or dispose of them in accordance with battery manufacturer's recommendations. If fluid or other material from the battery comes into contact with skin or clothes, flush skin or

clothes with water immediately. An open battery should never be exposed to water, as fire or explosion may result from exposure to water.

CAUTION: Danger of fire or explosion if battery is incorrectly replaced. Insert the batteries in the proper direction as indicated by the negative (-) markings in battery compartment together with the installation instructions. Always replace with two new CR2032 3V lithium coin batteries specified for this product. Only use CR2032 3V lithium coin batteries. Do not use other coin or button batteries, including but not limited to rechargeable coin batteries.

Do not mix used and new batteries or batteries of different types (for example, one Lithium and one alkaline battery). Always remove old, weak, or worn-out batteries promptly and recycle or dispose of them in accordance with applicable laws and regulations.

! BATTERY WARNING

KEEP OUT OF REACH OF CHILDREN
Swallowing can lead to chemical burns, perforation of soft tissue, and death. Severe burns can occur within 2 hours of ingestion. Seek medical attention immediately.

**RECYCLING YOUR DEVICE PROPERLY**

In some areas, the disposal of certain electronic devices is regulated. Make sure you dispose of, or recycle, your device in accordance with your local laws and regulations. For information about recycling your device, go to amazon.com/devicesupport.

The device meets the FCC Radio Frequency Emission Guidelines. Information on the product is on file with the FCC and can be found by inputting such Product's FCC ID (which can be found on the device) into the FCC ID Search form available at fcc.gov/oet/ea/fccid.

TERMS OF SERVICE AND WARRANTY

By purchasing or using the product, you agree to the Terms of Service found at ring.com/terms. For information on our warranty visit ring.com/legal.

FOR CONSUMERS IN THE UNITED STATES**Supplier's Declaration of Conformity – Compliance Information Statement**

Device Name: Ring Panic Button

Model Number: 5F55E9

FCC ID: 2AB2Q5F55E9

FOR CONSUMERS IN CANADA**Innovation, Science and Economic Development Canada (ISED) Compliance**

Ring LLC, 1523 26th St, Santa Monica, CA 90404

www.ring.com/legal@ring.com

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Information Regarding Exposure to Radio Frequency Energy

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body.

FRANÇAIS**RENSEIGNEMENTS IMPORTANTS RELATIFS AU PRODUIT****! RENSEIGNEMENTS RELATIFS À LA SÉCURITÉ**

LE NON-RESPECT DE CES CONSIGNES DE SÉCURITÉ POURRAIT CAUSER UN INCENDIE, UNE DÉCHARGE ÉLECTRIQUE, OU D'AUTRES BLESSURES OU DOMMAGES.

ATTENTION : Votre appareil n'est pas étanche et ne doit donc pas être immergé dans l'eau, car cela pourrait vous blesser, blesser d'autres personnes ou endommager l'appareil.

Entretien du de Ring Panic Button

Ring Panic Button est destiné à usage intérieur seulement. Utilisez uniquement les accessoires fournis avec votre appareil, ou spécifiquement commercialisés pour une utilisation avec votre appareil, pour alimenter votre appareil.

ATTENTION :

Afin de réduire les risques de chute, soyez particulièrement prudent lorsque vous utilisez une échelle ou tout équipement similaire pour l'installation du produit.

CARACTÉRISTIQUES DU PRODUIT

Nom de l'appareil : Ring Panic Button

Numéro de modèle : 5F55E9

Caractéristiques électriques : 2 x 3V Lithium CR2032

Températures de fonctionnement : de 0 °C à 49 °C (32 °F à 120 °F)

SÉCURITÉ CONCERNANT LES PILES

Les piles au lithium livrées avec cet appareil ne sont pas rechargeables. Ne pas ouvrir, démonter, plier, déformer, percer, ni découper les piles. Ne pas modifier les piles, ne pas essayer d'insérer des corps étrangers dans les piles et ne pas immerger les piles dans de l'eau ni dans d'autres liquides. Ne pas exposer les piles à une flamme, à une explosion, à une température élevée ni à tout autre danger. Les incendies impliquant des piles au lithium peuvent généralement être maîtrisés par une inondation avec de l'eau, sauf dans les espaces confinés où un agent d'étouffement doit être utilisé.

RECYCLEZ VOTRE APPAREIL CORRECTEMENT

Dans certaines régions, l'élimination de certains appareils électroniques est réglementée. Assurez-vous de jeter ou de recycler votre appareil conformément aux lois et règlements locaux. Pour obtenir des renseignements sur le recyclage de votre appareil, visitez la page amazon.com/devicesupport

FOR CONSUMERS IN CANADA**CONDITIONS DE SERVICE ET DE GARANTIE**

Si une pile tombe et vous pensez qu'elle est endommagée, prendre les précautions nécessaires pour éviter toute ingestion ou tout contact direct des liquides ou d'autres matériaux de la pile avec la peau ou les vêtements. Si une pile fuit, retirer toutes les piles et les recycler ou les jeter conformément aux recommandations du fabricant des piles. Si un liquide ou tout autre matériau des piles entre en contact avec la peau ou les vêtements, rincer immédiatement la peau ou les vêtements avec de l'eau. Une pile ouverte ne doit jamais être exposée à de l'eau, car cela pourrait provoquer un incendie ou une explosion.

POUR LES CONSOMMATEURS AU CANADA

Conformité aux exigences d'Innovation, Sciences et Développement économique Canada (ISED)

Cet appareil contient des émetteur(s)/récepteur(s) exempts de licence qui sont conformes aux normes CNR d'Innovation, Sciences et Développement économique Canada. Son utilisation est soumise aux deux conditions ci-dessous : (1) Cet appareil ne doit pas causer d'interférences. (2) Cet appareil doit accepter toute interférence, y compris les interférences pouvant causer un fonctionnement indésirable de l'appareil.

Information Regarding Exposure to Radio Frequency Energy

NOTE: This equipment complies with IC RSS-102 RF exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body.

RENSEIGNEMENTS CONCERNANT L'exposition à L'énergie des Fréquences Radio

Cet équipement est conforme aux limites d'exposition aux fréquences radio stipulées dans le document IC CNR-102 RF pour les environnements non contrôlés. Cet équipement doit être installé et utilisé à une distance minimale de 20 centimètres entre le radiateur et votre corps.

AVERTISSEMENT :

Risque d'explosion si les piles sont remplacées incorrectement. Remplacez-les uniquement par un modèle identique ou équivalent recommandé par le fabricant. Jetez les piles usées conformément aux instructions du fabricant.



For additional help, visit ring.com/help
Or give us a call

[US 1 800 656 1918](tel:18006561918)

[Canada 1 855 300 7289](tel:18553007289)

[Worldwide +1 310 929 7085](tel:13109297085)

For a list of all our customer support numbers, visit ring.com/callus

© 2022 Ring LLC or its affiliates. Ring and all related marks are trademarks of Ring LLC or its affiliates.
XX-XXXXXX-XX