 


装订成册 单页尺寸：125x170mm，材质：157g铜版纸覆哑膜

**Monamii**

Please read this manual carefully when using this product and keep the manual for reference.

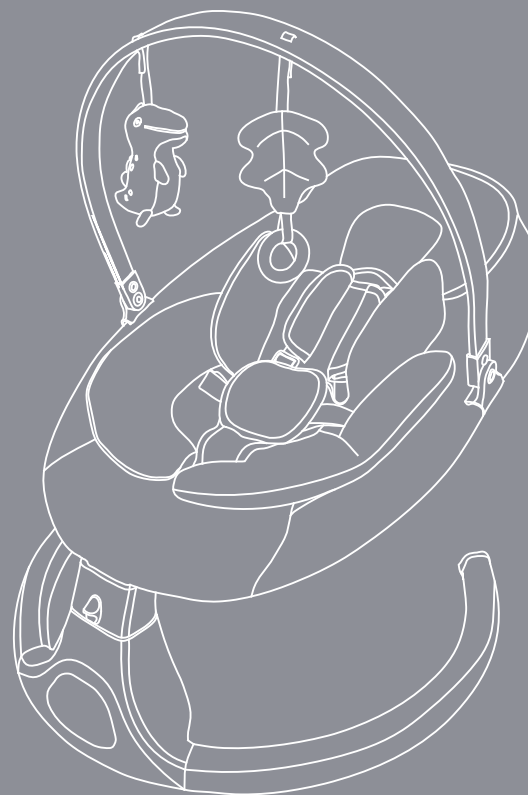

BB2007

**AUTO SWING CHAIR  
USER MANUAL**

## Product Contents

<b>Product Introduction</b>	2
Product Specification	2
Product Features	2
<b>Parts Instruction</b>	3
<b>Installation</b>	3
Install the base bracket	3
Assembling & Disassembling	4
For Pillow and Seat Pad	5
For Toy Bar with Toys	5
Introduction	6
Safety Belt Instruction	6
<b>User Instruction</b>	7
Button Description	7
USB Flash Disk	8
Motion Lock	8
Remote Control	9
Power Supply	9
<b>WARNING</b>	10
<b>Clean &amp; Maintenance</b>	12
Clean	12
Maintenance	12
<b>Troubleshooting</b>	12
<b>Brand Support</b>	13
<b>After-sale Support</b>	13

## Product Introduction

### Product Specification

Product Name:	AUTO SWING CHAIR
Model Number:	BB2007
Input Voltage:	100-240V
Output Voltage:	5.8 ~ 6V ---
Output Current:	1A
Frequency:	50/60HZ
Application:	Children up to a weight of 9kg.
Main Material:	100% polyester fiber, aviation aluminum base bracket

 
### Product Features:

1. Swinging from side to side, with five gears mimicking human movement.
2. Protecting baby's spine design on the basis of human engineering.
3. Power supplied by safe 5.8 ~ 6V low voltage adapter.
4. One-button installation and disassembly, simple and convenient to use.
5. Seat cover made of environmental-friendly super soft fabric and non-textile, cozy, breathable and safe removable and machine washable seat fabric.
6. Made of aluminum alloy base with light weight and strong hardness guaranteeing safety for baby.
7. Controlled by front panel or remote controller, easy to operate.
8. With motion lock and safety belt for protection.
9. With built-in soft nature sounds & Bluetooth enabled for music.
10. Automatic motion detection.

## Parts Installation

Make sure that all of the following parts listed are included in the box. If any part is missing, please contact us before operating. No tools are required for assembly.

- ① Pillow x 1
- ② Plush toy x 2
- ③ Toy bar
- ④ Seat pad
- ⑤ Remote controller
- ⑥ Adaptor
- ⑦ Seat frame & seat cloth x 1
- ⑧ Foot tube x 2
- ⑨ Base
- ⑩ USB cable

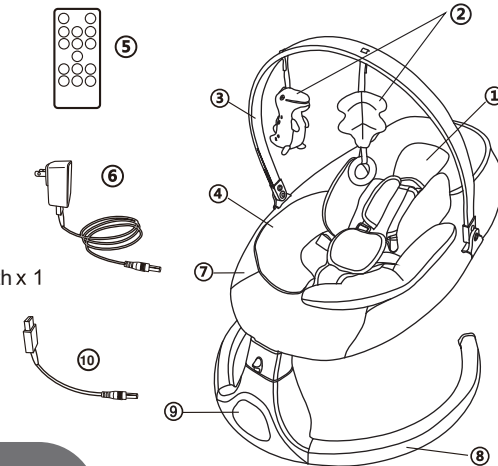


## Installation

### Assemble Instructions

#### Install the Base Bracket

 1. Insert left and right tube into base bracket, ensure that the foot tube is aligned with the screw hole of the main engine in the bottom.
2. Fix 4 screws into the foot tube.

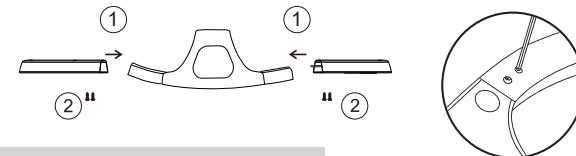


## ! WARNING:


Guardian should take good care of your child, prohibit to play accessories and avoid to get hurt or swallow !

## Assembling & Disassembling

 
1. Connect the upper tube to the lower tube.

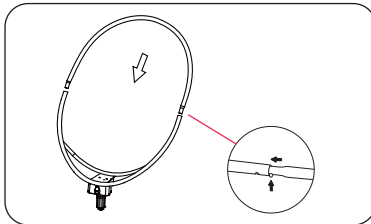

 
2. Install the seat cloth on the seat tube.

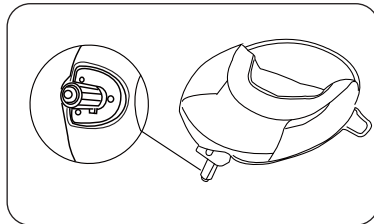

 
3. Pull on the top side of the cover to cover the ring. And fasten the both velcros.

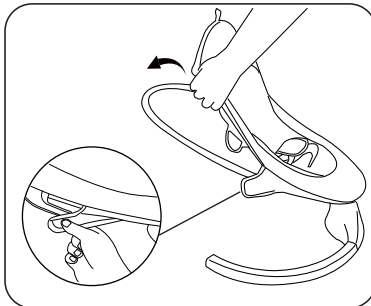

 4. Put the frame in the base with "D" shape components aligned.

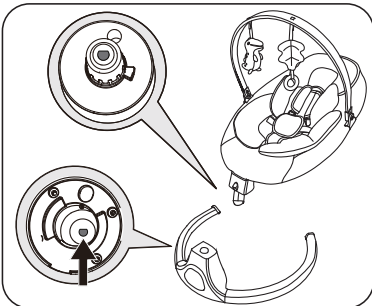

 Disassembling: Press the sheet metal and pull up the seat frame.

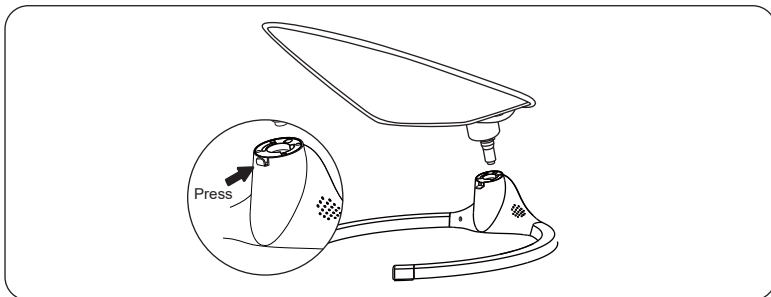


## For Pillow and Seat Pad

Installation: Put the seat pad on the seat frame, pull the five-point seat belt across the pad and fasten the buckle.


Attach the pillow to the top retaining ring of the seat frame and fasten the velcro.

 Removing: Pull off the velcro to detach the pillow and unfasten the five-point buckle by pressing the center button.

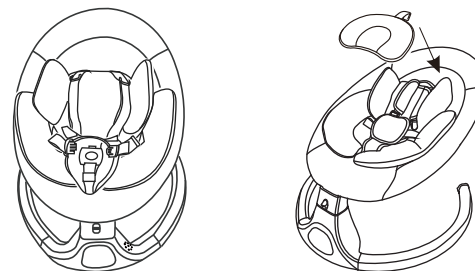

## For Toy Bar with Toys

 Attach the toys on the bar. Fasten the toy bar to the both holes of the seat cloth.

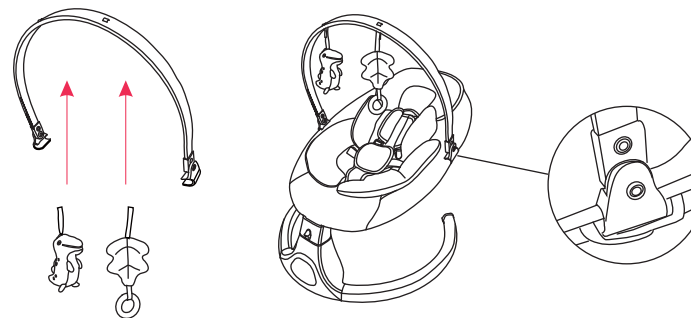


## ! WARNING :

Make sure the toy bar was attached on middle of the seat.

## Toy Bar Introduction

 Stick toy angle adjustment: The toy stick has three positions.

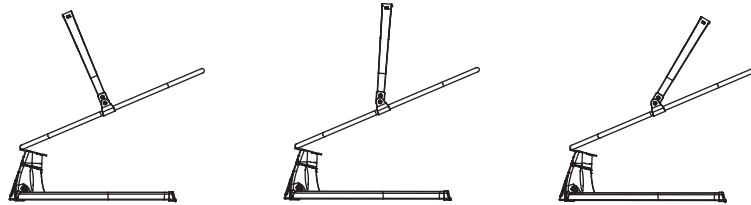

Position1:  
For under 5 months


Position2:  
For over 5 months

Position3:  
For easy to pick up the infant

## Safety Belt Instruction

 Place the baby into the swing and let his arms across the shoulder straps and legs across both sides of crotch support restraint, insert five-point buckle, then turn the crotch support cover up and stick on Velcro.

When you need to take your baby out of swing, press the center button of five-point buckle to release the strap.

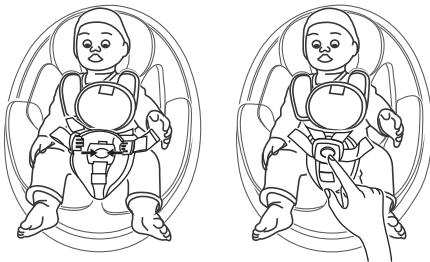

**Note:** Be sure to use the safety belt correctly when your baby lies on the baby swing and adjust the belt to proper length for the safety of your child.






The belt goes through the top hole and then the bottom hole, fasten the belt. Baby sits into the swing chair, buckle up the seat belts.



Adjust the seat belt buckle up and down or left and right to make it fit your baby's safe length.

## User Instruction

### Button Description

-  **ON/OFF:** Touch this button and the indicator light is on. Touch it again to turn the swing off.
-  **SWING:** Touch the button to make swing gear settings. There are five swing gears indicated by digital light: 1-2-3-4-5.
-  **TIMER:** Touch the button to set the time. The first touch will have the swing chair swing for 8 minutes, the second touch will have it swing for 15 minutes, and the third will have it swing for 30 minutes.



**MUSIC:** Touch the button to play the built-in music.

Touch it twice to pause music.

Long touch to change the music.

\*Turn on the bluetooth on smart phone and connect with "BB2007"

The swing beeps, and then bluetooth is now connected well.

Then the music from cellphone plays.

\*Music priority: Bluetooth>Built-in music / USB flash disk.



 
**VOLUME+/-** : Touch the button to increase / decrease the volume gradually.



**AUTO** : Touch the button to enter the detection mode.

Stop swinging if no movement from baby. and Re- swinging automatically if have.

\* The default state is gear 1 with timer 3 mins .\*

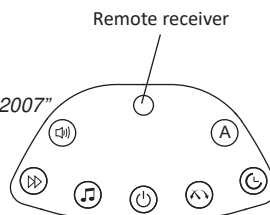


## USB Flash Disk

Turn on the monitor and connect the USB flash disk to the base .


Touch the "MUSIC" button to play the music of the disk.

 \* Note: It will only play **MP3/WAV/ WMA** format music file.

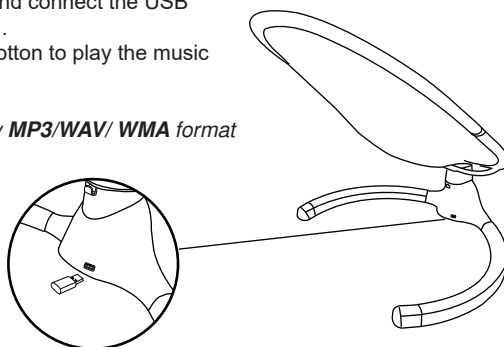

## Motion Lock

 Secure the seat in place by switching the lock position. Up is unlock, down is lock. Only for use while automatic swing mechanism is deactivated.

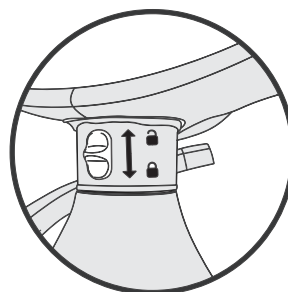

## Remote Control

To avoid using problems with the remote control, please aim it at the touch panel of the baby swing chair, and the best effective distance within 16.4 feet.



Power on/off



Time setting



Built-in music/  
Bluetooth music



Volume up



1

2

3

4

5



Play/pause



Previous song



Next song



Volume down



Touch the button to enter the detection mode.

Stop swinging if no movement from baby. and Re- swinging automatically if have.

\* The default state is gear 1 with timer 3 mins .\*

 


## Power Supply

Adaptor option:


1. DC plug can be inserted into 100-240V ~ 50/60Hz AC power supply.

2. Adapter output parameters: voltage is 5.8 ~ 6V and current is 1A.

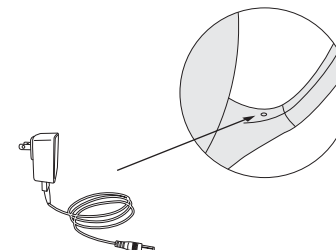

Power bank option:

 USB cable insert to the Micro USB of power bank

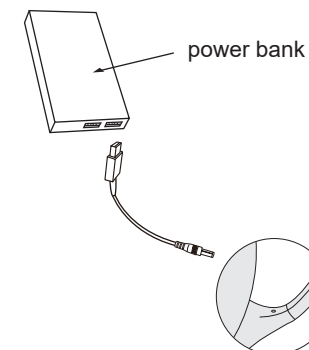

## ⚠ WARNING

**FALL and STRANGULATION HAZARDS:** Infants have suffered head injuries falling from product and have strangled in straps.

- **ALWAYS** use restraints. Adjust to fit snugly.
- **NEVER** lift or carry baby in product.
- **STOP** using product when infant attempts to climb out (approximately 9 months).
- Stay near and watch baby during use. This product is not safe for sleep or unsupervised use. If baby falls asleep, remove baby as soon as possible and place baby on a firm, flat sleep surface such as a crib or bassinet.
- **ALWAYS** place product on floor. Never use on any elevated surface.

**SUFFOCATION HAZARD:** Young infants have limited head and neck control. If the seat is too upright, infant's head can drop forward and compress the airway. Babies have suffocated when seats tipped over on soft surfaces.

- **ALWAYS** keep product seat fully reclined until infant is at least 4 months old AND can hold up head without help.

- **NEVER** use on a bed, sofa, cushion, or other soft surface.

Do not move or lift this product with the baby inside it.

The product shall only be used with the recommended transformer.

A swallowed button or coin cell battery can cause internal chemical burns in as little as two hours and lead to death.

- Dispose of used batteries immediately.
- Keep new and used batteries away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

- **INGESTION HAZARD:** This product contains a button cell or coin battery.

- **DEATH** or serious injury can occur if ingested.

- A swallowed button cell or coin battery can cause **internal Chemical Burns** in as little as **2 hours**.

- **KEEP** new and used batteries **OUT OF REACH of CHILDREN**

- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.

- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.

- Even used batteries may cause severe injury or death.

- Call a local poison control center for treatment information.

- This product contains a CR2025 ,DC 3V coin battery. A coin battery can cause serious internal chemical burns if swallowed.

- Non-rechargeable batteries are not to be recharged.

## ⚠ WARNING

- Do not force discharge, recharge, disassemble, heat above 132°F(60°C) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

### FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Notes: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Cautions: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.



## Clean & Maintenance

### Clean

1. Clean the base bracket and seat frame with wet cloth and a mild detergent. Dry thoroughly then. Please do not use corrosive cleaner.
2. Removable and washable fabric.
  - Seat fabric: Clean it with wet cloth and a mild detergent, and dry it.
  - Pillow: Tear the Velcro off and take the pillow off. Put a little cleaner, wash it gently by hands, and then rinse it with clean water. Hang it avoiding sun exposure.
  - Seat Pad: Unbuckle the safety belt to remove, you can put it in the washing machine to clean.

### Maintenance

1. Please check this baby swing regularly. Make sure of each part is well connected and well installed. Stop using for poor connection and connect/ install it again if necessary.
2. This product contains electronic components, which shall not be used in water or in a humid environment. Please ensure the product is dry, and store it in a cool and dry place, avoiding direct sunshine for a long time.
3. To increase the life of the product, please unplug the power if the product is not used frequently.

## Troubleshooting

Fast self-inspection solution below

No.	Issue	Solution
1	Not energized	1. Check whether the adapter and DC cable are firmly connected. If loose, connect them firmly. 2. DC cable may be damaged. Please contact customer service to replace DC cable.
2	The power lamp keeps flashing/ high voltage alarms	Use matchable adapter with an output voltage of 5.8 ~ 6V, 1A
3	Motion lock stuck	Check the motion lock. Pull it up to unlock the seat frame.
4	Overstring/Strike	Power off and restart it again

Note: For other trouble, please contact our customer service for help.  
Never disassemble and repair the swing by yourself.

## Brand Support

We understand the importance a strong support network can have on both parents and children. It makes all the difference to the healthy development of both you and your child when you are surrounded with the love and support of people that care.

In today's world the need for support is more important than ever, with working and at home mothers alike facing pressures and tribulations, the world needs a modern brand to navigate the challenges parents face today. Our story gets personal, although not having the history in the marketplace, we do have the experiences and understanding to know what it feels like to be helpless when things get tough. This experience extends beyond just parents, but to family and friends, all those in your support network who would do anything to show they care.

we developed it from this story, a baby brand for the modern family. It takes a village, and our team just joined the community.

If you want to join our circle of new parents, please kindly contact us with your Order ID at **MonamiiBB@outlook.com**

Besides, We will be sending you a newsletter that includes parenting hacks, breastfeeding awareness tips, inspiring parenting stories and more—all with a dose of joy.

## After-sale Support

We support lifetime friendly customer service guaranteed. If you have any questions, please contact us via email ( **MonamiiBB@outlook.com** ) we will be happy to serve you and guarantee a 100% satisfactory treatment plan.

 **MonamiiBB@outlook.com**