


Internal Photographs



Photograph 1 – View with the Back Panel of the EUT Removed




Photograph 2 – View with the Battery and the Back Panel of the EUT Removed

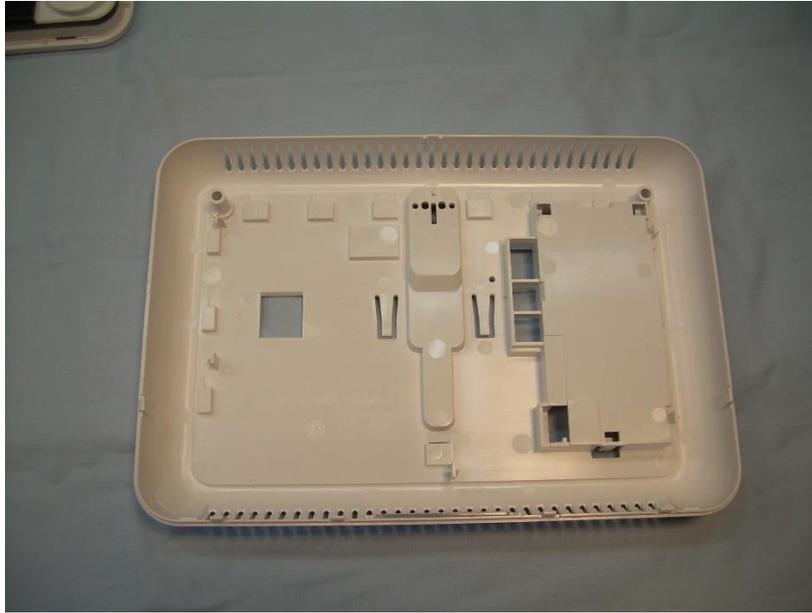

Photograph 3 – View of the Rear Cover of the EUT




Photograph 4 – View of the EUT with Rear Cover Removed Showing the Back Side of the Main PCB

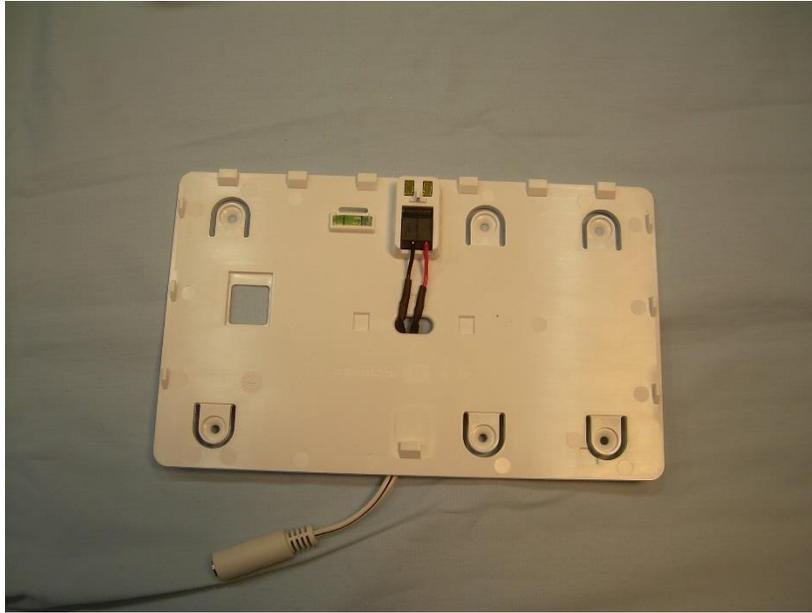


Photograph 5 – View of the Back Panel of the EUT




Photograph 6 – View with the Main PCB Removed

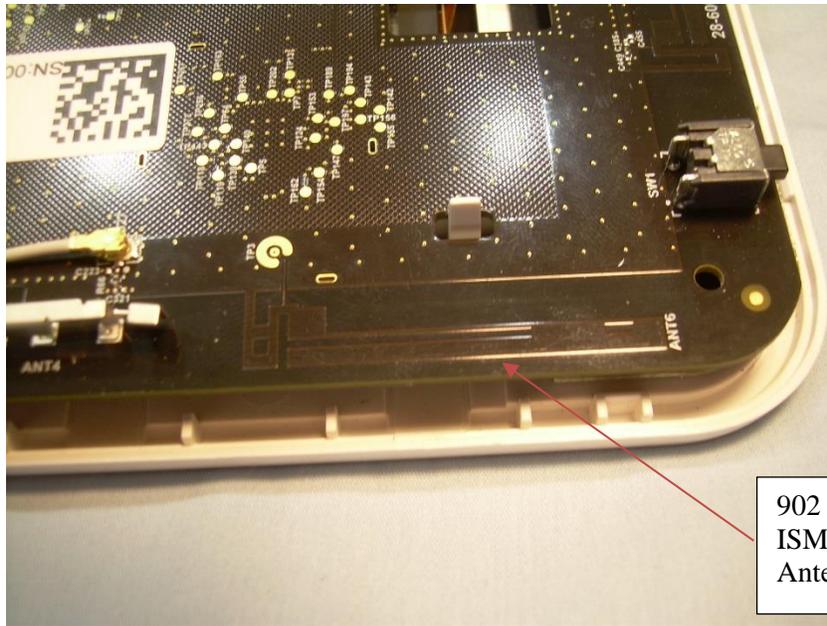

Photograph 9 – View of the 902 -928 MHz Transceiver Antenna

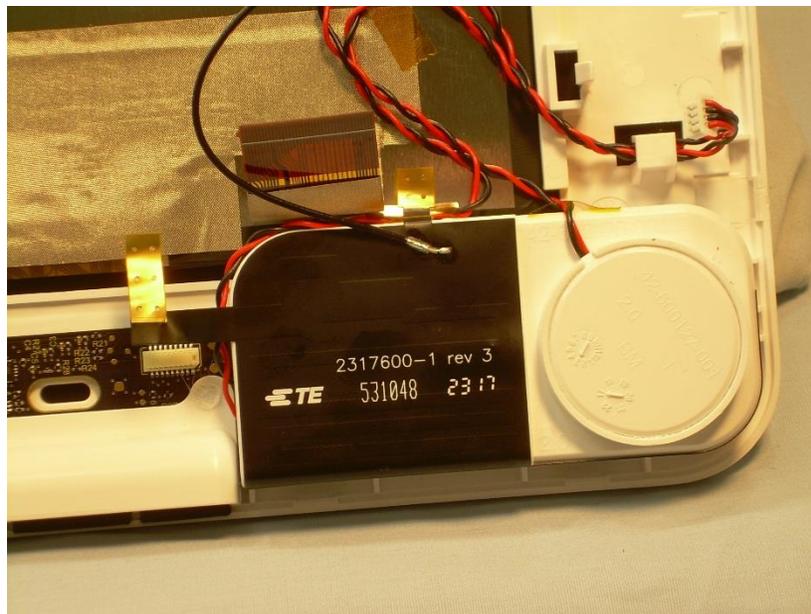


Photograph 10 – View of the Speaker and 345 MHz Receiver Antenna

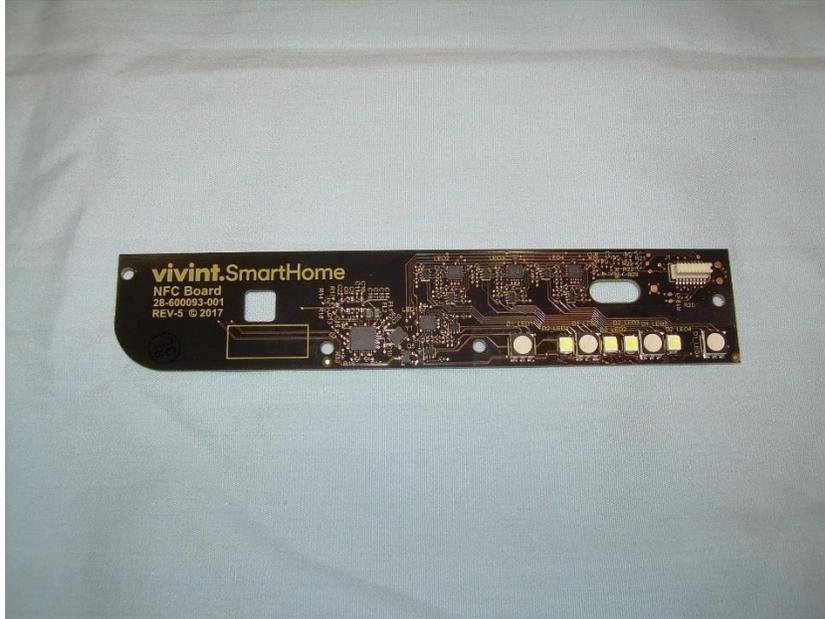

Photograph 11 – View of the Component Side of the NFC PCB



Photograph 12 – View of the Trace Side of the NFC PCB

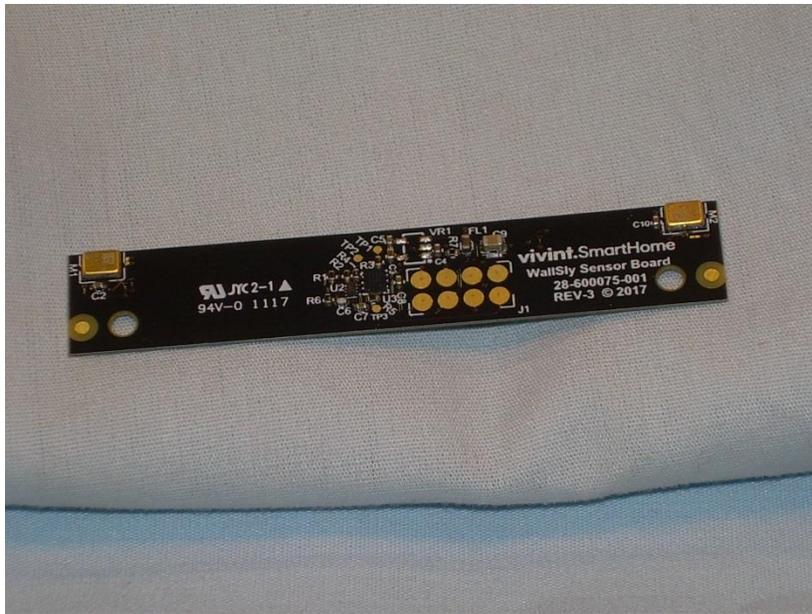


Photograph 13 – View of the Front of the Sensor PCB



Photograph 14 – View of the Back Side of the Sensor PCB



Photograph 15 – View of the Power Supply

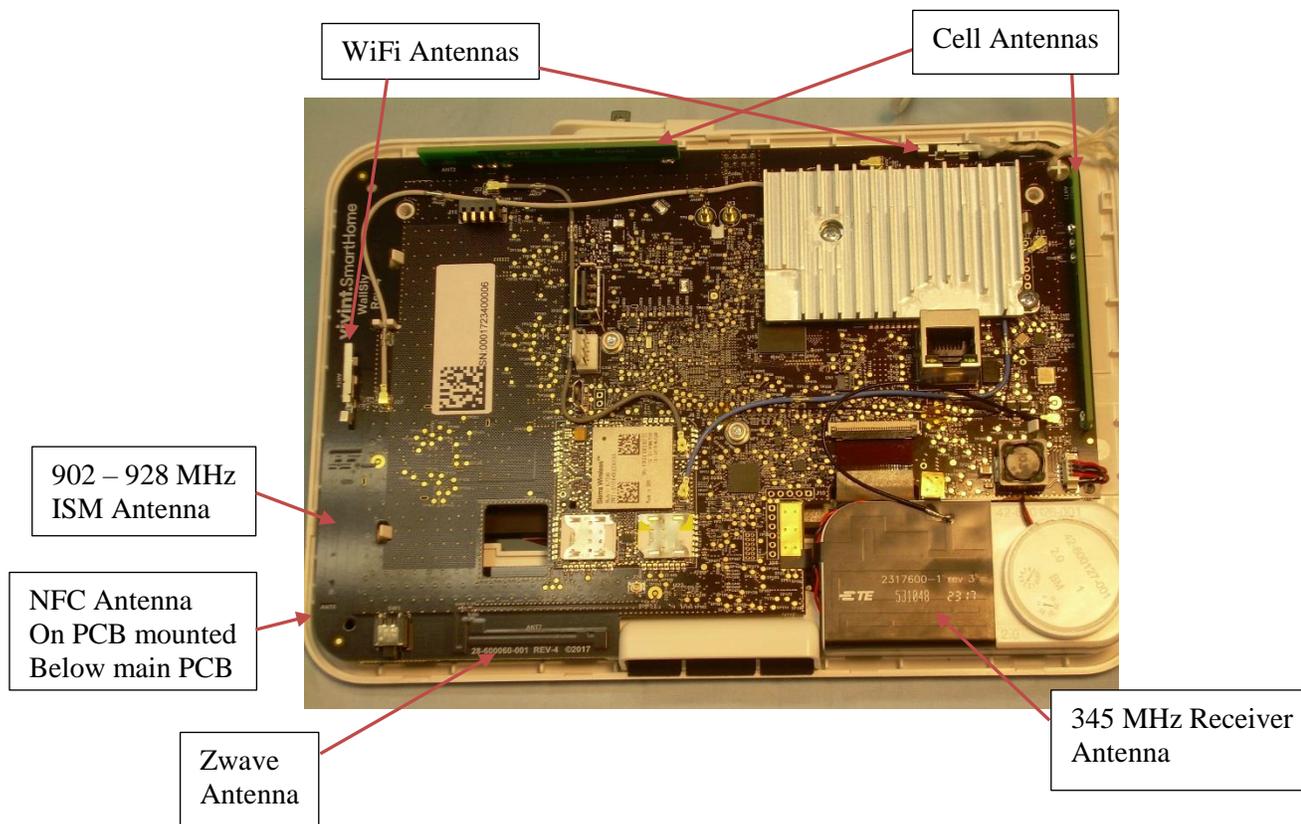

Photograph 16 – View of the Antenna Locations