


LED and Button Rules

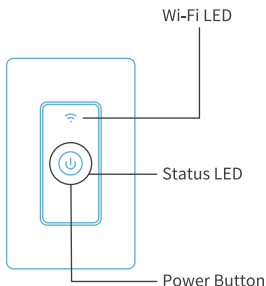

Flashing green rapidly (twice/sec): Initialization/ Wi-Fi connecting mode/ Reset/Firmware upgrading mode.
Flashing green slowing (once/sec): Configuring mode.
Solid green: Successfully connected.

ON: Wall switch is in OFF status.
To show where the wall switch is located in the dark.
OFF: Wall switch is in ON status.

Press to turn the wall switch ON or OFF.
Press and hold (for 5 seconds) until Wi-Fi LED flashes green rapidly to initiate factory reset process.

Frequently Asked Questions

1 What should I do when I can't turn the wall switch on/off manually?

Please check the Wi-Fi and Status LED. If both LEDs are off:

- Make sure that you restore power to the wall switch at the circuit breaker.
- Make sure the wall switch is wired correctly. Please consult with a qualified electrician.
- If it still doesn't work, please contact us via support@meross.com.

2 What should I do when my Meross app is unable to control the added Wall Switch?

Firstly, sorry for the inconvenience. You can troubleshoot the following:

- Check the main Wi-Fi's Internet connection.
- Make sure that main Wi-Fi's password hasn't been changed.
- Do not use a metal faceplate with the Wall Switch to prevent Wi-Fi signal decrease.
- Factory reset MSS510 and try to add it again.

3 How do I pair my Meross devices with Amazon Alexa or Google Assistant?

Visit Account->Amazon Alexa or Google Assistant page within Meross app for pairing instructions.

Warning

RISK OF ELECTRIC SHOCK OR FIRE.

- Make sure the power is OFF on the wall switch you are replacing.
- The wall switch must be installed and used in accordance with the National Electric Code (NEC) or your local electrical code. If you are unfamiliar with these codes, or are uncomfortable performing the installation, please call a qualified electrician.
- Do not install the wall switch with wet hands or when standing on wet or damp surfaces.

Quick Installation Guide


Before We Get Started

- Replace single pole switch. Not compatible with 3-way switch.
- Neutral wire is required.
- Only supports 2.4GHz networks.

1 Download the Meross app.



2 Open Meross app and simply follow the inbuilt setup wizard for device installation and configuration.

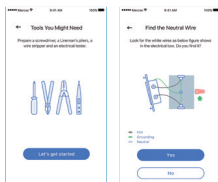

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.