

US UK

Dear user

Thank you for choosing REDRAGON product. To protect your rights and for better customer service, please read the following warranty rules carefully.

- 1. Within 18 months of purchase date, repair is guaranteed for failure due to electrical circuit problems. Other damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included.
2. Consumable parts (such as foot pads) and spare parts replacement are not included in our warranty.

1

I. Selection of working mode

- 1. 2.4G mode: In keyboard mode, turn the power switch to the 2.4G position, the 'M' LED on the keyboard will slowly flash green. Insert the receiver into a valid USB port on the computer, and the 'M' LED on the keyboard will be normally on in green and be off in about 3 seconds. If the keyboards needs to be paired with the receiver again, hold FN+'4' key for about 3 seconds, and the 'M' LED on the keyboard will rapidly flash green, and you can insert or replace the receiver on the USB port, and the pairing will be successful.
2. Bluetooth mode: In keyboard mode, turn the power switch to the BT position. Hold the 'FN+1/2/3' key on the keyboard for about 3 seconds, and the keyboard will enter the pairing mode of Bluetooth channel 1/Bluetooth channel 2/Bluetooth channel 3. The 'M' LED on the keyboard will flash rapidly in blue/cyan/purple, and the keyboard will broadcast externally simultaneously: BT5.0 KEYBOARD and BT3.0 KEYBOARD devices. Depending on the terminal device that needs to be paired, follow the corresponding steps to pair with the keyboard. When the pairing is successful, the 'M' LED on the keyboard will be normally on in blue/cyan/purple and be off in about 3 seconds. When switching between the three paired 3 Bluetooth channels is required, just press the FN+1/2/3 key to switch between them.

II. Low battery indication/working current

- Low battery indication: When the keyboard is in 2.4G or BT working mode, if the built-in battery of the keyboard is low, the 'M' LED will flash slowly in red, reminding you to replace the battery.

2

III. Automatic hibernation/wake-up/manual power-off functions

- When the keyboard is in 2.4G or BT working mode, if it is not used for about 3 minutes, it will enter a power-saving state, and it will be waken up for use again by pressing any key.
If you carry the keyboard out or do not use it for a long time, please turn the power switch of the keyboard to the OFF position.

IV. Functional description of other keys

- When the system switch is turned to WIN (the following key function categories apply to the WIN system),
The 'Fn' + 'Win' key can lock and unlock the WIN key to prevent accidental triggering of the key during gaming
FN+F1= Decrease screen brightness
FN+F2= Increase screen brightness
FN+F3= Display multi-task window(Alt+Tab)
FN+F4= Desktop (Win+D)
FN+F5= Return
FN+F6= Search
FN+F7= Previous title
FN+F8= Play/pause
FN+F9= Next title
FN+F10= Mute
FN+F11= Decrease volume
FN+F12= Increase volume

3

- When the bottom system switch is turned to MAC (the following key function categories apply to the MAC system),
F1= Decrease screen brightness/FN+F1=F1
F2= Increase screen brightness/FN+F2=F2
F3= Display multi-task window/FN+F3=F3
F4= Call out Siri /FN+F4=F4
F5=app exposé function/FN+F5=F5
F6= Search/FN+F6=F6
F7= Previous title/FN+F7=F7
F8= Pause/FN+F8=F8
F9= Next title/FN+F9=F9
F10= Mute/FN+F10=F10
F11= Decrease volume/FN+F11=F11
F12= Increase volume/FN+F12=F12

- FN+<[>=ScrIk ; FN+<]>=Pause ; FN1+<;>=HOME;FN+<'>=END;FN+P=PrtSc
FN+W: Exchange positions of English letters A/W/S/D and four direction keys
<- / < / < / < in turn.

V. Description of indicator light status

- '1' and 'A' NUM/CAPS-LED indication function
When NUM /CAPS ON is activated, the corresponding LED will be normally on in red
'M' ---Working mode (2.4G mode/BT mode) and low battery indication
'4' ---Charging indication

4

FAQ

- If the keyboard doesn't respond, please check if the keyboards USB cable is correctly inserted into the corresponding USB port on the computer, or try another USB port on the computer.
If you spill liquid on the keyboard, please unplug the keyboards USB cable from the computer immediately. Wipe off excess liquid and put the keyboard in a dry and ventilated place. Make sure the keyboard is dried naturally before the next use.

5



BATTERY SAFETY GUIDELINES

DO NOT replace the battery with a different model.
DO NOT use this product if the battery shows signs of damage including, but not limited to tearing, deformation, leakage, or the smell of electrolytic material.
DO NOT touch the battery if material is leaking and seek immediate medical attention if any material comes into contact with your skin or eyes.
DO NOT expose the battery to liquid, heat sources, electricity (outside of the product itself), or other non-standard operating condition.
DO NOT remove the battery except for proper disposal and recycling as required by local laws and regulations.
DO NOT impact, bend, alter, dissemble, or otherwise damage the battery as the contents are volatile, hazardous, and can be harmful.



CAUTION:

Failing to follow all safety guidelines may result product damage, explosion, fire, and/or electric shock.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil contient des émetteurs / récepteurs exemptés de licence conformes aux RSS (RSS) d'Innovation, Sciences et Développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes : (1) Cet appareil ne doit pas causer d'interférences. (2) Cet appareil doit accepter toutes les interférences, y compris celles susceptibles de provoquer un fonctionnement indésirable de l'appareil.

6

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help
This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

7

REDRAGON
BK-7111 REDRAGON SCISSORS
MECHANISM SLIM WIRELESS KEYBOARD



User manual

封面

Table with 5 columns: Model (型号), Name (名称), Date (日期), Page (页码), Drawing (绘图), Remarks (备注), File Number (文件编号), Approval (核准), Version (版本). Includes details for BK-7111/ET-7111, manual title, date 2024-7-10, and approval by 冯丽廷 and 香敏琪.

