

Jeep Limited Edition

40-4309

OWNER'S MANUAL — (Please read before using this equipment.)

[IMPORTANT]

If an icon appears at the end of a paragraph, go to the box on this page with the corresponding icon for pertinent information.

- | | |
|---|---|
|  — Warning |  — Read manual |
|  — Caution |  — Note |



Your RadioShack Jeep Limited Edition is built to handle the road in style, whether the road is the highway in your house or the sidewalk outside! Built to 1/16 scale, it can reach speeds of up to 450 feet per minute. This rugged racer is perfect for children ages 8 and up.

Your racer is available in two frequencies (27 and 49 MHz) so you can race against other radio-controlled racers. Check the racer's box to see which frequency your Jeep uses.

THE FCC WANTS YOU TO KNOW

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the



RadioShack.

www.radioshack.com

© 2001 RadioShack Corporation.
All Rights Reserved.
RadioShack and RadioShack are trademarks
used by RadioShack Corporation.

instructions, may cause harmful interference to radio communications. Your radio-controlled vehicle might cause TV or radio interference even when it is operating properly. To determine whether your vehicle is causing the interference, turn off your vehicle. If the interference goes away, your vehicle is causing it. Try to eliminate the interference by:

- moving your vehicle away from the receiver
- contacting your local RadioShack store for help

If you cannot eliminate the interference, the FCC requires that you stop using your vehicle.

Changes or modifications to this product not expressly approved by RadioShack, or operation of this product in any way other than as detailed by the Owner's Manual, could void your authority to operate the product.

FCC DECLARATION OF CONFORMITY

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



Product: Jeep Limited Edition

Model: 864-008

Responsible Party: RadioShack
160 Thompsonville
Fort Worth, TX 76182

Phone: 817-455-1200

INSTALLING BATTERIES

Your Racer requires four AA batteries or one 6V battery pack (neither supplied) to power the car, and one 9V battery (not supplied) for the transmitter.

 
IN THE RACER

Your racer uses 4 AA alkaline batteries or a 6V rechargeable battery pack (neither supplied, available at your local RadioShack store) for power.

Before you can use a 6V battery pack, you must charge it using a special battery charger (not supplied, available at your local RadioShack store). Follow the charger's instructions to charge the battery pack.

You can install and use alkaline batteries while the battery pack is charging.

1. Set OFF/ON on the bottom of the racer to OFF.
2. To access the battery compartment, use a coin to turn the compartment's latch in the direction of the arrow until it stops. The battery adaptor or the 6V rechargeable battery pack is released.



3. If you are using alkaline batteries, insert 4 AA batteries in the supplied adaptor according to the polarity symbols (+ and -) marked inside.

WARNING

If you use alkaline batteries to power the motor, they will get very hot. To avoid getting burned, be sure to wait a few minutes after you stop using the racer before you remove the batteries.

CUTION

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
- If you do not plan to use the racer for several days, remove all the batteries from the transmitter and the racer. BATTERIES can leak chemicals that can destroy electronic parts.
- Never leave dead or weak batteries in the transmitter or motor.
- Disconnecting the battery pack could damage it. After you charge or recharge the battery pack, disconnect it from the charger.
- When you disconnect the battery pack from the charger, do not pull on the connector's wire. You might damage the battery pack.

NOTE

Using alkaline batteries slightly decreases your racer's speed.

 
WARNING
Dispose of batteries promptly and properly; do not burn or bury them.

IMPORTANT

The EPA, United States Environmental Protection Agency, has adopted a program to collect and recycle lead-acid batteries at the end of their useful life, when taken out of service in the United States or Canada. The EPA program provides a convenient alternative to placing used lead-acid batteries into the trash or the municipal waste stream, which may be illegal in your area. Please call 1-800-THE-5HACK (1-800-543-7462) for information on a collection recycling and disposal bona fide location in your area. RadioShack's involvement in this program is part of the company's commitment to preserving our environment and conserving our natural resources.



Place either the battery pack or the battery adapter in the compartment according to the polarity symbols (+ and -) marked inside. Slide the battery pack or adapter in the direction of the arrow until it stops.



- To lock the batteries in place, turn the compartment's latch in the opposite direction of the arrow until it stops.

 
If the razor does not start, or does not respond to the transmitter, recharge the rechargeable battery pack or replace the AA batteries.

Do not charge or recharge the battery pack while it is in the razor.

IN THE TRANSMITTER

The transmitter uses one 9V battery (not supplied). For the best performance and longest life, we recommend RadioShack alkaline batteries.

1. Set OFF06 on the transmitter to OFF.
2. Slide the battery compartment cover in the direction of the arrow to remove the cover.



3. Snap the 9V battery in the compartment according to the polarity symbols (+ and -) marked inside.
4. Replace the cover and snap it shut.

When the range of your transmitter decreases, replace its battery.

DRIVING THE RACER

Set OFF06 on the bottom of the racer to ON.

Use the transmitter's control levers to guide the racer.



CAUTION

If the racer gets stuck on a slope, immediately release the control levers on the transmitter and remove it.

LEFT CONTROL LEVER

Push forward to move forward.

Pull back to move in reverse.

Release to stop.

RIGHT CONTROL LEVER

Push left to move left.

 
Push right to move right.

Release to go straight.

When you finish driving the racer, set OFFICIAL on the racer to OFF.

WHEEL ALIGNMENT

If the racer does not drive in a straight line when you release the right control lever, adjust the wheel alignment control on the bottom of the racer.



Turn the control toward L if the racer is pulling to the right or toward R if the racer is pulling to the left.

HELPFUL HINTS

Running your racer continuously for long periods generates high heat levels. Heat causes wear and tear on the motor. To help keep heat levels down, when your racer's battery pack dies, let the racer cool at least 10 minutes before installing a new or newly charged battery pack.

If the racer's motor runs but it does not respond to the transmitter, move closer to the racer and try again.

If someone uses a CB nearby, it might interfere with control of the racer. If this happens, move the racer away from the CB.

You cannot operate your racer near devices with transmitters that use the same frequency as your racer (27 MHz or 49 MHz). Check your racer's box to see which frequency your racer uses.

If the racer moves slowly and you just installed a fully charged battery pack, check the wheel mechanisms for lint, thread, hair, or dust.

CARE

Keep the radio-controlled vehicle dry; if it gets wet, wipe it dry immediately. Use and store the vehicle only in normal temperature environments. Handle the vehicle carefully: do not drop it. Keep the vehicle away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

SERVICE AND REPAIR

If your vehicle is not performing as it should, take it to your local RadioShack store for assistance. Modifying or tampering with the vehicle's internal components can cause a malfunction and might invalidate its warranty and void your FCC authorization to operate it.

