

aiwa

Essentials Audio Kit



 **Bluetooth®**



File name: AI9006

Quick Start Guide

Table of Contents

WHAT'S INCLUDED	2
YOUR WIRELESS SPEAKER:	
A CLOSER LOOK	3
CHARGING	4
POWERING ON/OFF	5
BLUETOOTH PAIRING	6
CONTROLS	7
CHANGING MODES	8
YOUR WIRELESS EARPHONES:	
A CLOSER LOOK	9
CHARGING	10
POWERING ON/OFF	11
BLUETOOTH PAIRING	12
CONTROLS	13
YOUR WIRELESS HEADPHONES:	
A CLOSER LOOK	14
CHARGING	15
POWERING ON/OFF	16
BLUETOOTH PAIRING	17
CONTROLS	18
SPECIFICATIONS	19
SAFETY PRECAUTIONS	20
MAINTENANCE AND CARE	21
FCC STATEMENT	21
WARRANTY	22

WHAT'S INCLUDED



Prodigy Move
Wireless Speaker



Prodigy Micro
True Wireless Earphones
with Charging Case



S M L

Silicone Eartips



 
Over-Ear Wireless
Headphones
with Foldable Headband

1X



USB Charging Cable

2X




USB-C Charging Cable



Quick Start Guide

YOUR WIRELESS SPEAKER

A CLOSER LOOK

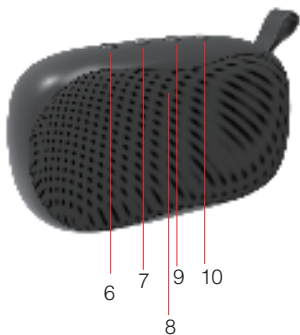


- 1.USB reader
- 2.MicroSD card reader
- 3.LED Indicator
- 4.Charging port
- 5.Power On/Off

- 6.Mode change
- 7.Volume - / Previous Track
- 8.Mic
- 9.Volume + / Next Track
- 10.Play / Pause / Call Controls


YOUR WIRELESS SPEAKER

CHARGING

Insert one end of the included USB charging cable into the charging port on your speaker.

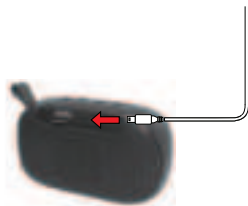

 Insert the other end of the USB cable into a suitable USB charging adapter.



The LED Charging Indicator Light turn red while the speaker is charging and will turn off when fully charged.

Charging 
Charged 



YOUR WIRELESS SPEAKER

POWERING ON/OFF

Set the power switch to the ON position to power ON the speaker.
Set the power switch to the OFF position to turn OFF the speaker.

Note: It is recommended that the speaker is fully charged before use.



YOUR WIRELESS SPEAKER

BLUETOOTH PAIRING



Pairing Mode
(Blue Flashing)



Once powered on, your speaker will go into pairing mode. The LED Indicator will flash blue.



Go to the Bluetooth settings menu on your phone. Make sure that Bluetooth is turned on. Connect to the device listed as "AI9006 Speaker."

After successful pairing, the speaker's LED indicator will turn solid blue.



ON
(Light is Blue)



YOUR WIRELESS SPEAKER

CONTROLS

Play/Pause Button

- Press to play or pause a track.
- Press to accept an incoming call and press again to hang up.
- Press and hold to reject an incoming call.
- Press twice to redial the last called number.

Volume + Button

- Press to go to the next song.
- Press and hold to turn the volume up.

Volume - Button

- Press to go to the previous song.
- Press and hold to turn the volume down.

Mode Button

- Press to switch between Bluetooth, MicroSD Card Reader, USB Reader and FM Radio.

YOUR WIRELESS SPEAKER

CHANGING MODES

Press the mode button to toggle through the following modes:

- Bluetooth mode allows pairing your speaker to a Bluetooth-enabled device.

- FM mode is used to listen to available FM radio channels. Press the play/pause button to automatically search through the available radio stations. Then, use the '+' or '-' buttons to go to the next or last available station. Press and hold the '+' or '-' buttons to control the volume.




- *If the product experiences poor signal reception in FM mode, connect it to a charging cable to enhance the signal reception.

- When a USB thumb drive is inserted into the USB Port, your speaker will play any .MP3, .WMA, or .WAV music file stored on the drive.

- Slide a Micro SD memory card into your speaker's Micro SD Card Slot. In MicroSD mode, your speaker can play .mp3 music files from your card.

YOUR WIRELESS EARPHONES

A CLOSER LOOK

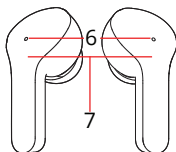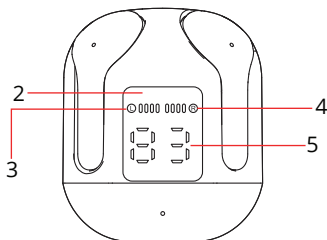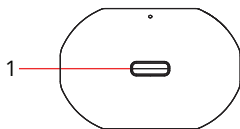


- 1: Charging Port
- 2: LED Display Screen
- 3: Left Earphone Icon
- 4: Right Earphone Icon

- 5: Battery Display
- 6: LED Indicator
- 7: Multifunction Button


YOUR WIRELESS EARPHONES

 CHARGING




Charging the Earphones

Place the earphones in the charging case in order to charge.

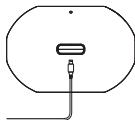

Charging the Case

Insert the included charging cable's USB-C end into the charging port on the case. Insert the other end into a USB port on a computer or a suitable wall adapter. Leave to charge.

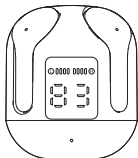

Charging Status

The digits on the LED display screen will flash while the case charges and will display a solid 'OK' once the case is fully charged.


The earphones will flash RED while charging and turn OFF once the charging is complete.

YOUR WIRELESS EARPHONES

POWERING ON/OFF

When first using your earphones, place them into the case. When you remove them from the case, they will automatically turn ON. When you place them back into the case, they will automatically turn off.


Note: If the earphones are out of the charging case, press and hold the multifunction button on both earphones for 3 seconds to power ON or OFF.

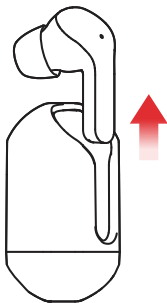

YOUR WIRELESS EARPHONES


BLUETOOTH PAIRING

When you remove your earphones from the case, they will power on and go into pairing mode. In pairing mode, one earphone will flash blue while the other will stop flashing.

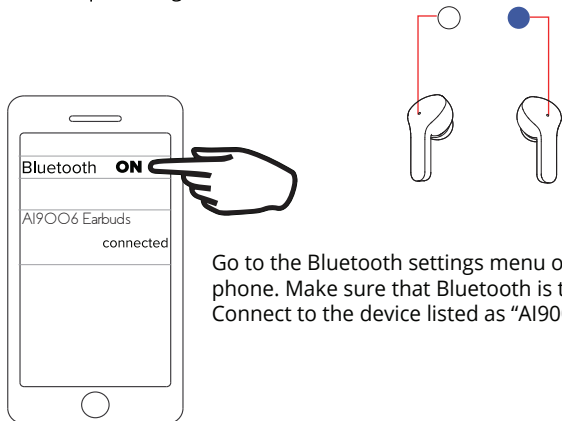

Go to the Bluetooth settings menu on your phone. Make sure that Bluetooth is turned on. Connect to the device listed as "AI9006 Earbuds."


Both earphone's LED Indicator will turn OFF once Bluetooth is connected.

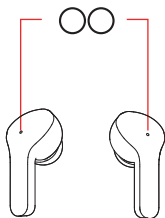

After setting up Bluetooth, the earphones will automatically re-connect to the device everytime you take them out of the charging case.

YOUR WIRELESS EARPHONES

CONTROLS

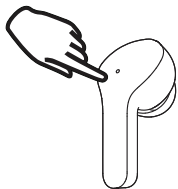

LEFT EARPHONE

Play/Pause: Press once

Previous Track: Press and hold

Volume +: Double Press

Voice Assistant: Triple Press

Answer Call: Press once (when incoming call)

End Call: Press once

Reject Call: Press and hold for 2 seconds

Power ON/OFF: Press and hold for 3 seconds

RIGHT EARPHONE

Play/Pause: Press once

Next Track: Press and hold

Volume -: Double Press


Voice Assistant: Triple Press

Answer Call: Press Once (when incoming call)

End Call: Press once

Reject Call: Press and hold for 2 seconds

Power ON/OFF: Press and hold for 3 seconds

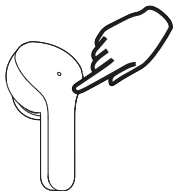

Note: Each earphone can be used alone while the other earphone is turned OFF as long as it is connected to Bluetooth.

YOUR WIRELESS HEADPHONES

A CLOSER LOOK



- 1.Previous Track/Volume -
- 2.Power On/Off/Play/Pause/Accept/End Call
- 3.Next Track/Volume +
- 4.Mic
- 5.Auxiliary Port
- 6.LED Indicator
- 7.Charging Port
- 8.MicroSD Card Reader

 
YOUR WIRELESS HEADPHONES

CHARGING

Insert one end of the included USB-C charging cable into the charging port on your headphones.



Insert the other end of the USB cable into a suitable USB charging adapter.



The LED Charging Indicator Light turn red while the headphones is charging and will turn off when fully charged.

Charging 
Charged 



YOUR WIRELESS HEADPHONES

POWERING ON/OFF

Press and hold the multifunction button for three seconds to turn ON/OFF the headphones.

Note: It is recommended that the headphones is fully charged before use.



YOUR WIRELESS HEADPHONES

BLUETOOTH PAIRING



Pairing Mode
(Blue + Red Flashing)



Once powered on, your headphones will go into pairing mode. The LED Indicator will flash red and blue alternately.



Go to the Bluetooth settings menu on your phone. Make sure that Bluetooth is turned on. Connect to the device listed as "AI9006 Headphone."

After successful pairing, you will hear a voice prompt from the headphones.

YOUR WIRELESS HEADPHONES

CONTROLS

Multifunction Button

- Press to play or pause a track.
- Press to accept an incoming call and press again to hang up.
- Press and hold to reject an incoming call.
- Press twice to redial the last called number.

Volume + Button

- Press to go to the next song.
- Press and hold to turn the volume up.

Volume - Button

- Press to go to the previous song.
- Press and hold to turn the volume down.

MicroSD Card Mode

- When inserting a MicroSD card into the MicroSD slot the headphones will automatically enter card reader mode. In card reader mode your speaker can play .mp3 music files from your card. Remove the MicroSD card to switch back to Bluetooth mode.

SPECIFICATIONS

Prodigy Move Wireless Speaker

Speaker: 52mm
Output: 4Ω 3W
Bluetooth Version: 5.2
Transmission distance: 10m
Battery: 300mah
Charge time: 1-2H
Play time: 1-2h
Size: 120*45*70mm

Prodigy Micro True Wireless Earphones

Driver Diameter: 8mm
Frequency Response: 20-20kHz
Impedance: 32ohm
Bluetooth version: v5.3
Transmission Distance: 10m
Playtime: 3-4 Hours **
Battery capacity (earphones): 30mAh
Battery capacity (Case): 230mAh
Charging input: DC 5V 1A (max)
Charging type: Type-C

**Applicable at 50% of maximum volume.
Results will be lower when volume is higher.

Over-Ear Wireless Headphones

Bluetooth version: v5.3
Transmission Distance: 10m
Playtime: 6 Hours **

**Applicable at 50% of maximum volume.
Results will be lower when volume is higher.

SAFETY PRECAUTIONS

When using the devices from your audio kit, basic safety precautions should always be followed, including:

1. READ ALL INSTRUCTIONS BEFORE USING YOUR DEVICES.
2. Never expose your devices to high temperatures, extreme cold, high humidity, moisture, or water.
3. To avoid the risk of electric shock, never attempt to open or repair your devices without the assistance of certified professionals.
4. Your devices are not to be used by children or the infirm without suitable adult supervision.
5. Always press all buttons carefully. Do not manhandle your devices.
6. Do not use your devices at temperatures under 32°F (0°C) or over 104°F (40°C).
7. Do not drop your devices, throw them, or subject them to strong impacts or physical trauma.
8. Contact the manufacturer for support if you detect any abnormalities when using your devices. In addition, do not continue to use your devices if you detect any smoke or fire.
9. Unplug your devices when not in use for extended periods of time.
10. When plugged in, do not place your devices on flammable materials such as rugs, carpets, or bedding.
11. Please recycle or dispose of your devices properly according to your municipality's laws and rules. Contact local recycling facilities and/or the manufacturer for further information.
12. Clean your devices using a soft cloth or paper towel. Do not use harsh chemicals when cleaning your devices, and never submerge your devices in water.



CAUTION

BATTERY WARNING:

- The device is equipped with an integrated lithium ion battery. The battery cannot be replaced. Do not attempt to remove the battery from the device.
- Do not dispose of in fire or expose to excessive heat.
- Do not crush, puncture, incinerate, or short circuit external contacts.
- Please recycle or dispose of the battery properly. Contact your local recycling facilities and/or the manufacturer for further information.

MAINTENANCE AND CARE

- Use a soft cloth or paper towel to clean your devices. Never use any harsh chemicals or detergents for cleaning. Make sure your devices are re-dry before charging.
- When your devices are unused, they should be stored in a cool, dry place.
- Never tug or yank on a cable connected to your devices. Connect and disconnect cables as carefully as possible.
- Never expose your devices to high temperatures or extreme cold.

FCC STATEMENT

Speaker's FCC ID : 2AL9B-AI9006SPK
TWS's FCC ID : 2AL9B-AI1012
Headphone's FCC ID : 2AL9B-AI9006

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARRANTY

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What Is Not Covered By Warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including, but not limited to, repair by unauthorized parties, tampering, modification or accident.

To Obtain Warranty Service and Troubleshooting Information:

Call 1-800-592-9541 or visit our website at www.aiwa.co.

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address of the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepaid.



AIWA

Edison, NJ 08817

© 2024 Aiwa Acquisitions LLC. All rights reserved. AIWA and associated marks are owned by Aiwa Acquisitions and used under license.
Keep all relevant information for future reference.

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Sakar International is under license.