

ACCESSORY USE & STORAGE

Your vehicle may or may not include various customizing accessories. These accessories can be easily interchanged with the factory installed parts. For easy storage of your accessories please use the storage compartment located next to charger battery compartment (see diagram #8).



Diagram #8

PLEASE NOTE:

- When operating the controller, please do not touch the antenna. As control distance and the speed will both be affected.
- If you notice a reduction in speed and control, please begin re-charging per the instructions above, or if necessary replace batteries.

PLEASE NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed
- Consult the dealer or an experienced radio/TV technician for help

NOTE:

- Do not mix old and new batteries
- Do not mix alkaline, standard (carbon zinc), or rechargeable (nickel-cadmium) batteries.

INSTRUCTION MANUAL

ITEM NO. 3022/3023



"WHERE DO YOU GO TO GET YOUR TOYS?"

Manufactured and distributed by
Planet Toys, Sarasota, FL 34242
Made in China

Colors and contents may vary
Keep content details for future reference

***IMPORTANT - IF CHARGER LIGHT DIMS OR IF VEHICLE DOES NOT RESPOND PROPERLY, PLEASE REPLACE CHARGER BATTERIES (3x AA).**

****NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.**

WARNING:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation of the device.

CONSUMER SERVICE

Please do not return to store!


For parts information, or questions please call:

1-877-FUN-TOYS

REV. 11/23/01


START UP

1. Press the release button and remove the clear cover.
2. Carefully lift off the plastic blister and unscrew and remove the vehicle.
3. To release the controller from the charger base turn the knob counter-clockwise. To lock, turn the knob clockwise (*see diagram #1*).
4. Unscrew and remove the battery covers on both the controller and the charging unit. Insert 3 "AA" batteries (not included) into the charger unit and 3 "AAA" batteries (not included) into controller unit. Then replace the battery covers and tighten the screws (*see diagrams #2 & #3*).

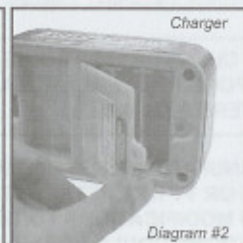

CHARGING THE VEHICLE

1. Place the vehicle on top of the charging unit in the direction of the vehicle outline as shown. Gently but firmly push the vehicle into position on the unit (*see diagram #4*).
2. Press the charging button. The charging light indicator will turn on indicating the vehicle is charging. The light indicator will turn off when the vehicle is fully charged – approx. 45 seconds (*see diagram #4*).
3. To remove vehicle from unit, gently but firmly push down on the front and lift off (*see diagram #5*).

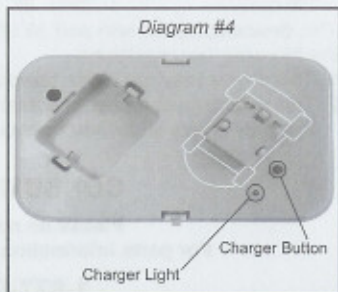

*** ONLY REMOVE THE VEHICLE FROM THE CHARGING UNIT AS SHOWN IN DIAGRAM #5. REMOVING OTHERWISE MAY CAUSE DAMAGE TO THE CHARGING UNIT!**



PLEASE NOTE:

- a). If the batteries inside the charger are low, the charging light will become dim or not light up at all, and you will not be able to charge the vehicle. Please replace the batteries.
- b). Make sure the batteries have been inserted correctly (+ or -) then prepare to charge the vehicle.
- c). Rechargeable batteries may get hot and dangerous if being continuously recharged.
- d). If charger light dims or if vehicle does not respond properly, please replace charger and/or controller batteries.

OPERATING THE VEHICLE

1. Fully extend the controller antenna.
2. Press the forward and reverse buttons (F or R) to make the vehicle move forwards and backwards. For left and right turning, press the left and right buttons (L or R) respectively. PLEASE NOTE, the vehicle will turn only when it is moving forwards or backwards. ALSO NOTE, the operation lights will turn on when the vehicle is in use (*see diagram #6*).
3. Adjust the fine tune steering lever located under the vehicle to keep it moving straight (*see diagram #7*).

