

Product specification

Bluetooth /AUX/USB/Type-C/ Wireless charging/Multi-function
push-button sofa speaker



MOED#: LKS057X

Please read the instructions carefully before use

Function introduction

Thank you for buying our latest generation of multi-functional sofa speaker, this speaker, using automatic function switching mode, perfect touch keys and strong 2.1 bass amplifier, perfect sound quality with beautiful appearance, loyal hope to give you like music, bring the extraordinary enjoyment of the digital age.

Main functions:

Universal USB playback function: USB interface supports U disk to play music through USB link.


Wireless charging: Wireless charging of mobile phones with wireless charging function is supported.

AUX: Supports audio input from mobile phones, computers, and TVs.

Note:


First of all, thank you for using our sofa speaker! Please read the product manual before use to ensure that you can use this product correctly. In order to better serve customers, product performance specifications may change, so the content of this manual may also be updated without prior notice. In order to maintain good performance, do not use it in an environment that is too cold, too hot, dusty, or humid. The recommended operating temperature is -10°C to $+40^{\circ}\text{C}$.

Panel function

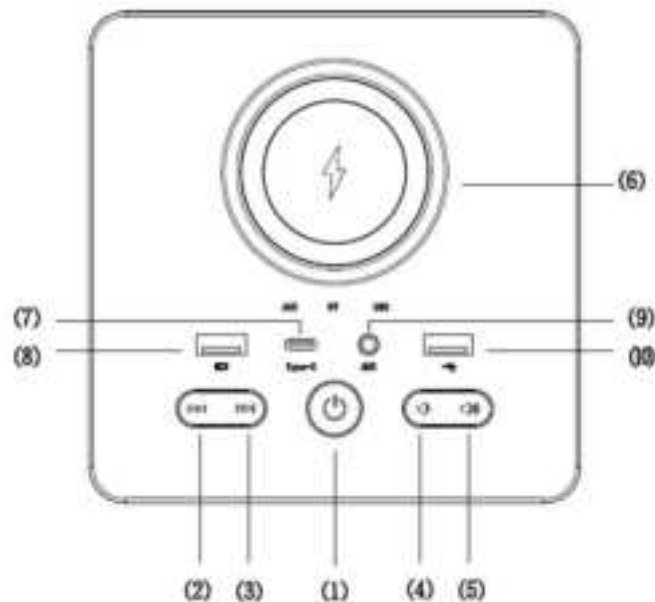

1. Power on and off : Hold down this key for 3 seconds to start the machine, and hold down the key for 3 seconds to shut down the machine.
2. Previous: Click to play the previous song (except AUX) in the playing state.
3. Next : Click to play the next song (except AUX) in the playing state.
4. Volume - : Click to reduce the volume when playing.
5. Volume + : Click to increase the volume when playing.
6. Cordless charging: Wireless charging area.
7. T-c socket: Type-c charging interface 5V2A.
8. USB charging: USB charging interface 5V2A.
9. AUX socket: audio input port.
10. USB port: USB disk play music port.

Installation instruction

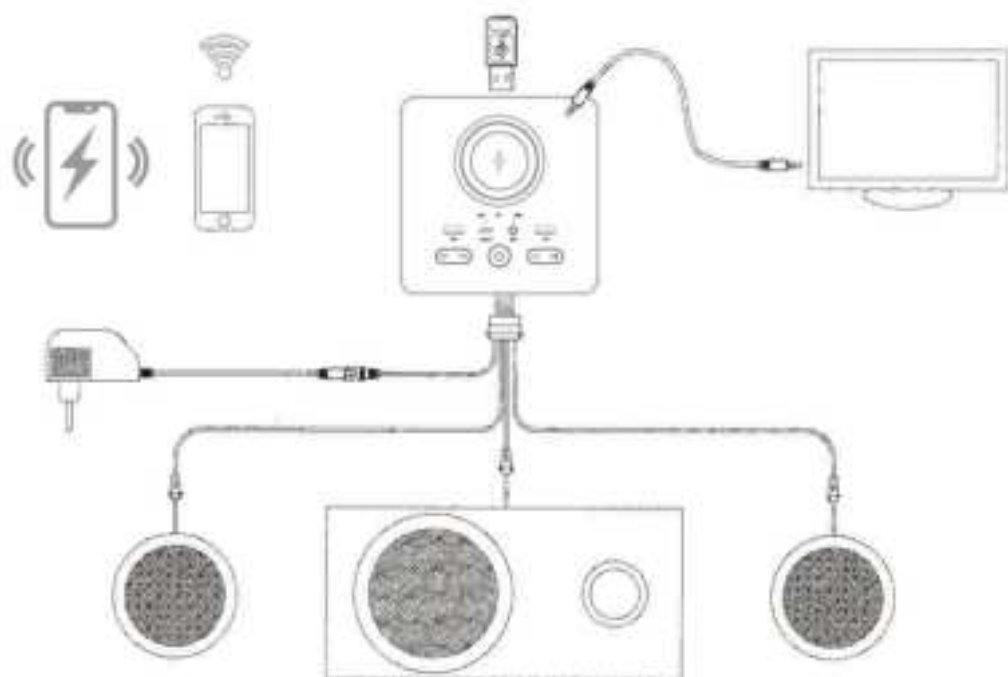

Instructions for use

Bluetooth:

Turn on the default Bluetooth mode, Bluetooth prompt light "BT" shines, turn on the Bluetooth device for searching and pairing, Bluetooth device connection name is "LKS057X" after successful connection, Bluetooth prompt light "BT" is steady on, and there is a drip prompt tone.

USB:

When the USB flash drive is inserted and the USB prompt light is on, the device automatically switches to the USB mode, scans the music files of the USB device and plays them automatically.

AUX:

When you insert a 3.5mm audio cable into the AUX port, the audio cable will automatically enter the AUX mode, and the AUX indicator will light up. Connect computer, TV, mobile phone, music playback. In this mode, you can only control the volume of the source device and mute it.

Wireless charging:

Put a mobile phone with wireless charging function in the wireless charging area, that is, start charging the mobile phone wirelessly. If the mobile phone does not have wireless charging function, it needs to be equipped with wireless receiver.

Specification parameter

Power input: DC12V/2A-3A

Frequency response: 20HZ-20KHZ

SNR: $\geq 60\text{db}$

Maximum distortion degree: $\leq 10\%$

Maximum output power: $\geq 20\text{W}$

Horn impedance: 4 OhMs

Adjustment form: key control on/off/automatic mode switch/volume
adjustment/up and down bend switch/pause play

Bluetooth distance: open distance ≥ 10 meters

Bluetooth transmission frequency: 2.4G

USB function: USB disk music playback and charging function.

Repair guide and troubleshooting

Before the machine needs to be repaired, please check the following answers to find the possible cause of the problem you have encountered. Some simple checks or minimal adjustments you have made may solve the problem and restore the normal operation. If you have questions about some inspection points or cannot solve the problem, please refer to the professional maintenance personnel for repair.

The problem	The solution
iphone/ipod cannot play	iphone/ipod version is too low, please play it manually.
It doesn't play in Android mode	Please confirm whether the phone supports OTG function, or the Android version of the phone is too low, please confirm whether the Android version is above 4.3.
No sound	The volume is set too low or the speaker is not properly connected. If there is still no sound after ensuring correct operation, you need to replace the horn.
Failure to turn on	The power supply is not plugged in properly. If it is confirmed that the power supply is faulty, replace the switching power supply. If there is no problem with the power supply, there may be a problem with the control box.
The machine is not responding	Please power off and try again. Check whether the iphone/ipod/Android phone/ USB is properly connected.
The key doesn't work	Please don't press hard. Please check whether there is foreign body or water, please restart the machine.
Bluetooth cannot be paired	Please turn off all other Bluetooth devices that have been paired, restart the machine and device and search. Please ensure that the stereo is located within 10 meters of the mobile phone and there are no obstacles to use.

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body