

VeliGear Smart Watch



User Guide

(Draft for reference only)

TABLE OF CONTENTS

Table of Contentes	01
Getting Started	02
Navigating the watch	09
Watch Functions	10
Reconnecting the Watch with Your Phone	21
Warranty and Support	22
Regulatory Notices	23



P.01

GETTING STARTED

WARNING: Do not attempt to change the batteries yourself. Opening the watch case will void your warranty. Using an incorrect battery may cause the watch to overheat or catch fire.



GETTING STARTED

CHARGE THE WATCH.

Charge the watch for at least two hours before use.

NOTE: The first time you charge the watch, the display might be blank. After you set up the watch, the charging icon ⚡ is displayed while the watch charges.

Before you charge your watch, disconnect the charger from power and thoroughly wipe the charger and watch contact pins with a soft, lint-free cloth. If needed, you may dampen the cloth with a small amount of isopropyl rubbing alcohol. Never use soap or any chemicals other than isopropyl rubbing alcohol to clean the contact pins for the watch or charger.

GETTING STARTED

ACTIVATE THE WATCH

To turn on the watch, press and hold the top watch button ① until the Setup screen is displayed on the watch.



Setup
Start Phone app & follow instructions

GETTING STARTED

INSTALL THE PHONE APP.

The VeliGear Smartwatch phone app connects your watch to your phone. Use the phone app to set and control your watch.

NOTE: Your phone must have operation system either iOS 9 or later or Android 6.0 or later.

- A. On your phone, go to www.XXXXXXXXXXX.com and select your watch.
- B. Select App Store (IOS) or Play Store (Android) to download and install VeliGear Smart Watch app on your phone.

GETTING STARTED

CONNECT YOUR WATCH TO YOUR PHONE.

A. Make sure that your phone's Bluetooth® is turned on.

NOTE: If you connect the watch to the phone using only your phone's Bluetooth settings, you cannot use the functions of your watch. You must connect the watch using the phone app to enable the phone to push notifications and other information to the watch.

If to re-pair your watch, you can go to Device setting to forget the watch from phone's Bluetooth before to do re-pairing.

B. Open the VeliGear Smartwatch phone app on your phone, then follow the on-screen instructions to set up your account.




C. The phone app automatically searches for nearby watch, press the top watch button ① so that the setup screen is displayed and the app can find your watch.

D. When the phone app finds your watch, enter the PIN displayed on your watch to phone app.

GETTING STARTED

HANDS RECALIBRATE

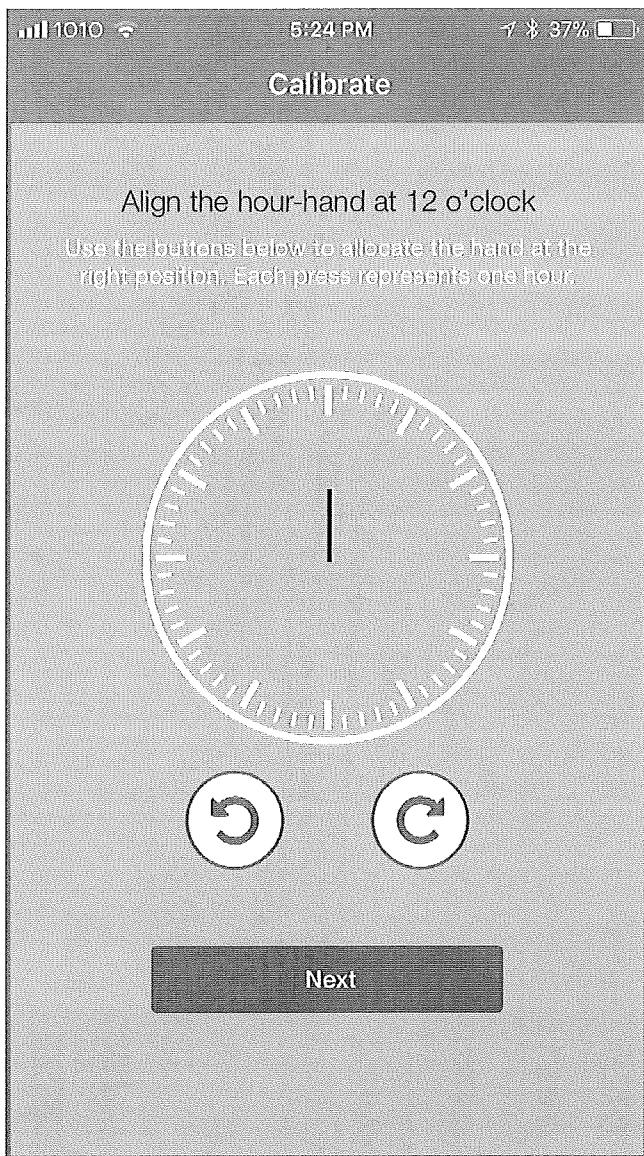

In the phone app, Select Time > Setting > Recalibrate hands, following the step to calibrate hour hand, minute hand and second hand.

GETTING STARTED

CONFIGURE YOUR WATCH USING THE PHONE APP.

A. In the phone app, enable notification permissions. You must enable permissions to use the features of your watch. Notification permissions allow you to push any notifications from a third-party app, such as Facebook or Twitter, to the watch. See your phone documentation for instructions for enabling notifications.

B. In the phone app, Select **Time, Activities, Compass, Hot key or Notifications** also controls vibration notification settings. See “Customizing Notifications” on page 19 for more information.

You have now completed your watch setup. The rest of this guide provides more information about using your watch and customizing it using the phone app.

NAVIGATION THE WATCH

DISPLAYING THE WATCH STATUS

To display the watch status, press and hold button ② for three seconds. The status icons disappear automatically after five seconds.

✖ Bluetooth status icon
Appears when Bluetooth is disconnected.

⚡ Charging status icon
Appears when the watch is connected to power.

🔋 Battery status icon
Battery power is under 25%
*display will shut down when the battery power is running out, second hand on dial will update on 5 second interval (max last another 2 days)



Battery:94%
Connected
Airplane Mode:Off

WATCH FUNCTION

CUSTOMIZING NOTIFICATIONS

ON-SCREEN NOTIFICATIONS

To enable, disable, or change the notifications that appear on the watch screen:

1. In the app, select **Notifications**
2. Tap the button next to “All Apps” to enable /disable notifications from all listed apps.
3. To enable notifications from individual app , turn off All Apps and select apps for allowing notification. And turn it off to disable notification from that app.

NOTE: Note : Tap All Apps on to enable notification from all the listed apps.

Notification Vibration Patterns setting (under construction)
Refer to app update.

NAVIGATION THE WATCH

NAVIGATE BETWEEN WATCH FUNCTIONS

To navigate Time, Activity Tracker, Compass, Weather or Timer press button **A**. To display the sub-information of each function presstime in your next selected city or view yesterday's steps in Activity Tracker, press button **2**.

DISMISSING NOTIFICATIONS

To dismiss a notification or to decline a call, press button **A**.
To dismiss all notifications, press and hold the button **A**.

TURNING AIRPLANE MODE ON OR OFF

To turn airplane mode on or off, press and release the **A** and **2** buttons at the same time.

RESTORE TO FACTORY SETTINGS

To restore the watch to factory settings, press and hold **2** button while pressing button **A** three times. Press button **2** to confirm.

WATCH FUNCTIONS



INCOMING CALL

When you have an incoming call, the caller's name is displayed if the caller is in your contacts. If the caller is not in your contacts, their phone number is displayed instead. Press button **A** to decline the call.

Incoming call
Home
+852-12345678

 
WATCH FUNCTIONS



TEXT MESSAGE

When you receive a text message, the sender's name and message are displayed.

Press button **2** to scroll, and press button **A** to dismiss the text.

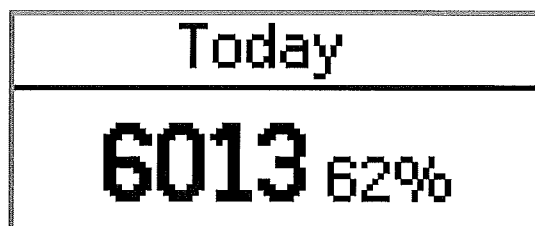

ACTIVITY TRACKER

Activity Tracker keeps track of your daily steps and your progress to your daily goal. To check today's steps, press button **A**.

Review yesterday's steps by pressing button **2**.

A notification is displayed when you reach your daily goal. Use the app to set your daily goal and check your progress over the week or the month.

WATCH FUNCTIONS



WORLD CLOCK

World Clock syncs automatically with your phone. In the app, you can select other time zones to be displayed and change the order in which the cities are displayed on the watch (max. 5 cities).

In Time mode Press button ② to scroll through your selected cities.

Note: You can go to Settings in Time function on phone app to customize the time synchronisation.

WATCH FUNCTIONS





TIMER AND STOP WATCH

In the phone app. Select Time > Setting, enable Timer and Stopwatch, features.

Press ② to toggle between Timer and stopwatch.

In Timer / Stopwatch press button ① to start / stop the timer / stopwatch when timer /stopwatch is stopped, press and hold the button ① to restart the timer / stopwatch.

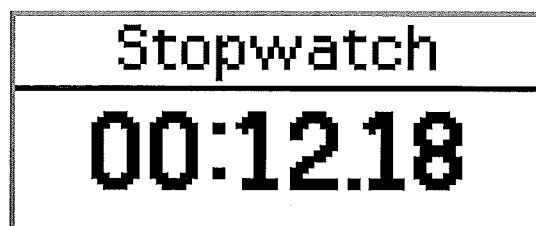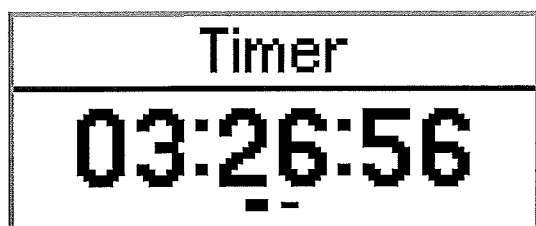


WATCH FUNCTIONS



WEATHER

Weather syncs automatically with your phone in according to the world clock setting.

 Press button ② to scroll through the weather of the cities selected in world clock.

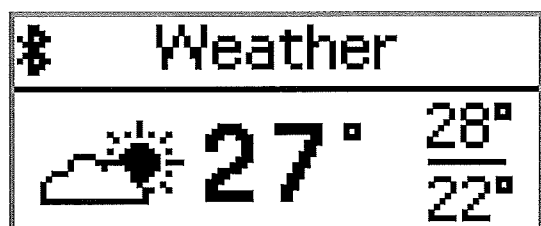


WATCH FUNCTIONS



COMPASS

In the phone app, enable compass function. In COMPASS SETTINGS to set the auto motion detection duration, screen timeout and calibrate the compass.

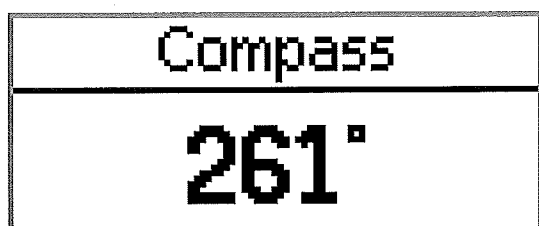


WATCH FUNCTIONS



HOT KEY

 In the phone app, select Hot key, enable hot key function and select **“Find Your Phone”**, **“Remote Camera”** or **“Control Music”** function.

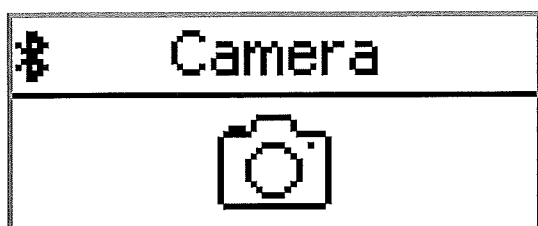

WATCH FUNCTIONS



Event Reminder

11:30 AM
Saff Meeting

CALENDAR REMINDERS

 
 
The watch syncs with the calendar on your phone to notify you of upcoming appointments.

Press button **2** to scroll for more information, such as meeting time and location.

Press button **A** to dismiss the notification.

WATCH FUNCTIONS

CITY NAVIGATION

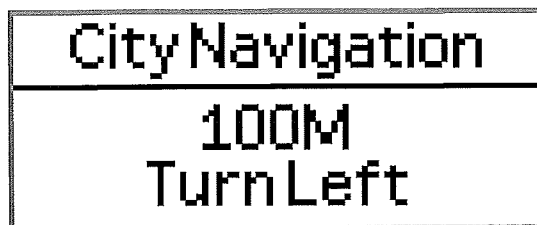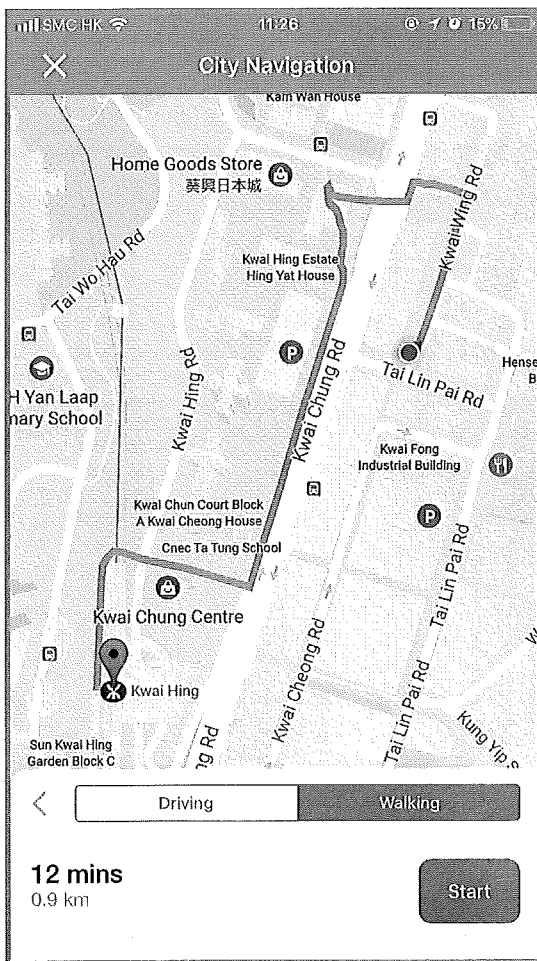

Enter the destination and select by “Driving” or “Walking”, then to press start. The app will follow the route to send waypoints alert to watch until reach to the destination.



 **Google Maps**
*Powered by Google Maps

RECONNECTING THE WATCH WITH YOUR PHONE

If the phone and watch are disconnected, the watch displays the Bluetooth icon 

To reconnect:

1. Make sure that your phone's Bluetooth is turned on. See your phone documentation for instructions
2. Open the VeliGear Smartwatch app on your phone.
3. Be sure that airplane mode is off, and press any button to reconnect the watch.

NOTE: If to re-pair your watch, you can go to Device setting to forget the watch from phone's Bluetooth before to do re-pairing.



WARRANTY AND SUPPORT

For warranty and support information.

go to www.xxxxxxxxxxxx.com

This site contains additional online documentation as well as information about accessories and spare parts.

REGULATORY NOTICES

FCC ID: O4GDAVGEAR

Model: XXXXXXXX

FCC STATEMENT

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

The grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment.

The RF Exposure Compliance distance is 5 millimeters.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Technical Specification:

Frequency operation range: 2402MHz ~ 2480MHz

Maximum transmit power: <10dBm (max.)



CE P.23

Printed in China