

vtech®

Instruction Manual

Sing It Out Karaoke Microphone™



INTRODUCTION

Thank you for purchasing the **Sing It Out Karaoke Microphone™**. Sing along to the 15 built-in songs with or without the vocal track! You can also sing along to your favorite songs by connecting your own external music player via *Bluetooth®*. Enjoy playing around with the five funny voice effects. Let's start the show!



INCLUDED IN THE PACKAGE

- Sing It Out Karaoke Microphone™
- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

 
ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE

Il est conseillé de sauvegarder ce manuel d'instructions car il comporte des informations importantes.

Unlock the Packaging Locks

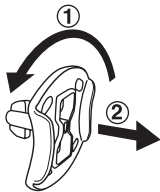

① Rotate the packaging locks 90 degrees counterclockwise.

 
② Pull out the packaging locks and discard.

GETTING STARTED

The Sing It Out Karaoke Microphone™ is in Try-Me mode in the packaging. To exit Try-Me mode, slide the **On/Off Switch** from **On** to **Off** and back to **On** again.

Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw, and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 3 new AAA (LR03/AM-4) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

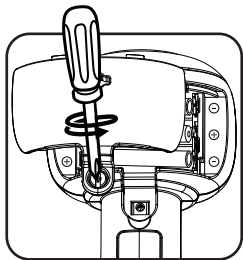

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.



ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.
Tenir les piles ou accumulateurs hors de portée des enfants.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries (if removable) from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

IMPORTANT : INFORMATIONS CONCERNANT LES PILES

Les piles fournies avec le produit permettent de tester le jouet en magasin mais ne sont pas des piles longue durée.

- Mettre en place les piles ou les accumulateurs en respectant les polarités + et -.
- Ne pas mélanger des piles ou des accumulateurs neufs avec des usagés.
- Ne pas mélanger différents types de piles : alcalines, zinc-carbone et rechargeables.
- Seules des piles du type recommandé doivent être utilisées.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le -).
- Retirer les piles ou les accumulateurs en cas de non-utilisation prolongée.
- Enlever les piles ou les accumulateurs usagés du jouet.
- Ne les jeter ni au feu ni dans la nature.

PILES RECHARGEABLES

- Enlever, lorsque c'est possible, les accumulateurs du jouet pour les recharger.
- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.
- Ne pas tenter de recharger des piles non rechargeables.

PRODUCT FEATURES

1. On/Off Switch

To turn the unit **On**, slide the switch to the **On** position. To turn the unit **Off**, slide the switch to the **Off** position.



 
2. Microphone

Speak or sing into the microphone, and the built-in speaker will amplify your voice.



3. Play/Pause Button

Press the **Play/Pause Button** to play or pause the music.

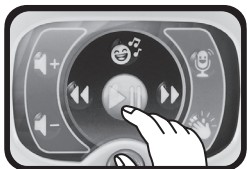

4. Next Song Button

Press the **Next Song Button** to play the next song.



5. Previous Song Button

Press the **Previous Song Button** to play the previous song.



6. Vocal Track/Sound Effects Button

Press the **Vocal Track/Sound Effects Button** in Music mode to remove a vocal track from the 15 built-in songs. Press again to add it back in.

In *Bluetooth*® mode, press the **Vocal Track/Sound Effects Button** to play funny sound effects.



7. Volume Up Button

Press the **Volume Up Button** to increase the volume of the microphone.



8. Volume Down Button

Press the **Volume Down Button** to decrease the volume of the microphone.



9. Voice Changer Button

Press the **Voice Changer Button** to change your voice to sound high-pitched, low-pitched, robotic and more.



10. Applause Button

Press this button to trigger applause sound effects.



11. Bluetooth® Button

Hold down the **Bluetooth® Button** to connect to your own external music player. When the microphone is pairing, the **Bluetooth®** light will flash. When the microphone is successfully connected with a device, the **Bluetooth®** light will remain on.



Bluetooth® Connection

1. Hold the **Bluetooth® Button** down for several seconds until the **Bluetooth® Button** lights up and flashes.
2. Enter the **Bluetooth®** interface of your device and begin searching for **Bluetooth®** devices.
3. Select “VTech 5510 Microphone” when you see it displayed on your device.
4. The microphone will provide audio for the PIN code, which you will then enter on your device.
5. When the **Bluetooth®** connection is successful, you will hear a sound effect and the phrase “**Bluetooth®** connected.” The **Bluetooth® Button** light will remain on.
6. To exit **Bluetooth®** mode, hold the **Bluetooth® Button** until you hear the phrase “**Bluetooth®** disconnected.”
7. The next time you initiate the **Bluetooth®** connection, the microphone will automatically search and connect to the most recent **Bluetooth®** device that it was connected to. You will not need to enter the PIN code again.
8. For best results, maintain a distance between the **Bluetooth®** device and Sing It Out Karaoke Microphone™ of approximately 10 feet or less; the Sing It Out Karaoke Microphone™ may disconnect when the distance to the **Bluetooth®** device exceeds 10 feet.

AUTOMATIC SHUT-OFF

To preserve battery life, the Sing It Out Karaoke Microphone™ will automatically shut off after several minutes without any button or voice input. The microphone can be turned on again by pressing any button.

LOW BATTERIES

If the unit powers down or if the light fades out during play, please install a new set of batteries.

ACTIVITIES

1. Sing with Me

Sing along to the 15 built-in songs in Music mode with or without the vocal.

2. Sing Your Favorite Song

Connect your external music device with the microphone via *Bluetooth®*. Let's play your favorite song!

3. Party Time

Have fun speaking or singing with five different voice effects! You can also hear applause sound effects at any time by pressing the **Applause Button**.

SONG LYRICS

Song 1

Oats, peas, beans and barley grow.
Oats, peas, beans and barley grow.
Do you or I or anyone know how oats,
peas and beans and barley grow?

Oats, peas, beans and barley grow.
Oats, peas, beans and barley grow.
Do you or I or anyone know how oats,
peas and beans and barley grow?

Song 2

London Bridge is falling down,
Falling down, falling down,
London Bridge is falling down,
My fair lady.

Song 3

Oh, do you know the muffin man,
The muffin man, the muffin man,
Oh, do you know the muffin man,
That lives on Drury Lane?

Oh, yes, I know the muffin man,
The muffin man, the muffin man,
Oh, yes, I know the muffin man,
That lives on Drury Lane.

Song 4

Little Bo-Peep has lost her sheep
And doesn't know where to find them.
Leave them alone and they'll come home,
Wagging their tails behind them.

Little Bo-Peep fell fast asleep
And dreamt she heard them bleating.
But when she awoke, she found it a joke,
For they were all still fleeing.

Song 5

Lou, Lou, skip to my Lou,
Lou, Lou, skip to my Lou,
Lou, Lou, skip to my Lou,
Skip to my Lou, my darlin'!

Sing, sing, sing with me,
Sing, sing, sing with me,
Sing, sing, sing with me,
Sing with me, my darlin'!

Song 6

Twinkle, twinkle, little star,
How I wonder what you are.
Up above the world so high,
Like a diamond in the sky.
Twinkle, twinkle, little star,
How I wonder what you are.

Song 7

Here we go looby loo,
Here we go looby light,
Here we go looby loo,
All on a Saturday night!
You put your right hand in,
You take your right hand out,
You give your hand a shake, shake, shake!
And turn yourself about!

Song 8

The singer with the mic sings do re me,
do re me,
do re me.
The singer with the mic sings do re me,
Won't you sing with me?

The singer with mic sings la la la,
La la la,
La la la.
The singer with the mic sings la la la,
La la la la la!

Song 9

Row, row, row your boat,
Gently down the stream.
Merrily, merrily, merrily, merrily,
Life is but a dream.

Sing, sing, sing a song,
Sing it from the start.
Merrily, merrily, merrily, merrily,
Sing it from your heart.

Song 10

One, two, buckle my shoe.
Three, four, shut the door.
Five, six, pick up sticks.
Seven, eight, lay them straight.
Nine, ten, do it again!

Song 11

Hey, diddle, diddle, the cat and the fiddle,
The cow jumped over the moon.
The little dog laughed to see such fun,
And the dish ran away with the spoon!

Song 12

Hot cross buns,
Hot cross buns,
One a penny,
Two a penny,
Hot cross buns.

Give them to your daughters,
Give them to your sons,
One a penny,
Two a penny,
Hot cross buns.

Song 13

The itsy bitsy spider went up the water spout.
Down came the rain and washed the spider out.
Out came the sun and dried up all the rain
And the itsy bitsy spider went up the spout again.

Song 14

Here we go 'round the mulberry bush,
The mulberry bush,
The mulberry bush,
Here we go 'round the mulberry bush,
So early in the morning.

This is the way we wash our face,
Wash our face,
Wash our face,
This is the way we wash our face,
So early in the morning.

Song 15

Old MacDonald had a farm,
E-I-E-I-O!
And on his farm he had a cow,
E-I-E-I-O!
With a moo moo here!
And a moo moo there!
Here a moo, there a moo,
Everywhere a moo moo!
Old MacDonald had a farm,
E-I-E-I-O!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

If there is a *Bluetooth*® connection problem, please follow these steps:

1. Delete “VTech 5510 Microphone” from your device’s list of paired *Bluetooth*® devices.
2. If applicable, select to forget the pair code of the microphone.
3. Hold down the ***Bluetooth*® Button** on the microphone to initiate the pairing process.
4. Reconnect the microphone to your device by selecting “VTech 5510 Microphone” from the list of available *Bluetooth*® devices on your device.
5. Enter the audio PIN code provided by the microphone.

IMPORTANT NOTE

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S., **1-877-352-8697** in Canada, or visit our website **vtechkids.com** and fill out our **Contact Us** form located under the **Customer Support** link. Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- 1) L'appareil ne doit pas produire de brouillage;
- 2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Supplier's Declaration of Conformity
47 CFR § 2.1077 Compliance Information

Trade Name: VTech®
Model: 5510
Product Name: Sing It Out Karaoke Microphone™
Responsible Party: VTech Electronics North America, L.L.C.
Address: 1156 W. Shure Drive, Suite 200
Arlington Heights, IL 60004
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

CAN ICES-003(B)/NMB-003(B)

Bluetooth® Statement

The *Bluetooth*® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by **VTech**® is under license.

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com
vtechkids.ca

Read our complete warranty policy online at
vtechkids.com/warranty
vtechkids.ca/warranty



TM & © 2021 VTech Holdings Limited.
All rights reserved.
IM-551000-004
Version:0