 



802.11be-EHT320 - Ant 0

Channel 127 (6585MHz)

The Reference Level

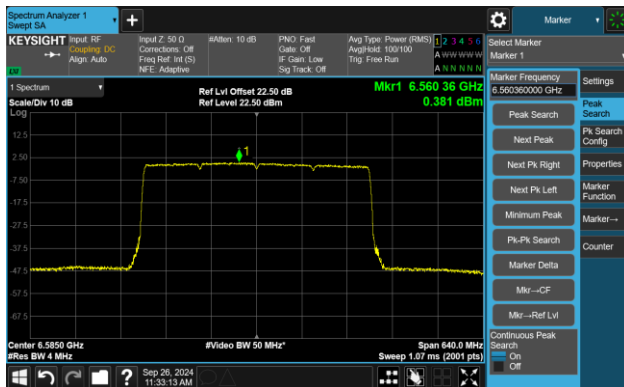


 The Mask Data

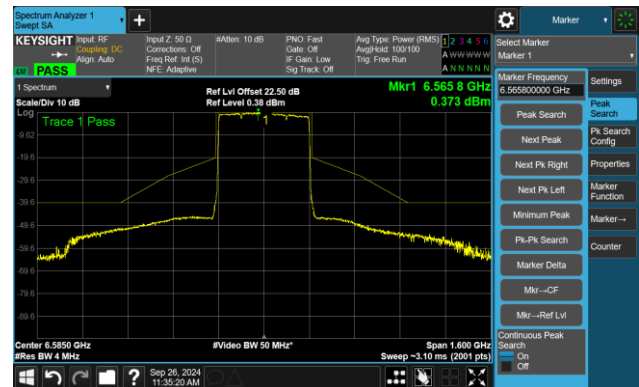


Channel 159 (6745MHz)

 The Reference Level

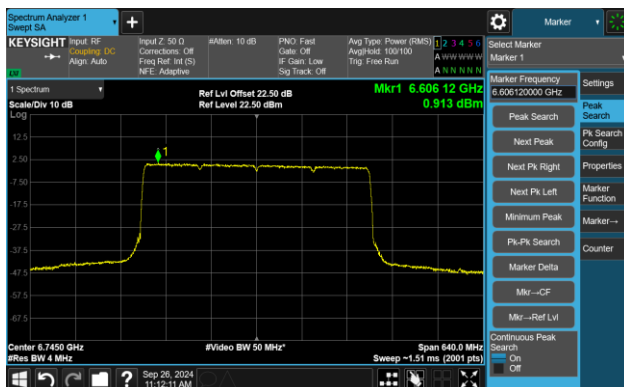

The Mask Data

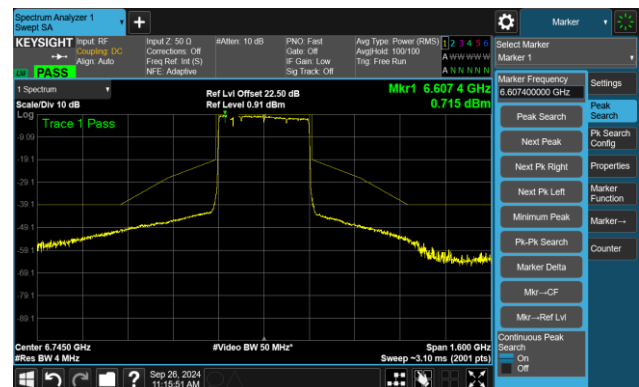 

Channel 191 (6905MHz)

The Reference Level



 
The Mask Data




802.11ax-HE20 - Ant 1

Channel 1 (5955MHz)

The Reference Level

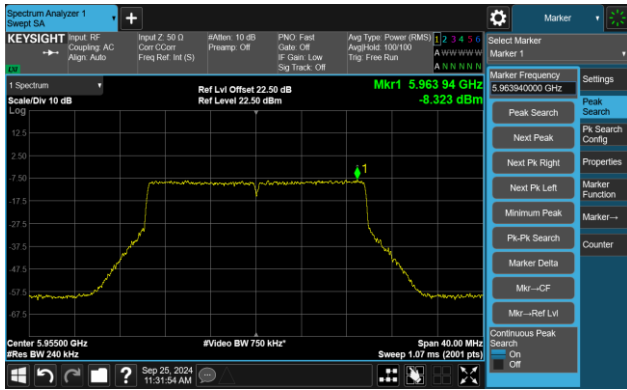


The Mask Data

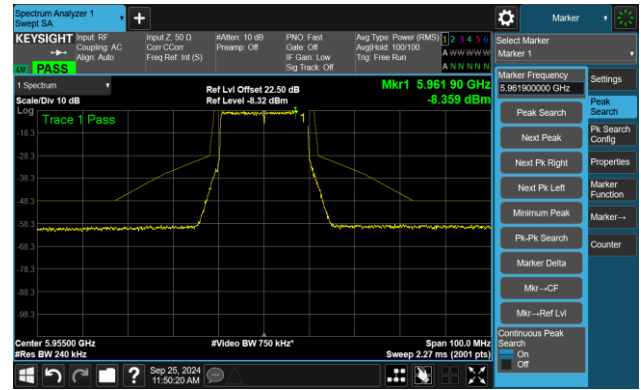 


Channel 49 (6195MHz)

 The Reference Level

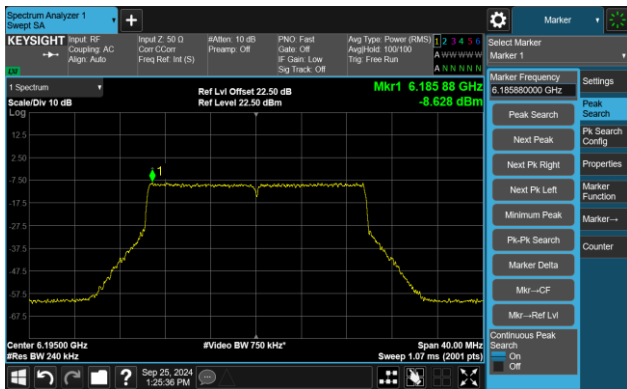


The Mask Data

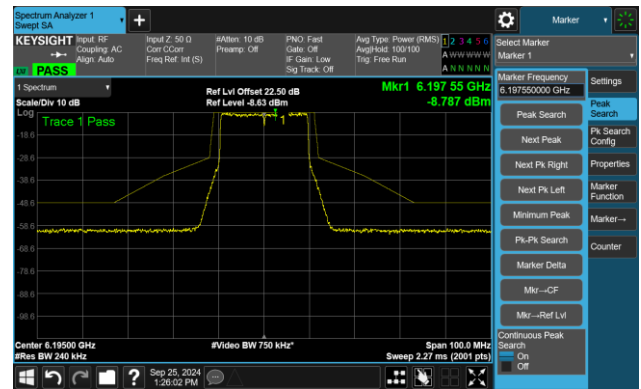 


Channel 93 (6415MHz)

 The Reference Level

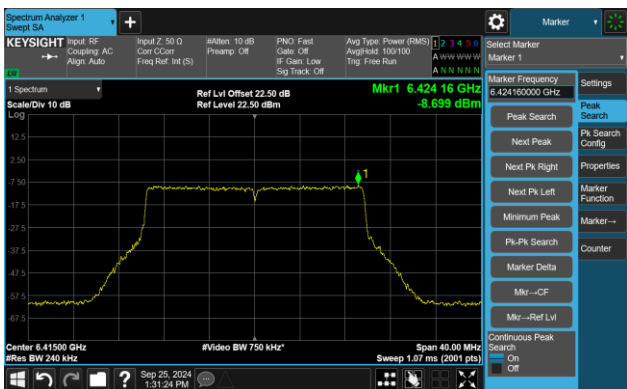


The Mask Data

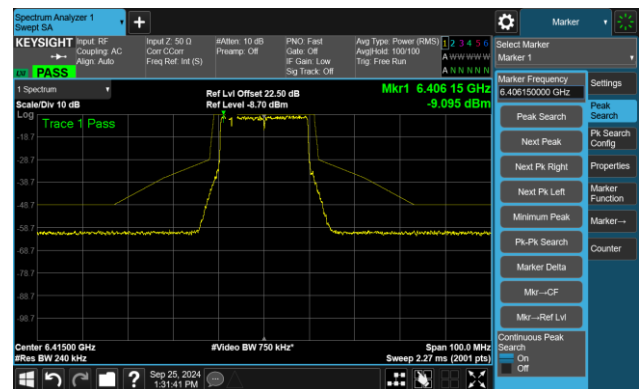 


802.11ax-HE20 - Ant 1

Channel 97 (6435MHz)

 The Reference Level

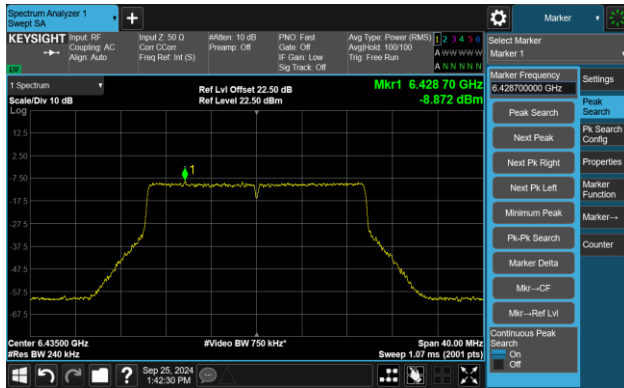


The Mask Data

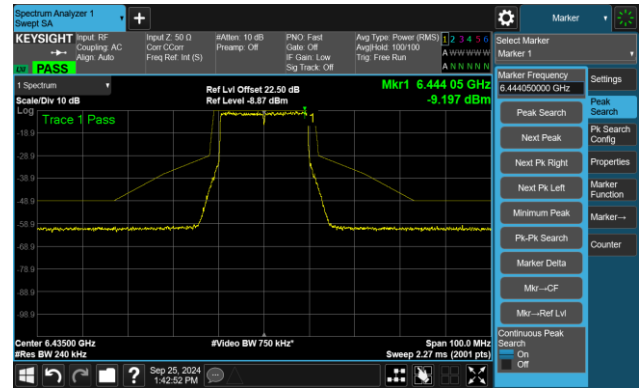 


Channel 105 (6475MHz)

 The Reference Level

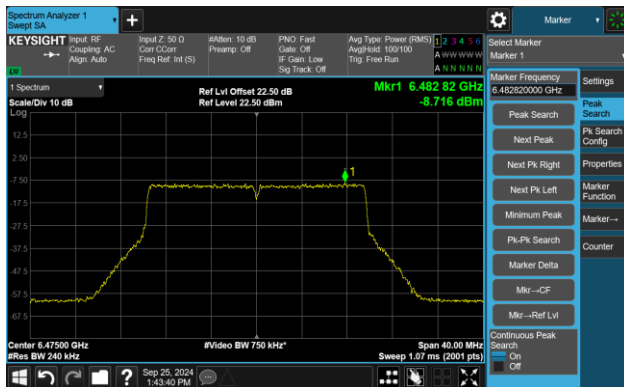


The Mask Data

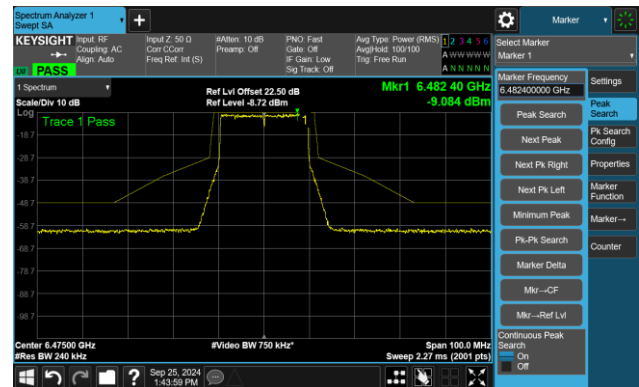 


Channel 113 (6515MHz)

 The Reference Level

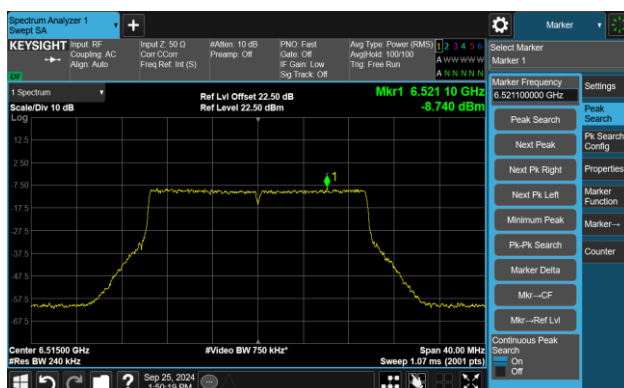


The Mask Data

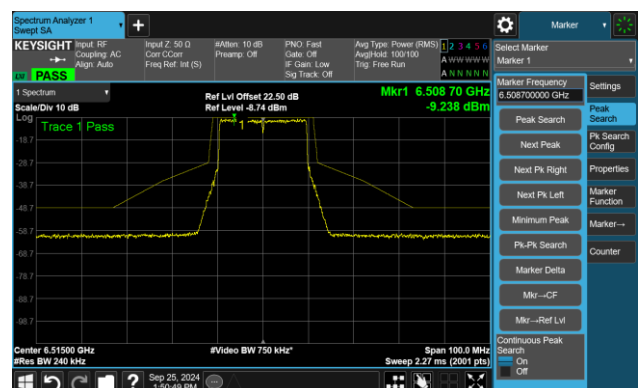 


802.11ax-HE20 - Ant 1

Channel 117 (6535MHz)

 The Reference Level

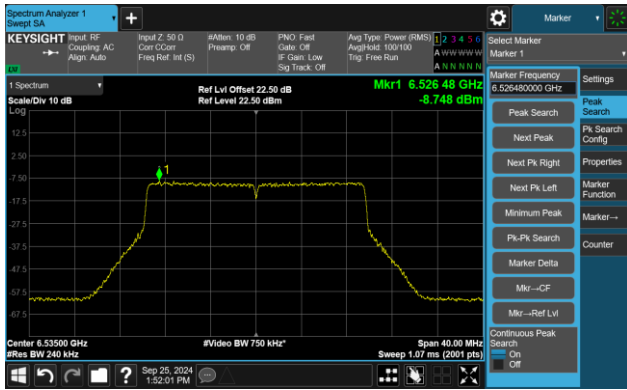


The Mask Data

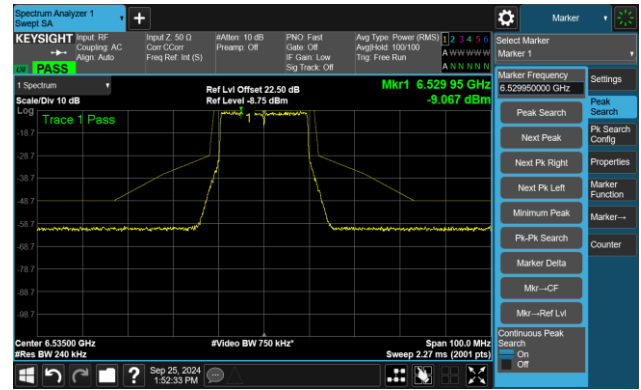 


Channel 149 (6695MHz)

 The Reference Level

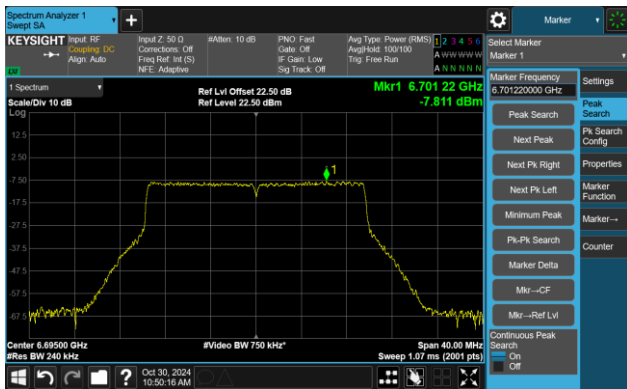


The Mask Data

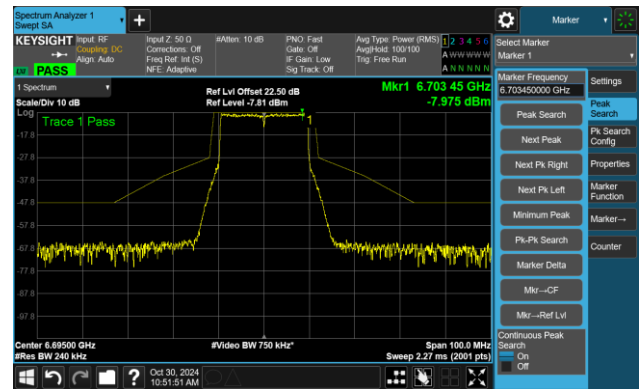 


Channel 181 (6855MHz)

 The Reference Level

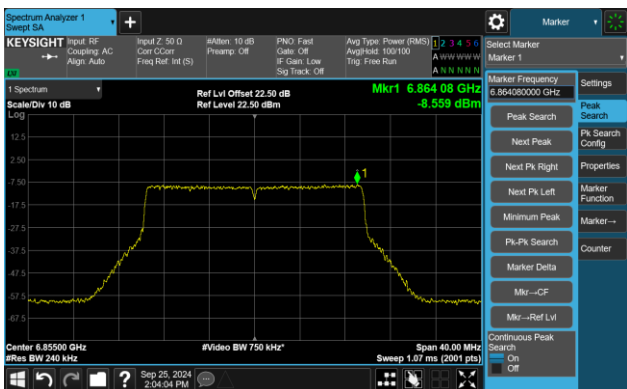


The Mask Data

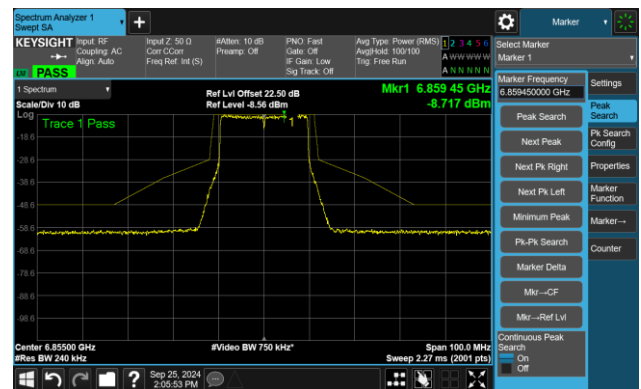 


802.11ax-HE20 - Ant 1

Channel 185 (6875MHz)

 The Reference Level

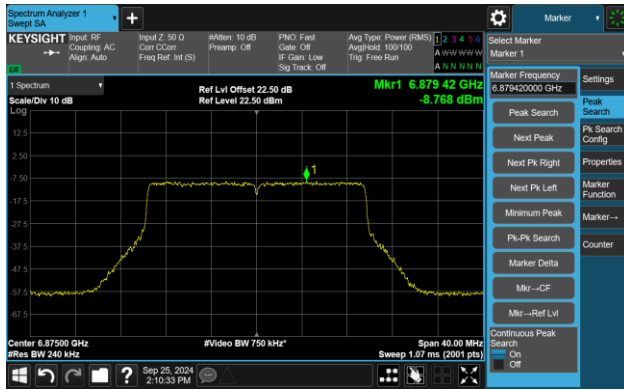


The Mask Data

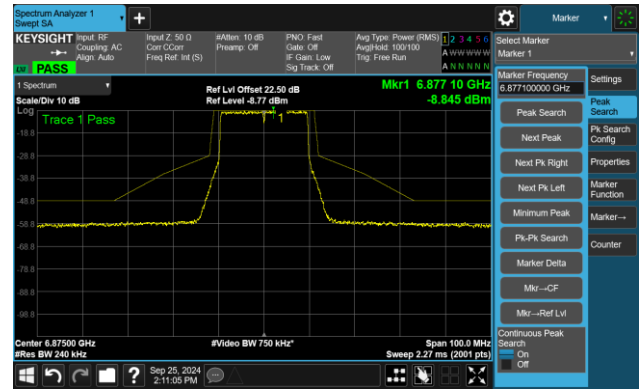 


Channel 189 (6895MHz)

 The Reference Level

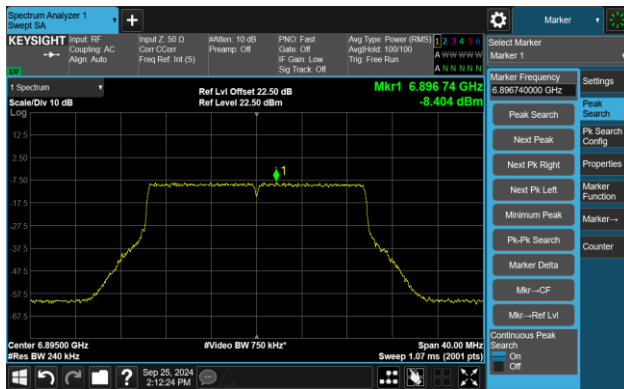

The Mask Data

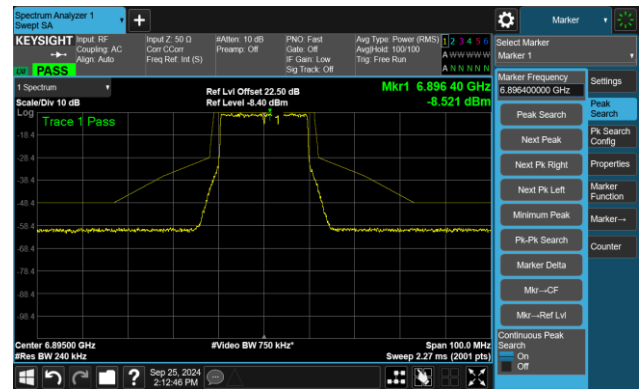 


Channel 209 (6995MHz)

The Reference Level



 The Mask Data

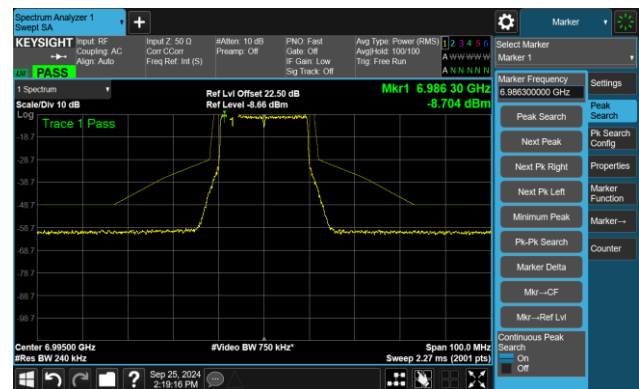


802.11ax-HE20 - Ant 1

Channel 229 (7095MHz)

The Reference Level



 
The Mask Data

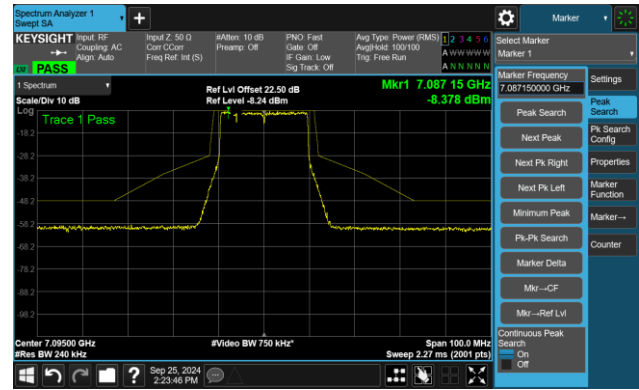


802.11ax-HE40 - Ant 1

Channel 3 (5965MHz)

 The Reference Level

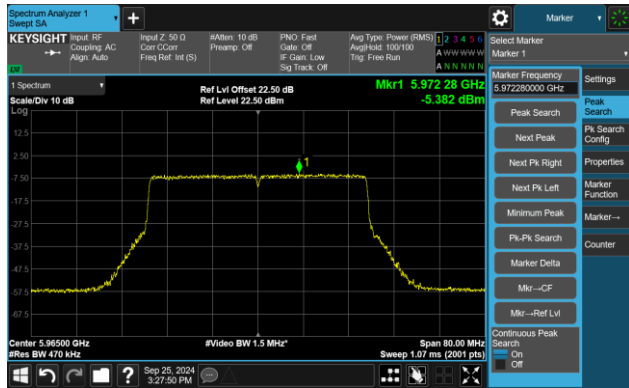


The Mask Data

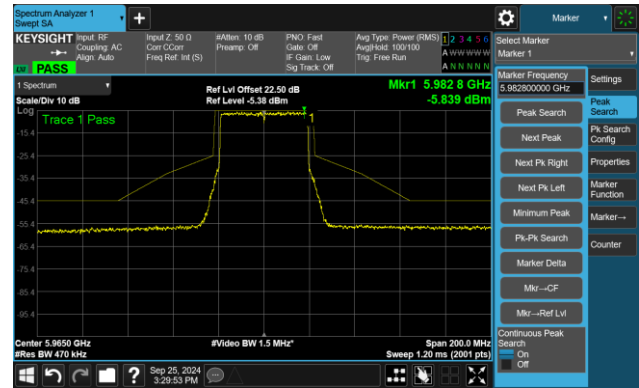 


Channel 51 (6205MHz)

 The Reference Level

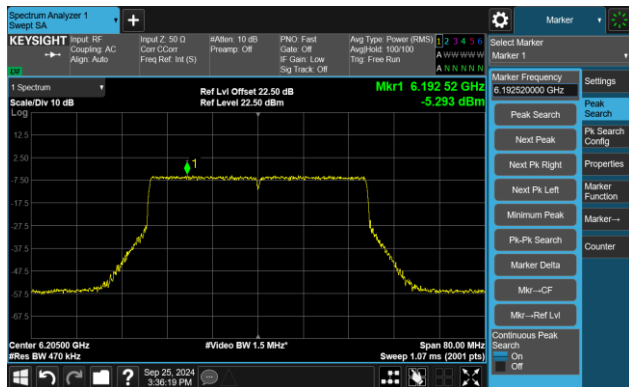


The Mask Data

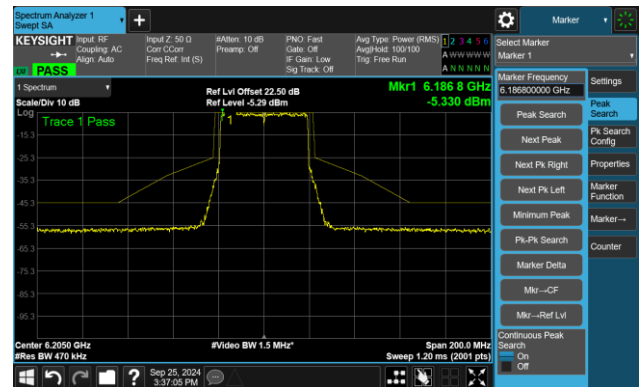 


Channel 91 (6405MHz)

 The Reference Level

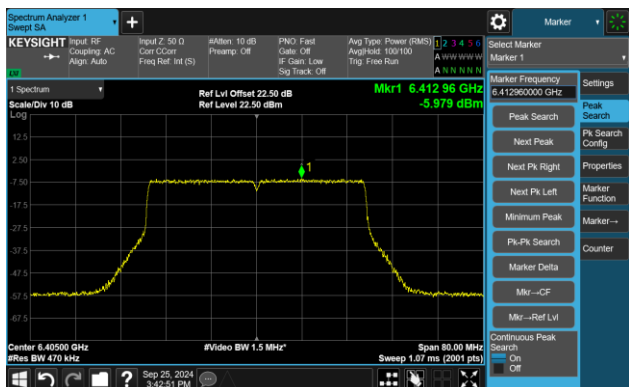


The Mask Data

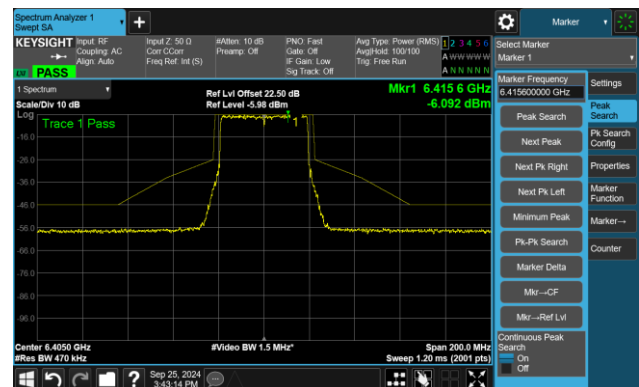 


802.11ax-HE40 - Ant 1

Channel 99 (6445MHz)

 The Reference Level

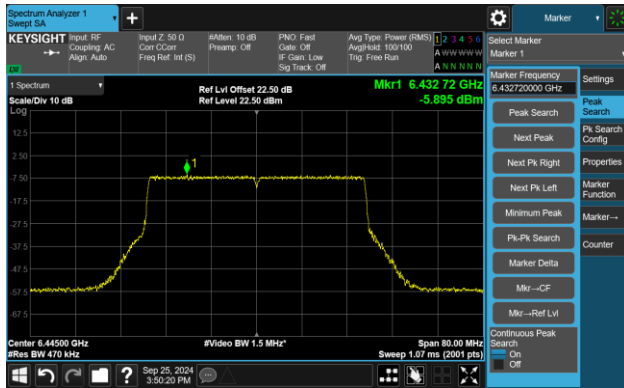


The Mask Data

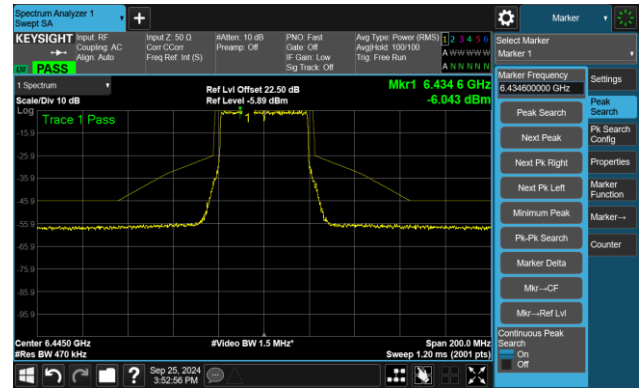 


Channel 107 (6485MHz)

 The Reference Level

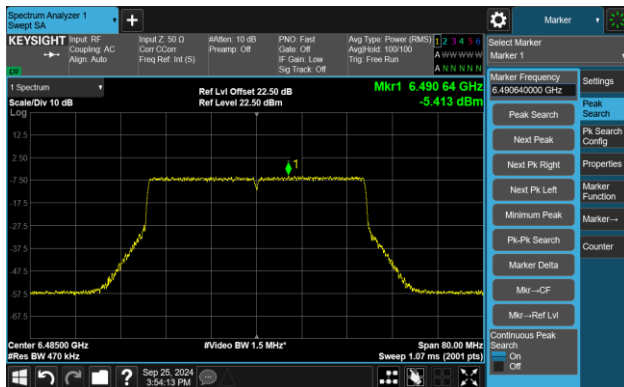


The Mask Data

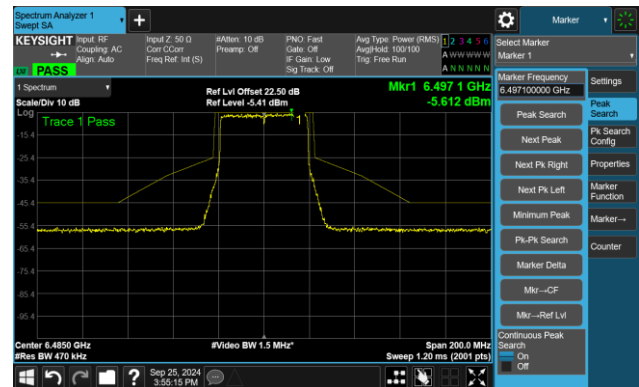 


Channel 115 (6525MHz)

 The Reference Level

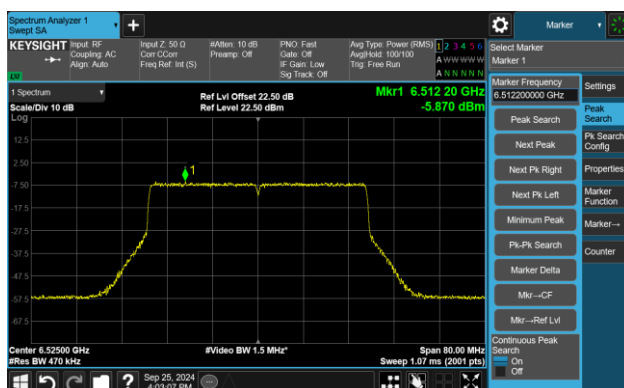

The Mask Data

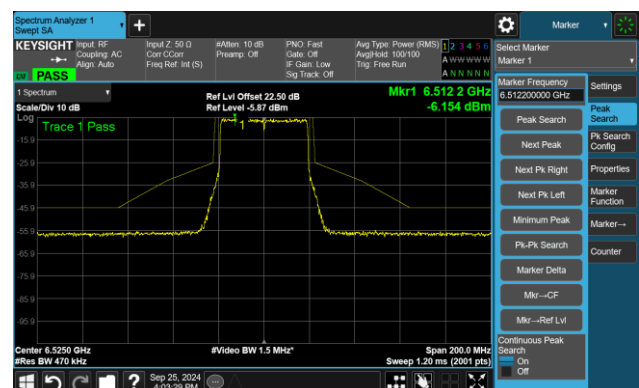 


802.11ax-HE40 - Ant 1

Channel 123 (6565MHz)

The Reference Level




 The Mask Data

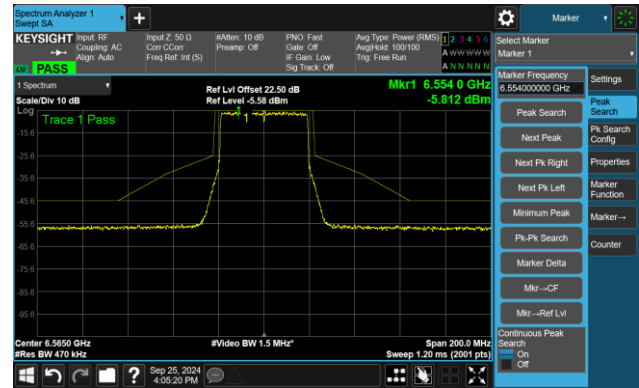


Channel 147 (6685MHz)

 The Reference Level

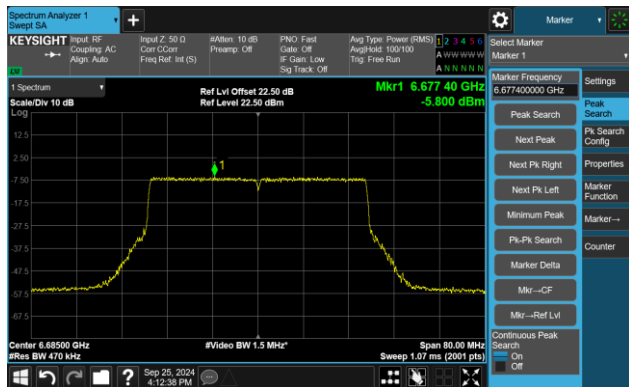


The Mask Data

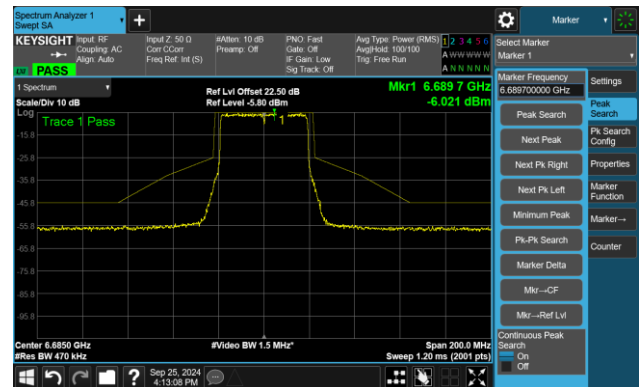 


Channel 179 (6845MHz)

 The Reference Level

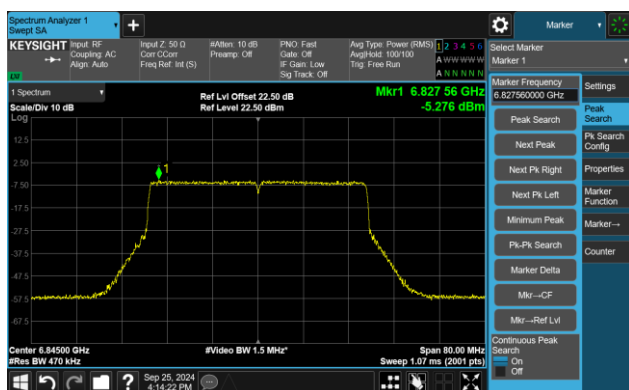


The Mask Data

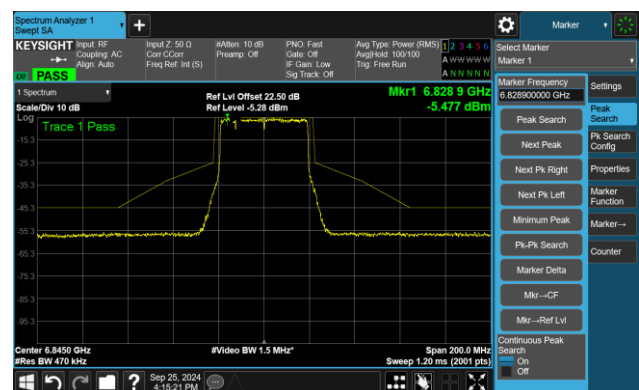 


802.11ax-HE40 - Ant 1

Channel 187 (6885MHz)

 The Reference Level

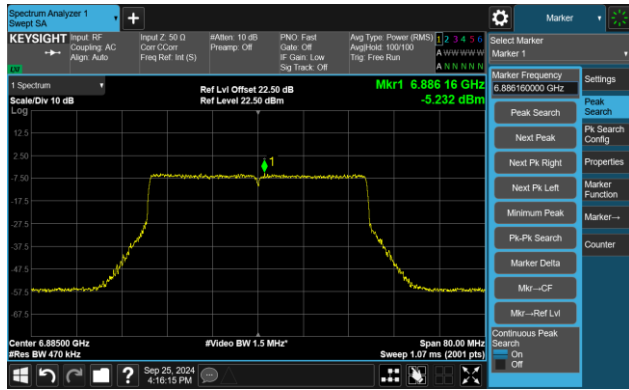

The Mask Data

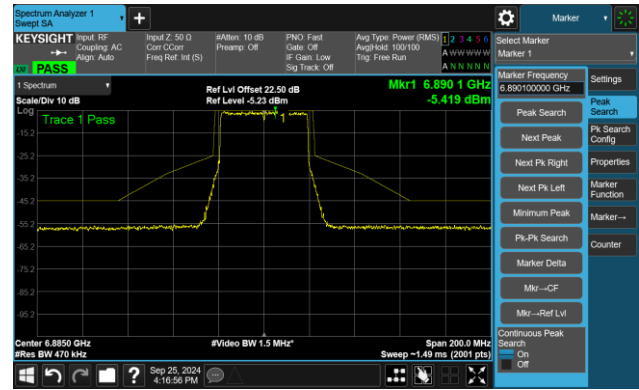 


Channel 195 (6925MHz)

The Reference Level




 The Mask Data

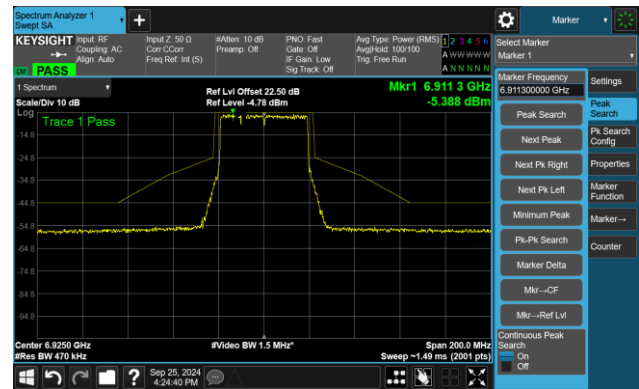


Channel 211 (7005MHz)

 The Reference Level

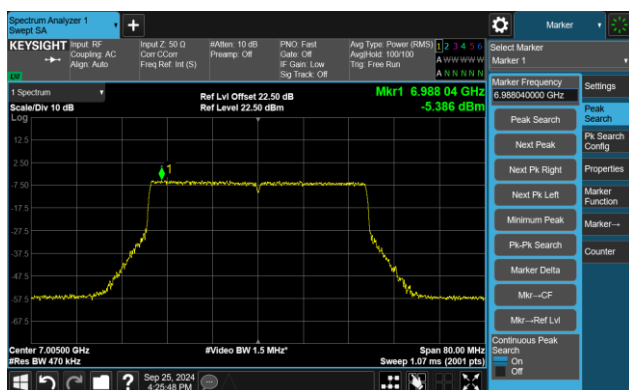


The Mask Data

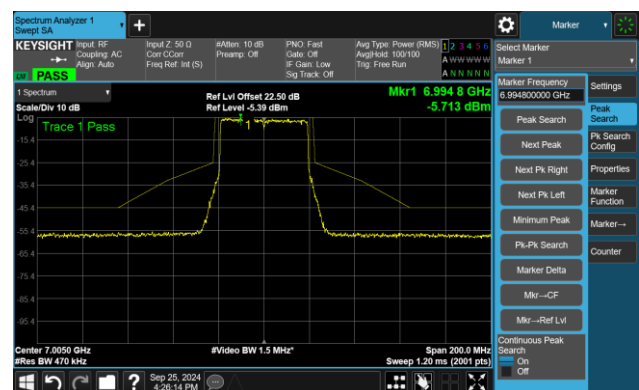 


802.11ax-HE40 - Ant 1

Channel 227 (7085MHz)

 The Reference Level

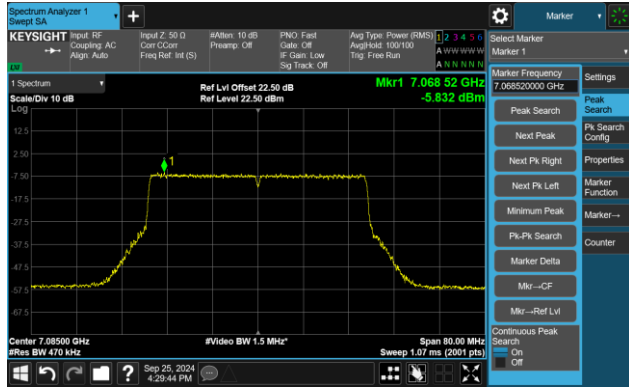

The Mask Data

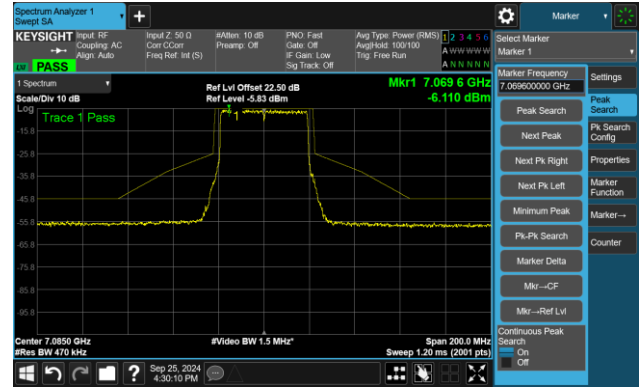 


802.11ax-HE80 - Ant 1

Channel 7 (5985MHz)

The Reference Level



 The Mask Data

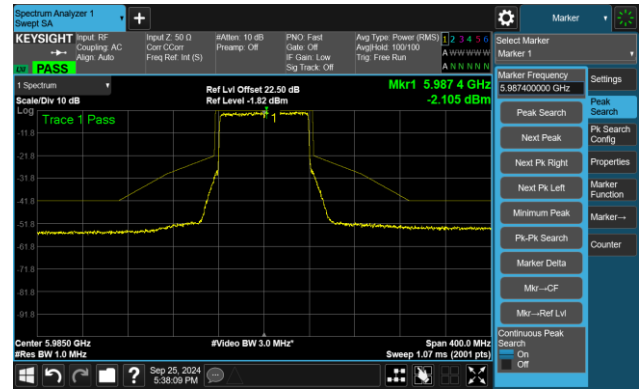


Channel 55 (6225MHz)

The Reference Level




 The Mask Data

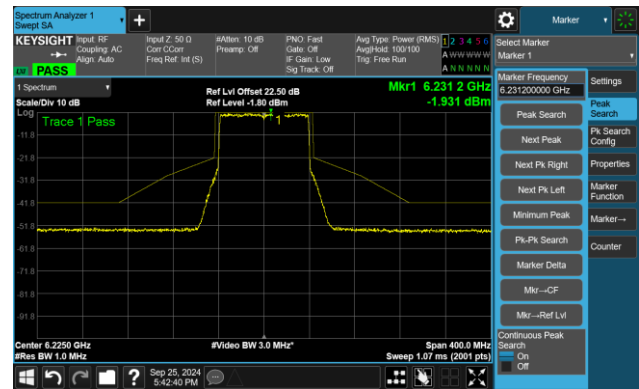


Channel 87 (6385MHz)

 The Reference Level

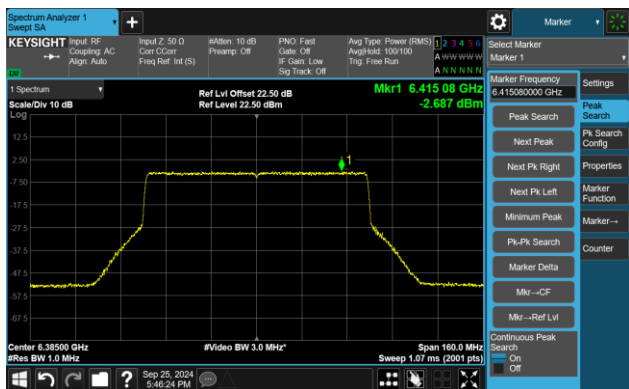


The Mask Data

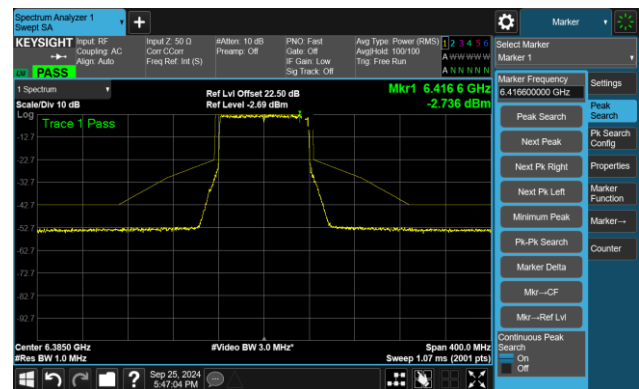 


802.11ax-HE80 - Ant 1

Channel 103 (6465MHz)

 The Reference Level

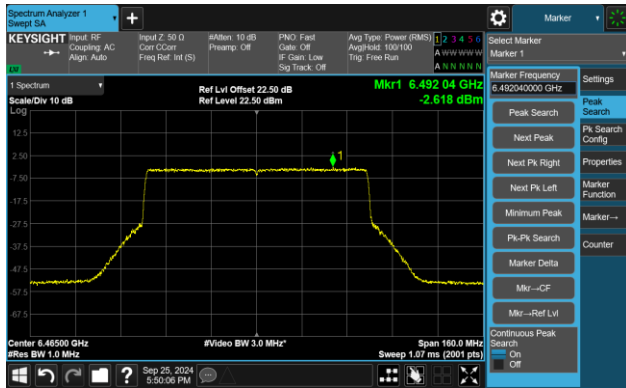


The Mask Data

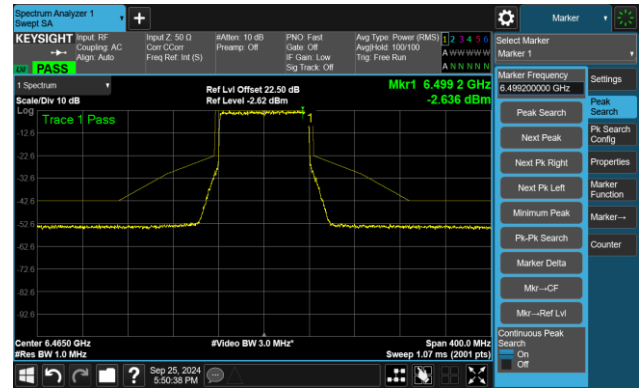 


Channel 119 (6545MHz)

 The Reference Level

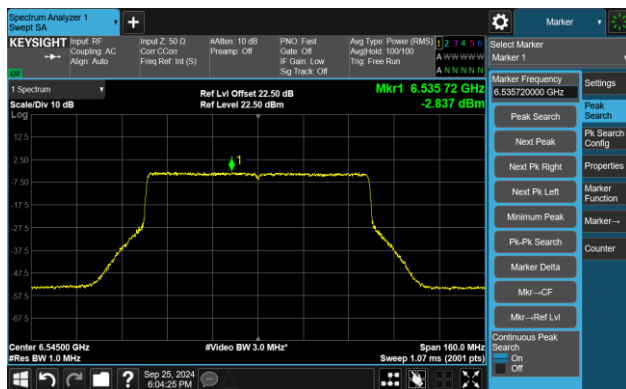

The Reference Level

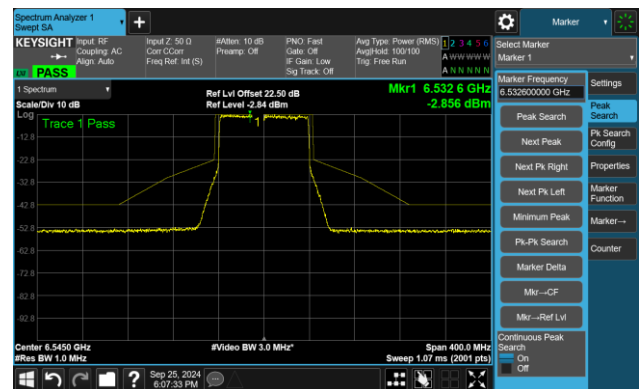 


Channel 135 (6625MHz)

The Reference Level



 
The Mask Data

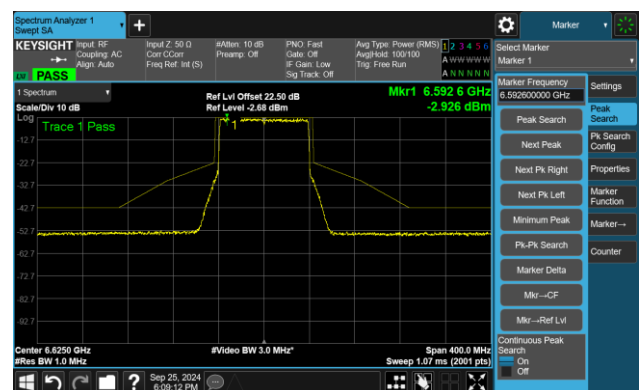


802.11ax-HE80 - Ant 1

Channel 151 (6705MHz)

 The Reference Level

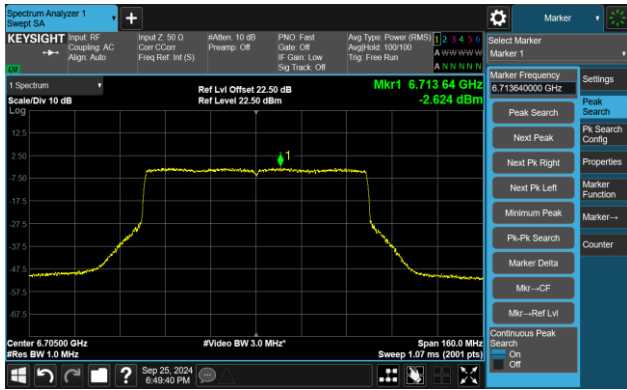

The Mask Data

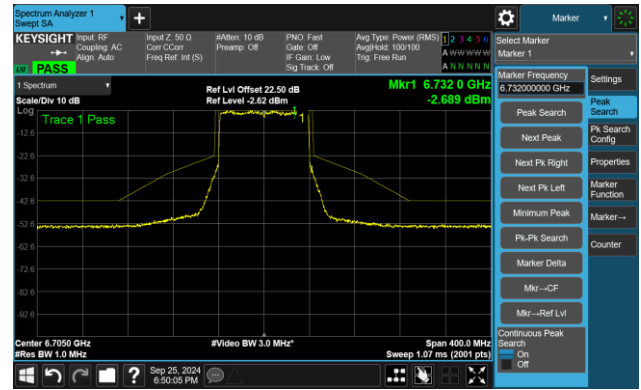 


Channel 167 (6785MHz)

The Reference Level




 The Mask Data

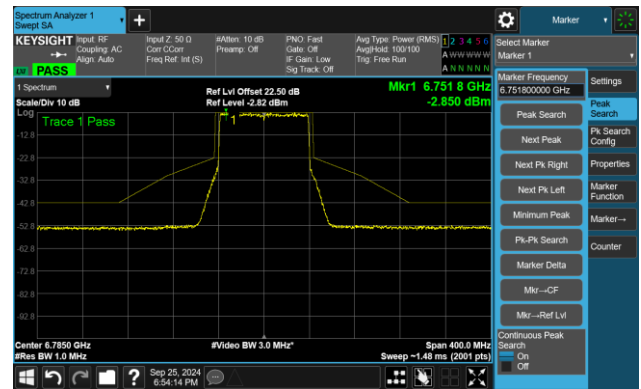


Channel 183 (6865MHz)

 The Reference Level

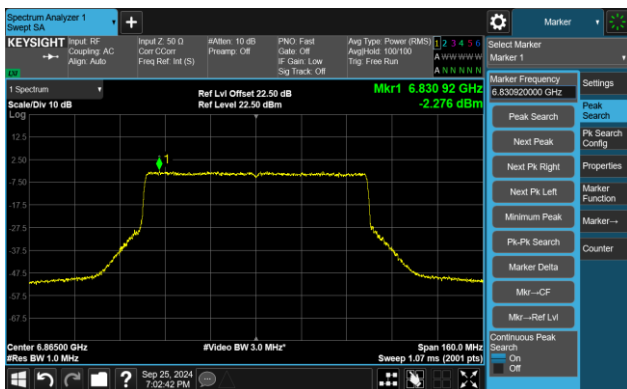


The Mask Data

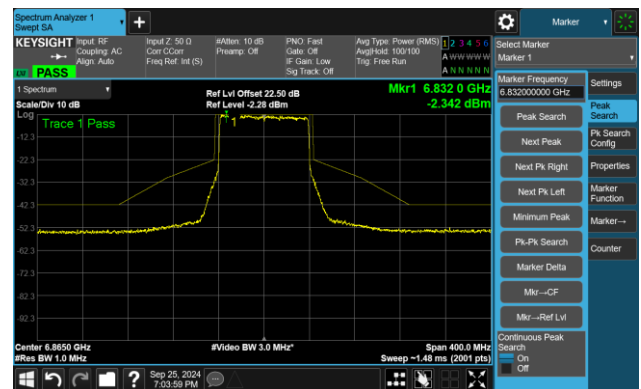 


802.11ax-HE80 - Ant 1

Channel 199 (6945MHz)

 The Reference Level

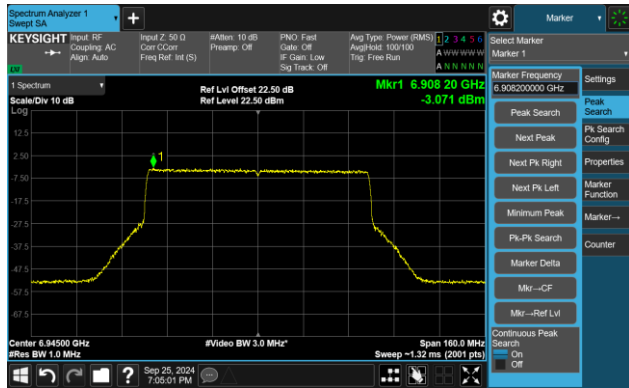


The Mask Data

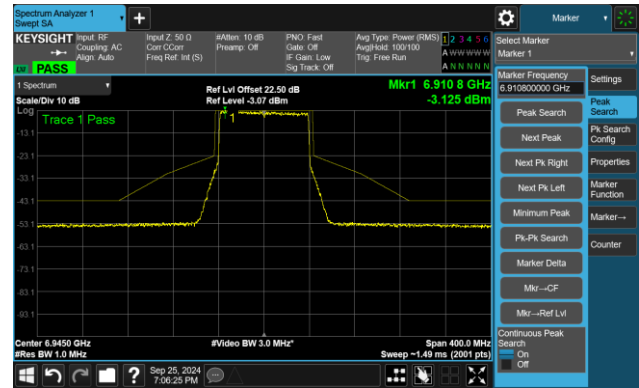 

Channel 215 (7025MHz)

 The Reference Level

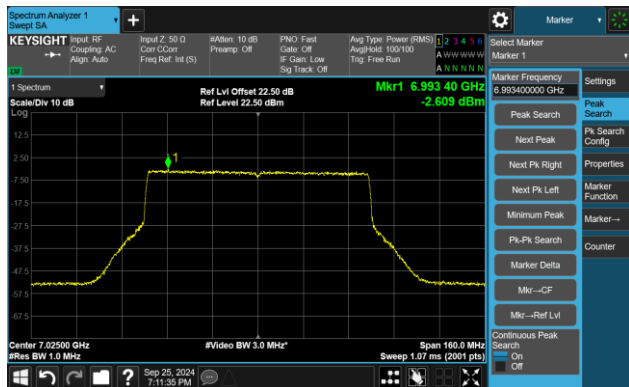

The Mask Data

