StampS3A



M5STACK

2024

CONTENTS

1.OUTL	_INE
1.1.	StampS3A
2. SPE	CIFICATIONS
2.1.	Module Size
3. QUI	CK START
3.1.	SCAN Wi-Fi
3.2	SCAN BLE Device
4. FCC	Warning9
Arduin	o Install

1. OUTLINE

STAMPS3A is a highly integrated embedded controller designed for IoT applications. It utilizes the Espressif ESP32-S3FN8 main control chip and features 8MB of SPI flash memory. Powered by a high-performance Xtensa 32-bit LX7 dual-core processor, STAMPS3A delivers impressive processing power with a main frequency of up to 240MHz. This module is specifically designed to meet the demands of IoT projects that require embedded main control modules.

STAMPS3A comes equipped with a built-in highly integrated 5V to 3.3V circuit, ensuring stable power supply for reliable operation. It features an RGB status indicator and a programmable button for enhanced user control and visual feedback. The module conveniently leads out 23 GPIOs on the ESP32-S3, allowing for extensive expansion capabilities. The GPIOs are accessible through 1.27mm/2.54mm spacing leads, supporting various usage methods such as SMT, DIP row, and jump wire connections.

STAMPS3A offers a compact form factor, delivering strong performance, rich expansion IO, and low power consumption. Its 3D antenna design is more stable compared to previous versions, and the RGB LED power is programmable, enabling low-power operation. This makes STAMPS3A the ideal choice for IoT application scenarios that require the integration of embedded controllers. Its compact size and powerful features ensure reliable performance and flexible expansion options for a wide range of projects.

1.1. STAMPS3A

1. Communication Capabilities:

- Main Controller: ESP32-S3FN8
- Wireless Communication: Wi-Fi (2.4 GHz), Bluetooth Low Energy (BLE) 5.0
- Dual CAN Bus: Supports dual CAN bus interfaces for reliable data communication in industrial environments.

2. Processor and Performance:

- Processor Model: Xtensa LX7 Dual-core (ESP32-S3FN8)
- Storage Capacity: 8MB Flash
- Processor Operating Frequency: Xtensa® dual-core 32-bit LX7 microprocessor, up to 240 MHz
- **3. Display and Input:**
 - RGB LED: Integrated Neopixel RGB LED for dynamic visual feedback.
- 4. GPIO Pins and Programmable Interfaces:
 - 23GPIOs
- 5. Others:
 - Onboard Interface: Type-C interface for programming, power supply, and serial communication.
 - Physical Dimensions: 24*18*4.7 mm, designed for compact installation with an M2 screw hole on the back for fixation.

2. SPECIFICATIONS

2.1 Module Size







UNIT:mm

3. QUICK START

Before you do this step, look at the text in the final appendix: Installing Arduino

3.1. Print WiFi information

- 1. Open Arduino IDE (Refer to https://docs.m5stack.com/en/arduino/arduino_ide for the installation guide for the development board and software)
- 2. Select the ESP32S3 DEV Module board and the corresponding port, then upload the code
- 3. Open the serial monitor to display the scanned WiFi and signal strength information

ESP32S3R_WIFI | Arduino 1.8.19

File Edit Sketch Tools Help

```
÷)
 ESP32S3R_WIFI
 1 #include "WiFi.h"
 2
 3 void setup() {
    Serial.begin(115200);
 4
 5
    WiFi.mode (WIFI_STA);
    WiFi.disconnect();
 6
 7
    delay(100);
 8
 9
    Serial.println("Scanning for WiFi networks...");
10
    int n = WiFi.scanNetworks();
11
     if (n == 0) {
     Serial.println("No networks found.");
12
13
    } else {
14
     Serial.print(n);
15
      Serial.println(" networks found.");
      for (int i = 0; i < n; ++i) {
16
17
        Serial.print(i + 1);
18
        Serial.print(": ");
        Serial.print(WiFi.SSID(i));
19
        Serial.print(" (");
20
21
        Serial.print(WiFi.RSSI(i));
22
        Serial.print(")");
        Serial.println((WiFi.encryptionType(i) == WIFI AUTH OPEN) ? " " : "*");
23
         delay(10);
24
25
26
    }
    Serial.println("");
27
28 }
29
30 void loop() {
    // put your main code here, to run repeatedly:
31
32 }
33
```

💿 COM20

```
17:20:58.755 -> Scanning for WiFi networks...
17:20:58.755 -> 35 networks found.
17:20:58.755 -> 1: M5-UiFlow-Zone (-34)*
17:20:58.801 -> 2: XLOT (-34)*
17:20:58.801 -> 3: M5-R&D (-39)*
17:20:58.801 -> 4: WiFi ADF4 (-39)*
17:20:58.801 -> 5: DIANJIXZ (-45)*
17:20:58.848 -> 6: Xiaomi 32BD (-47)*
17:20:58.848 -> 7: M5-UiFlow-Zone (-53)*
17:20:58.848 -> 8: M5-UiFlow-Zone (-54)*
17:20:58.848 -> 9: CenturyLink2842 (-55)*
17:20:58.848 -> 10: M5-UiFlow-Zone (-56)*
17:20:58.895 -> 11: esp-shui (-56)*
17:20:58.895 -> 12: CMCC-FSNg (-57)*
17:20:58.895 -> 13: YUESHIQI-602 (-57)*
17:20:58.895 -> 14: ChinaNet-hZsm (-57)*
```

 \sim

3. QUICK START

Before you do this step, look at the text in the final appendix: Installing Arduino

3.1. Print BLE information

- 1. Open Arduino IDE (Refer to https://docs.m5stack.com/en/arduino/arduino_ide for the installation guide for the development board and software)
- 2. Select the ESP32S3 DEV Module board and the corresponding port, then upload the code
- 3. Open the serial monitor to display the scanned BLE and signal strength information

ESP32S3R_BLE.ino | Arduino 1.8.19

<u>File</u> <u>Edit</u> <u>Sketch</u> <u>Tools</u> <u>H</u>elp

÷ ESP32S3R_BLE.ino 1 #include "BLEDevice.h" 3 class MyAdvertisedDeviceCallbacks: public BLEAdvertisedDeviceCallbacks { void onResult(BLEAdvertisedDevice advertisedDevice) { 4 5 Serial.print("Advertised Device: "); 6 Serial.println(advertisedDevice.toString().c str()); 7 } 8 }; 9 10 void setup() { Serial.begin(115200); 11 12 Serial.println("Starting BLE scan..."); 13 14 BLEDevice::init(""); 15 16 BLEScan* pBLEScan = BLEDevice::getScan(); pBLEScan->setAdvertisedDeviceCallbacks(new MyAdvertisedDeviceCallbacks()); 17 18 pBLEScan->setActiveScan(true); // Active scan uses more power, but get results faster 19 pBLEScan->start(10, false); // Scan for 10 seconds 20 } 21 22 void loop() { // Do nothing here 23 24 }

COM18

```
16:32:55.340 -> Advertised Device: Name: , Address: 25:b2:79:b5:a3:a0, manufacturer data: 060001052022f2ad5527637974d01222aa793bcbc9fc4c355e2392776a, resi: -95
16:32:55.340 -> Advertised Device: Name: , Address: 68:ab:bc:a6:32:56, manufacturer data: 8f030a188212005492a6bcab6881, resi: -72
16:32:55.387 -> Advertised Device: Name: , Address: 4c:11:0b:4a:ac:06, manufacturer data: 4c0010052818e6dfc1, txPower: 8, resi: -78
16:32:55.387 -> Advertised Device: Name: , Address: c4:23:5c:6d:7frcc, manufacturer data: 4c0012020003, resi: -78
16:32:55.387 -> Advertised Device: Name: , Address: 7c:c2:94:11:dd:b2, manufacturer data: 8f030a10b1900b1dd1194c27c81, resi: -90
```

16:32:55.434 -> Advertised Device: Name: , Address: 69:9a:a5:ca:0e:76, manufacturer data: 4c001007301fa45766f200, txPower: 12, rssi: -07 16:32:55.481 -> Advertised Device: Name: , Address: 60:8a:2d:9d:69:5a, manufacturer data: 6c000719010e202b770f01000a5aTb38b5d862679f9aa0147c93dfb9a3, resi: -92 16:32:55.481 -> Advertised Device: Name: , Address: 46:21:43:b4:e4:8f, manufacturer data: 4c0009081302c0a802531b581608006aad6eb4cf09d7, rssi: -86 16:32:55.481 -> Advertised Device: Name: , Address: 68:13:24:e2:c9:a6, rssi: -54, serviceData: 🖂 16:32:55.529 -> rer data: 4c0012020000, rami: -75 16:32:55.528 -> Advertised Device: Name: . Address: 4d:7a:15:80:e0:e4, manufacturer data: 4c0016080083cf28ec2b91b1, resi: -75 16:32:55.375 -> Advertised Device: Name: , Address: Od:4f:Oe:Of:b0:6b, manufacturer data: 06000109202270c24b9ec6b7806f55379bea2227lecd7e87c71f99cb35, rssl: -92 16:32:55.575 -> Advertised Device: Name: . Address: 43:85:45:a1:4f:04, manufacture: data: 4c000508130cc0a81f071b5813000a88ba7d27f5c700, rmsi: -81 16:32:55.622 -> Advertised Device: Name: , Address: a4:c1:30:0d:a7:00, rssi: -74, serviceData: 0X[DD 16:32:55.622 -> Advertised Device: Name: , Address: fa:e7:06:2b:fd:51, manufacturer data: 4c0012023503, resi: -70 16:32:55.714 -> Advertised Device: Name: , Address: c3:3e:25:29:00:03, manufacturer data: 4c0012020003, rssi: -74 16:32:55.714 -> Advertised Device: Name: , Address: 52:88:46:95:51:08, manufacturer data: 4c00160800d660375f0003hf, rssi: -73 16:32:55.806 -> Advertised Device: Name: , Address: 6a:c3:bb:88:c2:0b, manufacturer data: 4c0010050e18874880, txPower: 12, rasi: -85 16:32:55.991 -> Advartised Device: Name: , Address: 4b:c9:66:74:75:f0, manufacturer data: 4c00100607194fa9cd30, txPower: 12, rssi: -67 16:32:55.951 -> Advertised Device: Name: , Address: 24:e8:e2:5b:75:46, manufacturer data: 4c0013080a4d1f30f2970b00, rasi: -91 16:32:56.038 -> Advertised Device: Name: , Address: 64:3d:63:13:1f:b0, manufacturer data: 4c00100607194fa5cd30, txPower: 12, rssi: -02 16:32:56.129 -> Advertised Device: Name: , Address: cl:55:39:b6:23:30, manufacturer data: 4c0012020000, rssi: -69 16:32:56.184 -> Advertised Device: Name: , Address: 41:a0:2a:ea:27:15, manufacturer data: 4c00160800579e01df5e3cae, rasi: -94 16:32:56.104 -> Advertised Device: Name: , Address: dd:3a:2f:71:cc:4f, manufacturer data: 4c0012020003, rssi: -90 16:32:56.265 -> Advertised Device: Name: , Address: f1:79:70:04:24:72, manufacturer data: 4c0012020003, rssi: -84 16:32:56.265 -> Advertised Device: Name: , Address: 73:d0:c7:76:2d:cd, manufacturer data: 6c0010073fibe2cc95d138, txPower: 7, rssi: -77 16:32:56.405 -> Advertised Device: Name: . Address: 75:d9:97:51:7d:5e, manufacturer data: 4c001007211fb4e4ccdc78, txPower: 12, rssi: -84 16:32:56.452 -> Advertised Device: Mame: , Address: e4:04:07:s4:3e:s9, rssi: -91 16:32:56.452 -> Advertised Device: Name: . Address: 2e:da:35:fl:e5:1c, manufacturer data: 0600010f2022042879d9cedeb21fc16d6033b%bb7deb6b4e88513f2830, rssi: -95 16:32:56.452 -> Advertised Device: Name: , Address: cd:4e:ff:37:55:dd, manufacturer data: 4c0012020002, resi: ~51 16:32:56,500 -> Advertised Device: Name: , Address: 71:ab:11:45:16:00, manufacturer date: 4c0010053b10f2b4c3, txPower: 12, rsei: -07 16:32:56.545 -> Advertised Device: Name: , Address: 4e:bb:9b:58:79:b4, manufacturer data: 4c00160800c1b1dbbac7dd93, rssi: -66 16:32:56.390 -> Advertised Device: Name: , Address: dc:5d:0a:32:f6:cd, manufacturer data: 4c0012020000, rssi: ~88 16:32:57.096 -> Advertised Device: Name: , Address: 65:c0:b5:6e:b5:45, manufacturer data: 4c0010052296728c65, txPower: 8, resi: -89 16:32:57.325 -> Advertised Device: Name: , Address: 63:70:68:f2:c1:6f, manufacturer data: 4c00160800bb73dcc3dc3fa9, rssi: -86 16:32:57.325 -> Advertised Device: Name: , Address: d5:24:79:00:53:f0, manufacturer data: 4c0012020001, resi: ~87 16:32:57.695 -> Advertised Device: Name: , Address: 42:bc:23:c2:3a:25, manufacturer data: 4c000cce007f2849c2940c5d352a1085d4dc1006431d064dde18, resi: -94 16:32:58.026 -> Advectised Device: Name: , Address: c4:8f:62:41:70:5d, manufacturer data: 4c0012020000, resi: -94 16:32:58.026 -> Advertised Device: Name: , Address: d6:1s:a5:0c:5b:4e, manufacturer data: 4c001219395de24f1f2dd0ff3eb13c218d86193fee2b613140f7a80194, rasi: -73 16:32:58.213 -> Advertised Device: Name: , Address: fb:01:b0:e5:b4:ed, manufacturer data: 4c0012020002, rssi: -68 16:32:58.351 -> Advertised Device: Name: , Address; cd:55:86:51:87:47, manufacturer data: 6c0012020003, rssi: -78 16:32:58.537 -> Advertised Device: Name: , Address: d2:e8:b8:38:e8:06, manufacturer data: 4c0012025401, rssi: -58 16:32:58.583 -> Advertised Device: Name: , Address: d0:17:51:8f:06:7e, manufacturer data: 4c0012026e00071106d0de3ee5e0414d36527a38oec0055ba4, rssi: -88

4. FCC Warning

FCC Caution:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT NOTE:

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

— Reorient or relocate the receiving antenna. — Increase the separation between the equipment and receiver. — Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

— Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator & your body.

Arduino Install

-. Installing Arduino IDE(https://www.arduino.cc/en/Main/Software)

Click to visit the Arduino official website , and select the installation package for your operating system to download.

□. Installing Arduino Board Management

1. The Board Manager URL is used to index the development board information for a specific platform. In the Arduino IDE menu, select File -> Preferences

New Cloud Sketch Alth Open., Open Recent Sketchbook Examples Close	CbileN CbileO	a code here, to run once:		1
Open., Open Recent Skatchbook Examples Close	CH1+0	a code here, to run once:		1
Open Recent Skatchbook Examples Close	: et	a code have, to run once:		
Skøtchbook Exemples Close	* ** *	a code here, to run once:		
Examples Close	*			
Close	212230			
	P.D. & M.			
Save	Chi+S			
Save AsCtri=	598-5	code berg, to run repeatedly:		
Preferences	Comme	2000 000 000 000 000 000 000 000 000 00		
Advanced				
Quit	Chi+Q			

2.Copy the ESP board management URL below into the Additional Board Manager URLs: field, and save.

https://espressif.github.io/arduino-esp32/package_esp32_dev_index.json



Pref	ferences	\times
_	Settings Network	_
Skel	tchbook location:	
6	Additional Boards Manager URLs ×	
E	Enter additional URLs, one for each row	
T	https://adafruit.github.io/arduino-board-index/package_adafruit_index.json	
	https://espressif.github.io/arduino-esp32/package_esp32_dev_index.json	
S	https://m5stack.oss-cn-shenzhen.aliyuncs.com/resource/arduino/package_m5stack_index.json	
С		
	Click for a list of unofficial board support URLs	
	CANCEL	
٠.		

3. In the sidebar, select Board Manager, search for ESP, and click Install.



4. In the sidebar, select Board Manager, search for M5Stack, and click Install.

Depending on the product used, select the corresponding development board under Tools -> Board -> M5Stack -> {ESP32S3 DEV Module board}.

un Think may			-	All and a first stand in
Anto format	Cele1	6	-	Contraction of the second second
Applina liketin				P TOPSCI Der Hindun
10.56 Margaritherin.	Dryllifer.			EPA OF LEASE STORY
a latal Monther	Market Market			all and the second part
3 Inval Patter				and the second s
Formare Update				and a second of second
 Uplead Mit Aner Certificates 				ALADY REPORT
7 Brand '93P100 Dec Madain'		Availa Matazer. (14	1. Dellard	DEFENSION AND ADDRESS OF ADDRESS OF
Burn (TOMIE)		added a well hands	17.	AND ALL AND
10 Det Based July		Advised Basels	1.1	#1411.52.004.000
198 CDC Do Rooth Thinkford"		school hand old him also Come with and Direct Mill Reads		HERITER CARL (27)
CRU Name and CRUMAN (WALL)		And the Aid Roads		distant function with
Easter Derhaus Lessel, "Marray"	1.1	Andorra Mond (1) Yang Basida		DEPUT Number 511 and advances
USB DRU De Rose 'Disables'		• sull		Austine 14 hours
Even 40 Paul-Bellin Servic Lipitani "Disabled"	4	Millark		100-00300
Reent Rus Inc. Yow 14		Million	14	the Feature 2
Flash Muller "20 20014/		447		Unit Souther 12 Page
Park East 1968 (EBM)		Sulf Frank		und Featherich
1745 Adapter 'Disation'			-	Unit Insummental Years
Andultat Runs Dis "Care 1"				UNI Nametti
USA Remains MAC Dr. Asset: "Distiliant"				Uni PROVE
Particles Schemes "Default 4948 with uptils (1,2028-009) 2008 (01970)				UNI YoumED
Public Souther				UNI TrapOR
Upload Model 1(8810) Mailcone (DC)				Like Torget 2
Vpload Speed: "\$21992"				Well Timplia
USB Model Transitione CSC and IFAD?				S-DDP Lifese v1
Dighen Martin "Disation"				Ulpfin T-Display
Recenteral				Livia T-Diates 11

5. Connect the device to your computer with a data cable to upload the program