

Single Bell Wireless Door Chime

63-1123

OWNER'S MANUAL — Please read before using this equipment.

! IMPORTANT !

If an icon appears at the end of a paragraph, go to the box on that page with the corresponding icon for pertinent information.

- | | |
|---|--|
|  — Warning |  — Hint |
|  — Caution |  — Note |
|  — Important | |


CAUTION

- Use only fresh batteries of the required size and type. Always remove old or weak batteries. They can leak chemicals that destroy electronic circuits
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.

NOTE


The channel settings must be the same for the transmitter and the receiver. If the door chime occasionally sounds without anyone pressing **BELL**, change the channel settings for both the transmitter and receiver.

Receiver

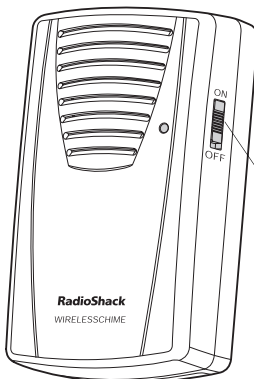

Slide ON/OFF to ON so that when BELL is pressed on the transmitter, a door chime sounds.

Transmitter

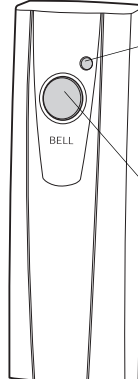

Indicator — Lights when BELL is pressed.

BELL — Press BELL to hear the door chime.

Thank you for purchasing the RadioShack Single Bell Wireless Door Chime. It works as a doorbell, remote pager, or an alert. You can add an optional external sensor to have a chime that alerts you when someone walks into a room. The door chime's three-position channel switch helps prevent other transmitters or radio devices from sounding the chime.

INSTALLING BATTERIES AND SELECTING CHANNELS

The door chime requires three AAA batteries in the transmitter and three C batteries in the receiver. For best performance and longest life, we recommend RadioShack alkaline batteries.

IN THE TRANSMITTER


1. Slide the transmitter's battery compartment door in the direction of the arrow to remove it.
2. Use a small flat-blade screwdriver to slide the switch inside the battery compartment to the desired channel for the transmitter.
3. Install three AAA batteries as indicated by the polarity symbols (+ and –) marked inside.
4. Replace the compartment door. If the transmitter's LED indicator dims, replace the batteries.

IN THE RECEIVER

1. Slide the receiver's battery compartment door in the direction of the arrow to remove it.
2. Slide the switch inside the battery compartment to select the same channel for the receiver as is selected for the transmitter.
3. Install three C batteries as indicated by the polarity symbols (+ and –) marked inside.
4. Replace the compartment door. If the receiver's LED flashes with a short beep tone, replace its batteries.

MOUNTING THE TRANSMITTER

1. Remove the transmitter from the holder.
2. Use the holder as a template to mark two screw holes on the wall.
3. Remove the holder from the mounting surface and drill two $\frac{3}{16}$ inch diameter holes. Insert one of the supplied anchors into each hole.

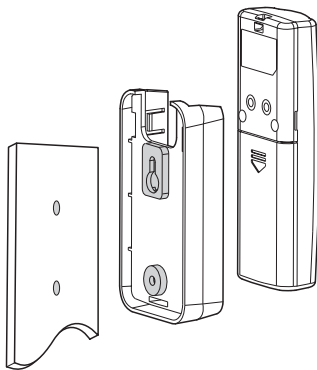

4. Drive a screw through the holder into each hole.
5. The transmitter can be slid in and out of the holder. To lock the transmitter, fix it with a size M2.6 screw at the bottom of the holder.



RadioShack
www.radioshack.com™

© 2002 RadioShack Corporation.
All Rights Reserved.
RadioShack and RadioShack.com are trademarks
used by RadioShack Corporation.

