



 
# STAGE STARS KARAOKE 2-MIC MUSIC STATION

AGES  
8+


## INTRODUCTION

Thank you for your purchase of the FAO Schwarz® Stage Stars Karaoke 2-Mic Music Station. Please read all instructions and warnings on this sheet prior to using. Keep this instruction sheet as it contains important information for future reference.

## CONTENTS

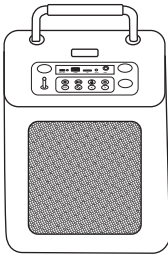


Karaoke Machine

 


2 Wireless Microphones



 1 Wireless Remote

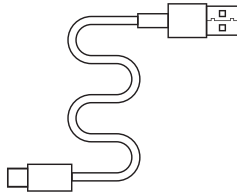

USB-C Cable

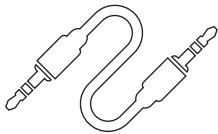 

AUX Cable

## SETUP

### BATTERY INSTALLATION – MICROPHONES

1. Twist the bottom battery cover of the microphones off.

2. Place 2 AA 1.5 V batteries in each microphone.

3. Replace the battery cover.

 
 
 
### BATTERY ISNTALLATION – REMOTE

1. Using a Phillips-head screwdriver, remove the screw by turning it counterclockwise. Remove the battery cover.

2. Place the batteries in the orientation shown above. Remote requires 2 AAA 1.5 V batteries.

3. Replace the battery cover and screw.

### CHARING BATTERY – KARAOKE STATION

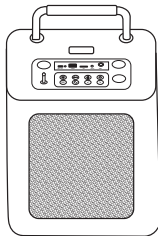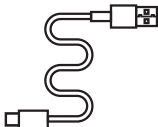

1. The karaoke station is powered by rechargeable 7.4 V 2000mAh battery. Connect the USB cable to an appropriate power brick or outlet.
2. Connect the USB-C side of the cable to the port next to the power indicator LED that reads "DC=5". The battery LED will be on while charging and will turn off when fully charged.
3. Wait 3 to 3.5 hours for the karaoke station to completely charge.

NOTE: When the screen says "LOW", the battery is low and needs to be charged.

## RECHARGEABLE BATTERY WARNINGS

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- There is a risk of fire and personal injury if battery is punctured, damaged, or misused.
- Do not dismantle, crush, incinerate, or short-circuit battery.
- Never expose battery to extreme temperatures or moisture.
- Keep away from flammable materials and direct sunlight.
- Only charge using the provided charger, cable, and/or adapters.
- Rechargeable battery is only to be charged by an adult.
- Adult supervision is required while charging the battery.
- Allow battery to cool to room temperature before charging.
- Charge on a non-flammable surface and keep away from flammable products.
- Discontinue charging if battery becomes hot, swells, smokes, or gives off a strong odor.
- Battery chargers used with the product are to be regularly examined for damage to the cord, plug, enclosure, and other parts. In the event of such damage, chargers must not be used until the damage has been repaired.
- Remove batteries before storing.
- Recycle or dispose of battery according to federal, state, and local laws.
- Keep these instructions for future reference.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



Model No: 1016881

 


# STAGE STARS KARAOKE 2-MIC MUSIC STATION


AGES  
8+

## FUNCTIONS


### KARAOKE STATION – INPUTS AND DIALS

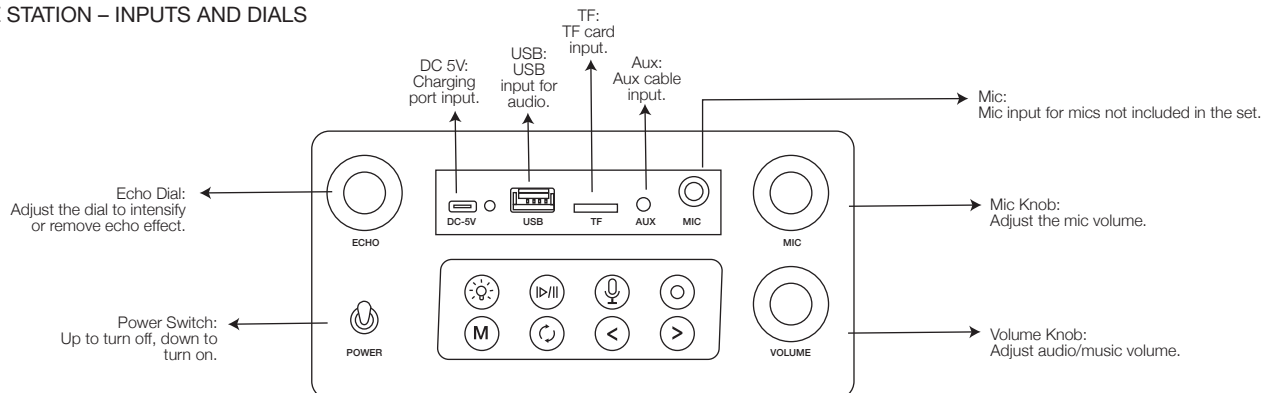

### KARAOKE STATION BUTTONS

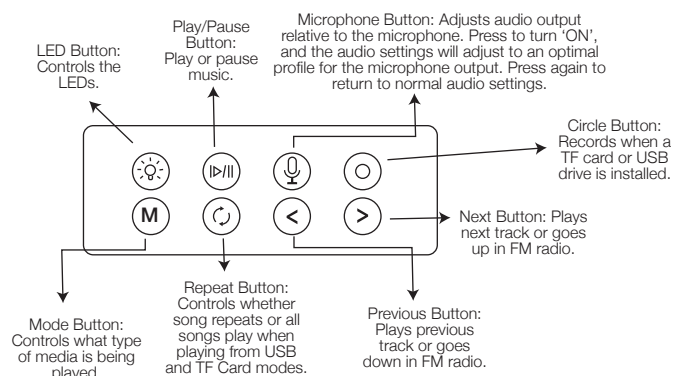 


### REMOTE CONTROL BUTTONS

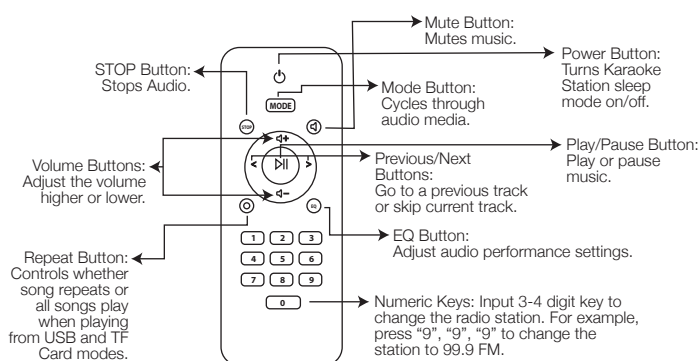 


Note: When the power switch on the karaoke station is in the up (off) position, the remote will not be able to turn on or off. The remote power button only works when the karaoke station switch is on the on (down) position.


## HOW TO USE

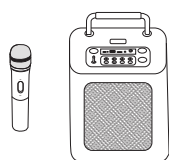 

 - The included mics are already paired and ready to be used once batteries are included! You can also add another mic by connecting it in the mic input.



 
- The karaoke station supports audio input through USB, AUX, TF Card, and FM radio. Install or connect your audio device and be sure to change the mode to match your device's output.
- Press the LED button to switch between different LED modes to better fit the mood of your song!



- In FM radio mode, long press the Play/Pause button to search all stations. Once the search is completed, press Next/Previous buttons to change stations.



 - The karaoke station will be discoverable as FAO Karaoke Station on your device's list of Bluetooth devices. If it is not appearing, make sure the karaoke station is in Bluetooth mode by pressing the Mode button.



- You can also insert a TF card or USB drive to record your singing with the music. Press the circle button to start recording and press again to finish the recording. Once you have finished your recording, the station will play your recording automatically. You will need to press the M button to exit TF or USB mode and return back to it to resume playing other music by TF card or USB drive.

- Use the kickstand at the top to place your device and display the karaoke Lyrics!
- Note: Never transport the karaoke station with your device on top.

Karaoke Station will change to sleep mode after 10 minutes of no activity. Turn the station off and on again to return to normal usage.



## SAFETY WARNINGS: READ BEFORE USE

- Do not make modifications to this item or use with any attachments not included.
- Thoroughly inspect products before every use. If the product appears worn, frayed/splintered, cracked, or broken in any manner, discontinue use and discard immediately.
- Never move the karaoke station with a mobile device on it.