MA30 FCC ID:2AXLX-MA30

Wearing Method



 
Gently slide into ears the earbuds tail align with the mouth



Adjust the earbuds to where it

2 Main User Interface







- A. Charging point
- B. Touch button
- C. Microphone
- D. Charging USB port E. Digital display indicator light

3 Start Here


a. Open charging case, take out the earbuds, they will automatically power on and pair

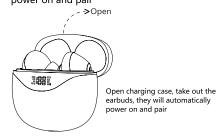

b. Pairing with cellphone

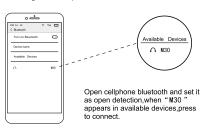


 c. Power off




Put back the earbud to the charging dock and close the cap,the earbuds will power off,and the dock will charge the earbuds automatically.

4 Charging

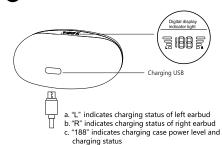


5 More Functions

 

a. Touch the function button once to answer calls, press Funtion Button twice to reject calls. b. When playing music. To pause, please press the function button once. To play the previous song, please press and hold 2s for left earbud function button. To play next song, please press and hold 2s for right earbud function button. c. Press left earbud function button twice to increase volume: to increase volume; Press right earbud function button twice

Press left or right earbud function button to activate Siri .

 Important Notice for Single Earbud Using



- b.Open charging dock cap,take out either earbud,and have to close the cap,wait for 10s,and then turn on cellphone bluetooth and set it as open detection,when "M30" appears in available devices, press to connect.
- c.It will automatically connect to the cellphone, if it connected previously.

7 Manual re-pairing



Step1: make sure to delete all the record of bluetooth connection.

Step2: put the earbuds into charging case, take them out, it will be OK after waiting for 1 minute.

Product Name: MA30 Charging time: 1.5 hours Music Time: 4 hours

Basic Parameter

Operation range: 10m Call time: 3 hours Charging Input: 5 V --- 200 mA

Battery Type: Polymer Li-Ion Battery Earbud weight: 4g+4g

Important Notice

- Please make sure the product is fully charged before initial use.
- Please use the brand adaptor complying safety requirements to charge this product.
- If your cellphone can not find "M30", please double check if your cellphone bluetooth is at "Equipment visible mode". After initial pairing, the earbuds will be automatically paired for repeat use. If no use for a long time, need to follow up pairing procedures to pair with
- If there is only one earbud has sound while in music mode, please restart the earbuds or manual re-pairing.

Questions & Answers

Reasons	Answers
power run out	charge the charing dock & earbuds
program error caused by mal-operation	re-pair manually (pls refer to user manual)
dust or impurity covers on the charging point	clean the charging point and can return to normal
the volume setting of the earbuds & cellphone not synchronized	turn on cellphone bluetooth & synchronized its volume setting with the connected earbuds
charing protection	charge the charging dock by external power
earbuds not in pairing mode	Re-"power on" the earbuds
celliphone bluetooth App error	power off & re-power on cellphone
	power run out program error caused by mal-operation dust or impurity covers on the charging point the volume setting of the earbuds & celliphone charing protection earbuds not in pairing mode celliphone blueboth

Security Warning

- Please use the product in the temperature between 0°C-45°C. When the environment temperature is too high or low, it may cause the product malfunction.
- Please keep the product dry, do not contact water or humidity enviroment.
- Please do not drop, throw, pull/drag the product to prevent damage
- Please power off before clean the product.
- Please use the product at proper volume while listenning music or answering call, long time at high volume usage could lead to permanent hearing loss.
- The built in battery is not dismountable, please do not replace by yourself. If it's really necessary, please ask help from authorized service center
- Please dispose the product according to local law, can not treat it as domestic garbage.
- Without adult supervision, please keep the product out of reach of children, the swallow of small components included may cause asphyxia.

Warranty

- This product is covered under warranty for a period of one year from the date of purchase limited to normal use and maintenance of the machine parts, materials and functions. Problems and failures verified upon fur-ther identification. will be provided free repair and replacement parts.
- Excluding the following:
- A. Headset is beyond the warranty period;
- B. User does not follow the instructions. so that the headphone wire and earplug broken.
- C. Without the authorization to dismount, repair, alteration
- D. Can't provide proof of purchase.
- E. Man made damage.
- F. Due to natural disasters and other force majeure (such as earthquakes, fires) product failure of damage causes;

Warranty Card User's name

User's telephone# User's Add Invoice # Dealer's name

Dealer's Add Dealer's telephone#_

QC Report info

Model #	
Inspector	
Date	

P/N:03.009.001.0089

物料编号:03.009.001.0089

称:MA30-英文说明书

格:65*100mm 共6P,70g书纸 单色印刷,风琴折

期:2022年4月20日



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement.