

Directed

CLIFF

VOLT

VIPER

OWNER

R

REPLACEMENT TRANSMITTER

Model 474V, 4-Button HF, Stealth Code Remote

SYSTEM	Date Code
210HV	All
650XV	All
850XV	All
350HV	All

REPLACEMENT TRANSMITTER

Model 474V, 4 Button HF, Stealth Code Remote

The following Learn Routine can be used to program this replacement transmitter to the system. In order to

enter the Learn Routine, the system's Valet/Program switch must be plugged into the BLUE port.

1. **Door.** Open a door (except 210HV).
2. **Key.** Turn the key to the ON position.
3. **Choose.** Within 5 seconds press and release the Valet/Program button the number of times corresponding to the desired channel listed below. Once you have selected the channel, press the Valet/Program button once more and hold it. The LED will flash the same number of times as the channel selected and the siren (except 210HV) will
4. **Transmit.** While holding the Valet/program button, press the button from the transmitter you wish to assign to that channel. The unit will chirp (except 210HV) to confirm that the transmitter has been taught to the receiver
5. **Release.** Once the code is learned you can release the Valet/Program button and remove the key.

chirp to confirm the selected channel. Do NOT release the button.

Channel Number	Function
7	Auto-learn Standard Configuration/Expanded (350HV)
8	Auto-learn Single-Button Configuration
9	Delete All Transmitters

Single-Button Configuration

A remote that has been programmed to a single-button configuration will control both arm/lock and disarm/unlock from the same button. Using the one-button configuration, the transmitter buttons are assigned to the following functions:

Lock Icon Button

The lock icon button arms/locks and disarms/unlocks the system. When held for three seconds, Panic mode is activated

Unlock Icon Button

The unlock icon button operates Channel 2 and silent arms/locks and disarms/unlocks.

Unlock and Lock Icon Buttons

When pressed together, the lock and unlock icon buttons operate channel 3.

Standard Configuration

A remote that has been programmed to an standard configuration will use separate buttons for arm and disarm similar to a factory keyless entry. Using the expanded configuration, the transmitter buttons are assigned to the following functions:

Lock Icon Button

The lock icon button arms and locks the system.

Unlock Icon Button

The unlock icon button disarms and unlocks the system.

AUX Icon Buttons

The AUX icon button operates channel 2.

Siren Icon Button

The siren icon button operates Panic only.

Unlock and Lock Icon Buttons

When pressed together, the lock and unlock icon buttons operate channel 3.

FCC/ID Notice

This device complies with Part 15 of FCC rules. Operation is subject to the following conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

CAUTION! Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

P/N 474V

MADE IN TAIWAN
©2002 Directed Electronics, Inc. Vista CA 92083
All rights reserved. 10/02

REPLACEMENT TRANSMITTER

Model 473V, 3-Button HF, Stealth Code Remote

SYSTEM	Date Code
350HV	All

REPLACEMENT TRANSMITTER

Model 473V, 3 Button HF, Stealth Code Remote

The following Learn Routine can be used to program this replacement transmitter to the system. In order to

enter the Learn Routine, the system's Valet/Program switch must be plugged into the BLUE port.

1. **Door.** Open a door.
2. **Key.** Turn the key to the ON position.
3. **Choose.** Within 5 seconds press and release the Valet/Program button the number of times corresponding to the desired channel listed below. Once you have selected the channel, press the Valet/Program button once more and hold it. The LED will flash the same number of times as the channel selected and the siren will chirp to confirm the selected channel. Do NOT release the button.
4. **Transmit.** While holding the Valet/program button, press the button from the transmitter you wish to assign to that channel. The unit will chirp to confirm that the transmitter has been taught to the receiver
5. **Release.** Once the code is learned you can release the Valet/Program button and remove the key.

Channel Number	Function
8	Auto-learn Single-Button Configuration
9	Delete All Transmitters

Single-Button Configuration

A remote that has been programmed to a single-button configuration will control both arm/lock and disarm/unlock from the same button. Using the one-button configuration, the transmitter buttons are assigned to the following functions:

Lock/Unlock Icon Button

The lock/unlock icon button arms/locks and disarms/unlocks the system.

AUX Icon Button

The AUX icon button operates Channel 2 and silent arm/lock and disarm/unlock.

Siren Icon Button

The siren icon button operates Panic only.

Lock/Unlock and AUX Icon Buttons

When pressed simultaneously, the lock/unlock and AUX icon buttons activate Channel 3.

FCC/ID Notice

This device complies with Part 15 of FCC rules. Operation is subject to the following conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

CAUTION! Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

P/N 473V