92mm





01 How to wear headphones correctly — 02 Product Introduction — 03 Touch Operation — 05 Warranty Statement —







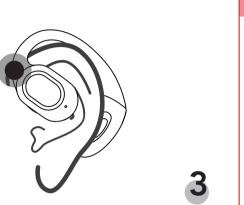

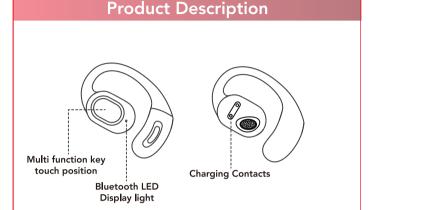

Charging Case Input: 5V --- 300mA Charging Case Output: 5V --- 70mA Effective Distance: Approx. 10m Earphone Battery Capacity: 35mAh Speaker Diameter: ϕ 14.2mm Charging Case Battery Capacity: 300mAh

Duration: Approx. 4.5 H (Earphone) Frequency Respinse: 20Hz-20KHz Earphone Charging Time: Approx. 1.5 H

Microphone Sensitivity: -42dB±3dB Charging Time of the Charging Case: Approx. 1 H

Earphone Input: 5V=35mA

"MINISO-BM21".Click the pairing name to pair.

 
When the headset is turned on: The white light and orange light alternate flashing

the charging case, the Earphone will be powered on, with the prompt sound of "Du' When the headset is turned off: The orange light flashes rapidly 3 times and then goes off Manual power-on: Long press for 3 seconds, the Earphone will be powered on, with the prompt sound of "Du".

· Connection successful: no light

 Headphone Charging: The Charging case indicator light is always white, and the headset orange light is always on. After the headset is fully charged, the orange light turns to white and then goes out, and the Charging case indicator light goes out at the same time. · Charging of the Charging case: The headphone case indicator light flashes white according to different battery levels, When the battery level of the earphone case is 1% -30%, the first

When the battery level of the earphone case is 1% -30%, the first indicator light of the earphone case starts flashing; When the battery level of the earphone case is 31% -60%, the second indicator light of the earphone case starts flashing; When the battery level of the earphone case is 61% -99%, the third indicator light of the earphone case starts flashing; After being fully charged, the white indicator light on the headphone case remains on.



Double press the left ear: Volume decreases

Wake up voice assistant

When using both ears, press and hold the left ear multi-function button for 2seconds to activate the voice assistant. When using one earphone, press and hold the le (or right) earphone for 2 seconds to activate the voice

Press and hold the left (or right) ear multi-function button for two seconds: call rejection

Phone mode

Triple press on the left ear: Triple press on the right ear: Previous song next song




 






Item list

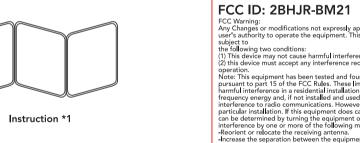





a following two conditions:

This device may not cause harmful interference, and
this device must accept any interference received, including interference that may cause undesired

voice. This equipment has been tested and found to comply with the limits for a Class B digital device, ursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against armful interference in a residential installation. This equipment generates uses and can radiate radio quency energy and, if not installed and used in accordance with the instructions, may cause harmful erference to radio communications. However, there is no guarantee that interference will not occur in a ticular installation. If this equipment does cause harmful interference to radio or television recipion, which be determined by turning the equipment off and on, the user is encouraged to try to correct the ference by one or more of the following measures: ient or relocate the receiving antenna.

or relocate the receiving antenna.
He separation between the equipment and receiver.
The equipment into an outlet on a circuit different from that to which the receiver is connected.
The equipment into an outlet on a circuit different from that to which the receiver is connected.
The constitution of the control of the c

ce has been evaluated to meet general RF exposure requirement.

Company Name: MIRAMONT SOLUTIONS LLC Address: 34218 HOURGLASS ST, TEMECULA, CA 92592, United States Contact Name: Wenyi Wang Telephone No: (951) 401-3633

Charging Indicator

hanges or modifications not expressly approved by the party responsible for compliance could void th authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is

device can be used in portable exposure condition without restriction.

The validity period of the three guarantees has exceeded;

- 2. Altering of the warranty cards and product code do not match the product itself; 3. Failure of damages caused by misuse, abuse or improper transportation, use, maintenance or storage;
- . Failure of damages caused by force majeure (such as earthquake, war, fire, etc.) or accident; . Zippers and tower buckles are damaged due to excessive force;
- ourchase date shall be based on the sales invoice date; if the purchase date cannot be determined rranty period shall be calculated as thirteen(13) months from the product production date
- the warranty period shall be calculated as thirteen(13) months from the product production date.

 If you want to apply for warranty, please call the product service hotline first and follow our instructions.

 When applying for a warranty, you are required to provide a valid sales invoice that is accurate, complete and clearly filled out. If the product's original logo or label is changed or damaged, this warranty will be invalid. The completeness and appearance of the product and accompanying materials are not covered by the warranty. You should inspect the product on site when receiving it and raise objections to any

MINISO Product service policy

If you encounter a problem, please contact our customer service to solve it. After-sales email: 7@hifi-earphone.com

© Z RoHS (€

This manual does not come with any form of warranty, position expression or other implication. The products, specifications and information mentioned inthis manual are for reference only, and the

confirms that it cannot be repaired, it will be replaced free of charge; the repaired product will continue

o be covered by the warranty for the remaining warranty period(a minimum of not less than 30 days).

content will be updated on the website at any time without prior notice. Electromagnetic interference: Warranty statement:

ctronic devices: To avoid the effects of electromagnetic interference or configuration The following guarantee is made for the products attached to this document: If the product is damaged atibility, please turn off your Bluetooth device in accordance with regulations in places with due to quality defects under normal use within twelve(12) months from the date of your purchase (the Warranty Period"), and if it can be repaired, it will be repaired free of charge; If the manufacturer

Guidelines for safe and effective use

Civil Aviation: After boarding the plane, please turn off your Bluetooth headset according to the flight attendant's instructions. It is strictly prohibited to use Bluetooth headsets during flight to avoid interference with the aircraft communication system.

where it will not be squeezed. Squeezing may cause damage to the product or personal injury. Children:Do not let children play with Bluetooth headsets.Some of the small parts are detachable and may be swallowed and cause danger.

ications or modifications to this Bluetooth headset without permission, the user will lose the right

Auto power on: The Earphone are taken out of

to continue to enjoy the services included in the device

e replaced with a new one.However, do not replace the battery by yourselt. If the battery is not d properly, there is a risk of explosion. It can only be replaced by an after-sales service provider ame or equivalent type. battery usage.

Placement: It is recommended that when you are not using the Bluetooth headset, place it in a place



