

	AL_GND
☐	AL_9
☐	AL_GND
☐	AL_10
☐	AL_GND
☐	AL_11
☐	AL_GND
☐	AL_12
☐	AL_GND
☐	AL_13
☐	AL_GND
☐	AL_14
☐	AL_GND
☐	AL_15
☐	AL_GND

AKER INSTRUCTION

PERE	UNITS
6 A	CC0; CHC 0,2,4,6,8; DRIC0
0 A	FANS 0,2,5
16 A	CAT-1900 0; DUAMCO 0
16 A	CAT-1900-1; HUB
16 A	CAT-1900 2; DUAMCO 1
16 A	CAT-1900-3
16 A	CAT-1900 4; DUAMCO 2
16 A	CAT-1900-5
16 A	CC1; CHC1,3,5,7,9; DRIC1; ACTM
10 A	ACTC; FANS 1,3,4
16 A	CAT-850 0; FDUAMCO 0
16 A	CAT-850-1
16 A	CAT-850-2; FDUAMCO 1
16 A	CAT-850-3
16 A	CAT-850 4; FDUAMCO 2
16 A	CAT-850-5

S30861-K4213-X-01/01
147-283833-00-01:00
MK.AIRARFV2 UEB/T2469231
ACTM/FV1

S30861-U4028-X-06/01
147-283859-00-06:00
EDX.SD435205

S30861-K4213-X-01/01
147-283833-00-01:00
MK.AIRARFV2 UEB/T246929

14

S30861-U4028-X-09/01
147-283857-00-09:00
OVPT/UTSFV1 EDX.SD374804

15

FCC ID: NE3PCS101