

## INTRODUCTION

Thank you for purchasing our newest DECT single model, the manual is designed to familiarize you with this phone. To get the maximum use from the phone, we suggest that you read this instruction manual carefully before using.

### Important Notice:

1. Please charge the battery for at least 12 hours before using.
2. To keep the batteries charged, whenever you don't need to use the handset (such as overnight, or when you go out), leave the handset on the charge cradle.
3. When the unit is powered on initially, the date and time will be blinking, please to set the date and time first according to use the method of **DATE and TIME**.

## SAFETY INSTRUCTION

When using your telephone equipment, the following basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons:

 
- ✧ Read, understand and follow all warnings and instructions
- ✧ Unplug the product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a soft damp cloth for cleaning.
- ✧ Do not place this product on unstable surfaces. The product may drop, causing serious damage to the product.
- ✧ Do not overload wall outlets and extension cords as this can result in fire or electric shock.
- ✧ Never push foreign objects of any kind into this product through cabinet slots as they may affect dangerous voltage points or short circuit parts that could result in fire or electric shock. Never spill liquid of any kind on the product.
- ✧ Avoid moving or disconnecting this unit during a heavy storm, as there may be a remote risk of electric shock from lightning and thunder.
- ✧ Unprofessional person cannot open the telephone even meets troubles, please send to service center.

## FEATURES

- LCD 3 lines display
- Maximum 5 handsets can be linked to the same base unit, and maximum 4 bases per handset.
- 16 kinds of interface languages: English, German, French, Italian, Spanish, Portuguese, Russian, Turkey, Greek, Ukrainian, Polish, Hungarian, Swedish, Dutch, Danish and Norwegian,
- Pre-dial and edit function
- Redial and pause function
- 30 incoming numbers memories
- 50 Phone book memories with 12 characters & 20 digits maximum
- Call transfer to other handset and intercom call between two handsets
- Conference call between external call and two handsets
- 10 ringing tones for selection
- Ringing tone/earpiece/hands free volume adjustable
- Different melody for different call available
- Alarm clock function
- Tone/Pulse dialing mode can be set

 
 
 
- Flash time 100/300/600/1000ms for selection
- 8 LCD contrast can be set
- LCD backlight function
- Auto/manual answering function.
- Dialing barring function.
- Key lock function.
- Mute function.
- ECO friendly

#### LCD DISPLAY/LCD MAP/KEY PAD DESCRIPTION

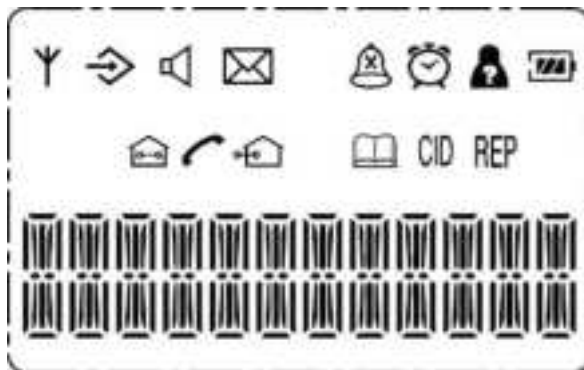





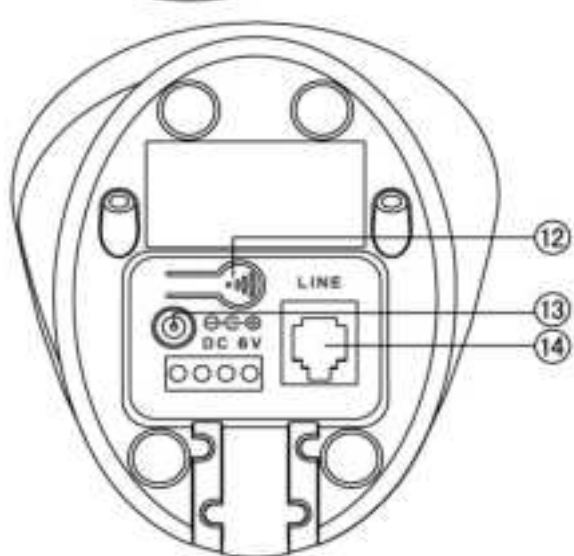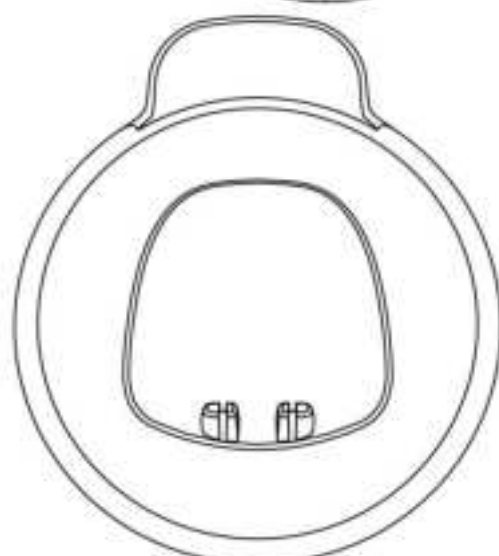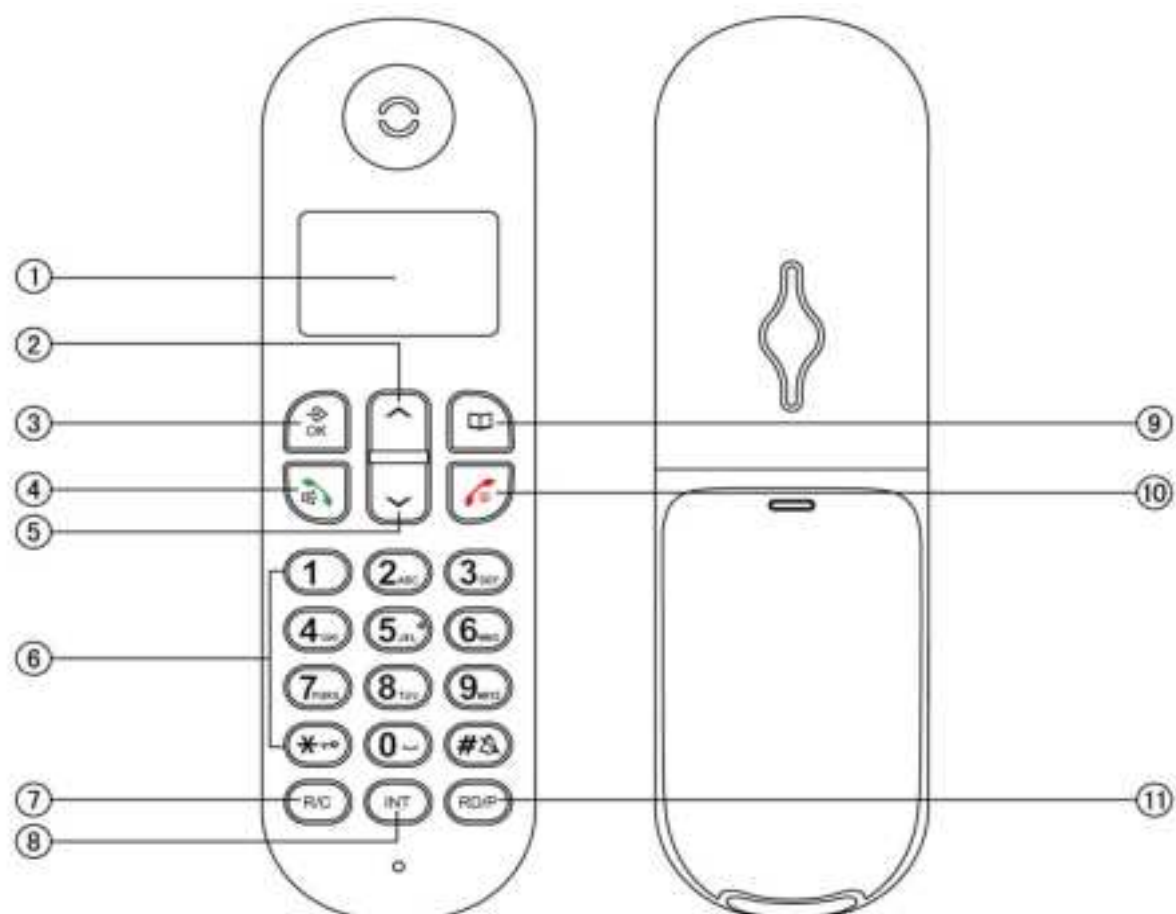




Icon	Function
	The antenna icon will always be shown on the LCD, it indicates for signal strength, flashes when the handset is out of range, disappears when registration to base is lost.
	Displayed when the user has pressed  key in idle state.
	The alarm icon will be shown as steady on when the alarm is set. The alarm icon will flash when the alarm is triggered.
	Displayed when external ring set to off
	Displayed when viewing the phonebook entries.
	Displayed when a new voice message is received from the network
<b>REP</b>	Displayed when the same missed call received more than one time
<b>CID</b>	Displayed when missed call hasn't been reviewed yet.
	Displayed when press  key twice in idle state.
	Displayed charging indication and indication of the current battery status.
	Displayed when you enter the menu settings
	Displayed when making an internal call
	Displayed when making an external call
	Displayed when you have missed call un-reviewed.

## Key pad



 - |           |                 |                     |         |
|-----------|-----------------|---------------------|---------|
| ① LCD     | ⑤ DOWN          | ⑨ BOOK              | ⑬ DC 6V |
| ② UP      | ⑥ NUMERICAL KEY | ⑩ HANG UP/POWER OFF | ⑭ LINE  |
| ③ MENU/OK | ⑦ R/C           | ⑪ RD/P              |         |
| ④ TALK/HF | ⑧ INT           | ⑫ PAGE              |         |







ICON	FUNCTION DEFINITION
	When there is new call coming, press this key to receive the call; During conversation, press this key to transfer handset and hands-free mode.
	Entry to the menu functions from idle mode; Confirming selections & actions. In talk mode press the key to perform mute function.
	In talk mode, press once to hang up the call; In standby mode, hold for 3 seconds to power down the handset.
	This key is used to enter the phonebook both in standby mode and in talk mode; Exiting from a function during menu operation;
	Scrolling up through lists and menu options; Review incoming number, outgoing number and phone number.
	Scrolling down through lists and menu options; Review incoming number, outgoing number and phone number.
<b>R/C</b>	The key is used to delete memory. Delete the current input by a short pressing during menu edit.
<b>RD/P</b>	In talk mode once pressing to redial the last dialed number; The key will perform PAUSE function if pressed after any digit input both in talk mode and in standby mode. Redial the last dialed number
	A Long press (3s) to activate key lock; To set up a conference call.
	In addition to its use for text and number entry, To activate silence function by long press for 3s.
	Page the handset. Register the handset to a specified base.
<b>INT</b>	To set up an internal call to another handset; To transfer an incoming call to another handset; To set up a conference call with an external line and an internal handset.

## INSTALLATION

1. Plug the main power lead into the bottom of the base unit.
2. Plug the main adapter into mains socket with the switch on the socket set to off.
3. Switch on main power at the socket.
4. Fit the batteries in the handset

**Note:** If you do not modify the password yourself, all the passwords in this manual are default as 0000.

## Menu Settings

During idle state, press the  key to enter the menu setting, press  or  key to select the above items and then press  key to enter. Press  to quit the setting state, or press  to back to the previous menu. Details of each item are shown in next parts. The menu tree as follow:

HANDSET MENU TREE		
PHONE BOOK	LIST	
	NEW ENTRY	
	EDIT RECORD	
	DEL RECORD	
	DELETE ALL	
	MEM STATUS	
CALL LOG	MISSED	
	RECEIVED	
	DIALED	
BS SETTINGS	DELETE HS	
	DIAL MODE	TONE
		PULSE
	FLASH TIME	100/300/600/1000MS
	MODIFY PIN	default 0000
	BS DEFAULT	default 0000
HS SETTINGS	ALARM	ON (SNOOZE ON/OFF)
		OFF
	RING SETUP	INT RING
		EXT RING
	TONE SETUP	KEY TONE
		BATTERY LOW
		RANGE ALARM
	LANGUAGE	
	HS NAME	
	AUTO ANSWER	ON
		OFF
	BARRING	default 0000
	DATE&TIME	
	CONTRAST	default contrast 5
	SELECT BASE	BASE 1,2,3,4 and AUTO
	HS DEFAULT	default 0000
REGISTRATION	BASE 1(2,3,4)	

### Handset menu function1: PHONE BOOK

Each individual handset has its own phonebook, independent of each other handset.

Press  **OK** key. Use  $\wedge$  or  $\vee$  key to select **PHONE BOOK**. Then press  **OK** key to confirm.




#### ➤ LIST

LCD displays **LIST**. The function allows the user to review the phone book record lists by using the  $\wedge$  or  $\vee$  key.

When the desired number is show, press  key to dial out the number automatically.

#### ➤ NEW ENTRY

Press  $\wedge$  or  $\vee$  key to select **NEW ENTRY** item. This function allows the user to add an entry to the phone book.

1. The cursor for the name flashes, enter the name using the numerical keys.
2. If you make a mistake, press **R/C** key to correct. Press  **OK** key to confirm
3. Enter the number and press  **OK** key to confirm
4. Press  $\wedge$  or  $\vee$  key to select the melody to be stored and press  **OK** key to confirm.

Input method as follow:

<b>PRESS TIMES KEY</b>	<b>1ST</b>	<b>2ND</b>	<b>3RD</b>	<b>4TH</b>	<b>5TH</b>
<b>1</b>	÷	--	/	<b>1</b>	
<b>2</b>	<b>A</b>	<b>B</b>	<b>C</b>	<b>2</b>	
<b>3</b>	<b>D</b>	<b>E</b>	<b>F</b>	<b>3</b>	
<b>4</b>	<b>G</b>	<b>H</b>	<b>I</b>	<b>4</b>	
<b>5</b>	<b>J</b>	<b>K</b>	<b>L</b>	<b>5</b>	
<b>6</b>	<b>M</b>	<b>N</b>	<b>O</b>	<b>6</b>	
<b>7</b>	<b>P</b>	<b>Q</b>	<b>R</b>	<b>S</b>	<b>7</b>
<b>8</b>	<b>T</b>	<b>U</b>	<b>V</b>	<b>8</b>	
<b>9</b>	<b>W</b>	<b>X</b>	<b>Y</b>	<b>Z</b>	<b>9</b>
<b>*</b>	<b>*</b>				
<b>0</b>	<b>space</b>	<b>-</b>	<b>0</b>		
<b>#</b>	<b>o</b>				

#### ➤ **EDIT RECORD**

Press  $\wedge$  or  $\vee$  key to select **EDIT RECORD** item. This function allows the user to modify a phonebook record.

1. Press  $\rightarrow$ OK key to enter, the first record in the phone book will be displayed.
2. Press  $\wedge$  or  $\vee$  key to select the designated record to change. Once a record has been selected, the user will have the option to edit each of the name/number and change melody.

#### ➤ **DEL RECORD**

Press  $\wedge$  or  $\vee$  key to select **DEL RECORD** item. This function allows the user to delete a phonebook entry.

#### ➤ **DELETE ALL**


Press  $\wedge$  or  $\vee$  key to select **DELETE ALL** item. This function allows the user to delete all phonebook entries.

#### ➤ **MEM STATUS**

Press  $\wedge$  or  $\vee$  key to select **MEM STATUS** item. If show 10/50, it means total 50 records can be stored in the phonebook and 10 records has been stored in it already.

### **Handset menu function 2: CALL LOG**

When LCD display **CALL LOG**

1. Press  $\rightarrow$ OK key to enter **MISSED** (missed call lists), **RECEIVED** (received call lists) or **DIALED** (dialed call lists).
2. The LCD will show the last record. (If no entries are available in the list, the LCD will be shown **EMPTY**).
3. Press  $\wedge$  or  $\vee$  key to view other record.
4. When the desired number is show, press  key to dial out the number automatically.

When the record is show, press  $\rightarrow$ OK key, use  $\wedge$  or  $\vee$  key to choose among **ADD TO PB?** **DELETE?** **DELETE ALL?** Then press  $\rightarrow$ OK key to confirm

**ADD TO PB:** this function allows the user to add an entry from the caller list to the phone book.

**DELETE:** this function allows the user to delete the currently selected entry from caller list

**DELETE ALL:** this function allows the user to delete all numbers

**Note:** In idle state, press  $\wedge$  key once to incoming records or press  $\vee$  key to review outgoing records.

**NEW CALL LED:** When there is missed call has not been read, this LED indicator will flash.

### **Handset Menu function 3: BS SETTINGS**

The user is able to change the base setting in base settings item, press  $\Rightarrow$ OK key and use  $\wedge$  or  $\vee$  key to select this item. Then you can do below:

#### **➤ DELETE HANDSET**

This function allows the user to delete a handset registration from the base.

1. Press  $\Rightarrow$ OK key, the first sub-menu is **DELETE HS**.
2. Press  $\Rightarrow$ OK key to enter, the user will be prompted to enter the PIN code.
3. Input the correct 4-digit pin code using digit key.
4. Press  $\wedge$  or  $\vee$  key to scroll the handset names list up and down.
5. Press  $\Rightarrow$ OK key to confirm. The delete handset will be deleted from the list on registered handset on the base, and the handset will behave according to the out of range condition.

**Note:** Press and keep  $\cdot\cdot\cdot$  key for 6s, then press  $\cdot\cdot\cdot$  key 7 times swiftly. All handsets will logout the base.

#### **➤ DIAL MODE**

The user can select to change the mode in which the base will dial.

1. Press  $\Rightarrow$ OK key, then press  $\wedge$  or  $\vee$  key to select **DIAL MODE** item.
2. Press  $\Rightarrow$ OK key to enter, and the display shows **TONE**.
3. Press  $\wedge$  or  $\vee$  key to select the **TONE** or **PULSE** dial mode.
4. Press  $\Rightarrow$ OK key to confirm your selection.

#### **➤ FLASH TIME**

The user can select to change the flash time (100ms, 300ms, 600ms and 1000ms).

1. Press  $\Rightarrow$ OK key, then press  $\wedge$  or  $\vee$  key to select **FLASH TIME** item.
2. Press  $\Rightarrow$ OK key to enter.
3. Press  $\wedge$  or  $\vee$  key to select the desired flash time among 100ms, 300ms, 600ms and 1000 ms.
4. Press  $\Rightarrow$ OK key to confirm your selection.



#### **➤ MODIFY PIN**

This function allows the user to change the pin number of the currently active base.

1. Press  $\Rightarrow$ OK key to confirm.
2. Then using  $\wedge$  or  $\vee$  key to select **MODIFY PIN** item.
3. Press  $\Rightarrow$ OK key to confirm, and the display shows **PIN?**.
4. The user will first be requested to entry the existing PIN code for the base by using numerical keys, then press  $\Rightarrow$ OK to confirm.
5. If the old code is validated, the user will be prompted to enter a new PIN code (4 digits), press  $\Rightarrow$ OK to confirm.
6. Once a new PIN code has been entered, the user will be requested to repeat to input the new PIN code.
7. Press  $\Rightarrow$ OK to confirm, the code will be stored to the base and a tone sounded.

#### **➤ BASE DEFAULT**

This function allows the user to restore the base setting to the factory default.







1. Press OK key, then press  $\wedge$  or  $\vee$  key to select **BS DEFAULT** item.
2. Press OK key to confirm.
3. The user will be prompted to enter the PIN CODE, the display shows **PIN?**, then press numerical keys to input code.
4. If the PIN code is validated all base settings will be returned to the factory default.

#### **Handset Menu function 4: HS SETTINGS**

The user is able to change a number of the settings for the handset to their own individual preferences. Use  $\wedge$  or  $\vee$  key to select **HS SETTINGS**. Then you can do below:

##### **➤ ALARM**


The user is able to set the alarm on the handset and adjust the alarm settings.

1. Press OK key, the first sub-menu is **ALARM** item.
2. Press OK key to confirm.
3. Press  $\wedge$  or  $\vee$  key to select **ON** or **OFF**, and press OK to confirm. Selection of **ALARM OFF** will turn the alarm off, and the user is dropped back to the “**ALARM**” menu. Selection of **ALARM ON** option will turn the alarm on, then the user will be requested to set the alarm time.
4. After select **ON**, press OK key to start the time settings of alarm, 00-00 displayed with the first “00” flashing,
5. Press  $\wedge$  or  $\vee$  key to edit the alarm time (including AM/PM)
6. Press OK key, the user will be presented with a further option to select to **SNOOZE ON** or **SNOOZE OFF** to enable or disable the snooze function on the alarm.
7. Press OK key to confirm your selection. And the alarm icon will show on LCD.

##### **■ Startup alarm:**

In idle state, the alarm will ring at very sharp hour you have set.

##### **■ Intermit alarm:**





During the alarming, press any key except  key, and will begin to ring after 6 minutes. When a call comes, the alarm will be intermitted too.

##### **■ Close alarm:**

Press  key to close alarm or enter alarm setting state, select **OFF**.

##### **➤ RING SETUP**

The user is able to change the handset ringing on internal calls and external calls. There are 10 ringer melodies and 5 different volume levels can be set.

1. Press OK key, then press  $\wedge$  or  $\vee$  key to select “**RING SETUP**” item.
2. Press OK key to enter.
3. Press  $\wedge$  or  $\vee$  key to select the **INT RING** and **EXT RING** setup.
4. Press OK key to confirm.
5. Press  $\wedge$  or  $\vee$  key to select the **MELODY** and **VOLUME** setup.
  - If select **MELODY**,
    - 1) Press OK key to confirm.
    - 2) Press  $\wedge$  or  $\vee$  key to select desired melody, the corresponding melody sound can be heard with the selection.



3) Press **↵OK** key to confirm your selection.


■ If select **VOLUME**,

1) Press **↵OK** key to confirm.

2) Press **∧** or **∨** key to select desired ringer volume **1- 5**, the corresponding volume sound can be heard. If you want to switch off, select **VOLUME OFF**.

3) Press **↵OK** key to confirm your selection.

**Notes:**

1. If you select **VOLUME OFF** for **INT RING**, when transfer call to this unit, it will not ring;
2. If you select **VOLUME OFF** for **EXT RING**, there will be a ringing off icon  display on LCD and when there is an incoming call, the handset will not ring.(Shortcut key: press and hold # key to switch the handset external call ring on/off)

➤ **TONE SETUP**

The user is able to change the handset tone settings.

1. Press **↵OK** key, then press **∧** or **∨** key to select **TONE SETUP** item.
2. Press **↵OK** key to enter.
3. Press **∧** or **∨** key to select the **KEY TONE** and **BATTERY LOW, RANGE ALARM** setup.
4. Press **↵OK** key to confirm.
5. Press **∧** or **∨** key to select the **ON** or **OFF** to enable/disable the sounding of a beep respectively.
6. Press **↵OK** key to confirm your selection.

**Notes:** after this setting,

1. a beep for key tone will sound when a key is pressed on the handset.
2. a beep for battery low then the battery is low.
3. a beep for range alarm will sound when the handset is out of ringed of the base

➤ **LANGUAGE**

1. Press **↵OK** key, then press **∧** or **∨** key to select **LANGUAGE** item.
2. Press **↵OK** key to enter.
3. Press **∧** or **∨** key to select the language among **ENGLISH** (English), **DEUTSCH** (German), **FRANÇAIS** (French), **ITALIANO** (Italian), **ESPAÑOL** (Spanish), **PORTUGUES** (Portuguese), **PYCCKHÑ** (Russian), **TÜRKÇE** (Turkey), **ΕΛΛΗΝΙΚΑ** (Greek), **ΥΚΡΑΙHCBKÑ** (Ukrainian), **POLSKI** (Polish), **MAGYAR** (Hungarian), **SVENSKA** (Swedish), **NEDERLANDS** (Dutch), **DANSK** (Danish) and **NORSK** (Norwegian). Each language will display in its own native translation.
4. Press **↵OK** key to confirm your selection.

➤ **HANDSET NAME**

The operation will allow the user to change the handset name

1. Press **↵OK** key, then press **∧** or **∨** key to select **HS NAME**,
2. Press **↵OK** key, when the function is selected, the screen will display the current handset label.
3. Enter the handset label, input the handset name.
4. If you make a mistake, press **R/C** key to correct.
5. Press **↵OK** key to confirm.

➤ **AUTO ANSWER**

The handset can be set to answer an incoming call automatically when it is on the cradle. The user is able to

select to enable/disable this auto answer feature.

1. Press **↵OK** key, then press **∧** or **∨** key to select **AUTO ANSWER**,
2. Press **↵OK** key to enter.
3. Press **∧** or **∨** key to select **On** or **OFF**
4. Press **↵OK** key to confirm your selection. Exit from this sub-menu will return the user to the **AUTO ANSWER**

#### ➤ **BARRING**

The Handset can be set to disable the outgoing call numbers that begin with the barring number set. The user is able to select to enable/disable this feature. Note that internal calls to intercom or conference will still be available.

1. Press **↵OK** key. Press **∧** or **∨** key to select **BARRING**,
2. Press **↵OK** key the user will be prompted to enter the PIN code, input 4-digit code (defaulted as 0000).
3. Press **↵OK** key to confirm, then press **∧** or **∨** key to select **ON** or **OFF**, press **↵OK** key to confirm.
4. If select **ON**, the display shows **NUMBER 1**, press **∧** or **∨** to choose **NUMBER i(i=1~4)**.
5. Then press **↵OK** to confirm, using the numerical key to input number (maximum 4 digits) you want to barring. (For example: if you set barring number is 1234, then the numbers begin with 1234 will be not allowed to be dialed out.)
6. Press **↵OK** to confirm. Repeat the above steps to set the rest of 3 groups.

#### ➤ **DATE & TIME**

The user is able to set the date and time on the handset, by selecting the following option. Press **↵OK** key to enter date and time settings.

1. Press **↵OK** key, then press **∧** or **∨** key to select **DATE&TIME**,
2. Press **↵OK** key and the last two digits of the year flashes.
3. Edit the year, month, time and date by pressing **∧** or **∨** key.
4. Press **↵OK** key to confirm the setting, and return to the **“DATE & TIME”** menu.

**Note:** The date and time will be automatically set when the first caller ID message is received.

#### ➤ **CONTRAST**

The user is able to set the contrast of the LCD display, by selecting the following options.

- 1) Press **↵OK** key to enter LCD display contrast settings.
- 2) Press **↵OK** key. Use **∧** or **∨** key to select **CONTRAST**,
- 3) Press **↵OK** key to confirm, then press **∧** or **∨** key to select from 1-8 levels.



#### ➤ **SELECT BASE**

This function allows the user to register the handset to existing base (with other handset registration)

1. Press **↵OK** key, then press **∧** or **∨** key to choose **SELECT BASE**.
2. Press **↵OK** key and the LCD displays **BASE 1 + .**
3. Press **∧** or **∨** to select base (BASE 1~4) or AUTO.
4. Press **↵OK** to begin searching, if you hear a sound of “di-du”, means register successful.

#### ➤ **HANDSET DEFAULT :**





 
This function allows the user to restore the handset setting to the factory default.

1. Press  **OK** key, then press  $\wedge$  or  $\vee$  key to select **HS DEFAULT** item.
2. Press  **OK** key to confirm.
3. The user will be prompted to enter the PIN CODE, the display shows **PIN?**, then press numerical keys to input code.
4. If the PIN code is validated all base settings will be returned to the factory default.


#### **Handset Menu function 5: REGISTRATION**

Maximum 5 handsets can be linked to the same base unit by the follow ways,

Maximum 4 bases can be linked to the same handset by the follow ways:


1. In standby mode, press  **OK** key, then press  $\wedge$  or  $\vee$  key to select **REGISTRATION** item.
2. Press  **OK** key to enter. Press  $\wedge$  or  $\vee$  key to select BASE from **BASE1**, **BASE2**, **BASE3** or **BASE 4**.
3. Press  **OK** key to confirm, LCD displays **PIN?** Then enter the pin code (defaulted as 0000, if input wrong number, press **R/C** to delete).
4. When finished press  **OK** key to confirm. LCD display **SEARCHING**, then press and hold  key until you has get **DI-DU- DU-** sound. The handset and base have registration successfully.


#### **Notes:**

1. If the handset and base is fail to registration successfully, the handset will return to the standby mode.
2. You can repeat the above steps to register another handset for the same base, and the successfully registered handset will displays **HS2** or **HS3** on the LCD according to the registration sequence.
3. Press  key to page the handset when difficult to look for.

#### **OPERATION**

##### **Handset and hands-free mode**

Press  key once to obtain a dial tone, dial your number, when you hear the called party answers the phone, you can begin your conversation.



During the conversation, press  key to transfer the conversation mode between handset and hands-free.

##### **Hands-free and handset volume control**

During handset mode, press  $\wedge$  or  $\vee$  key to adjust the handset volume. There are 5 levels for selection.

During hands-free mode, press  $\wedge$  or  $\vee$  key to adjust the speaker volume. There are 6 levels for selection.

##### **Mute the speakerphone**

During a call, press  **OK** key once to mute the mouthpiece and **MUTE** will show on LCD. Press  **OK** key again to get back to the call and the **MUTE** will disappear.

##### **Caller ID – type I & II**

###### **➤ TYPE I**

After you have applied the caller ID service, you can see the caller phone number during an incoming ring.

###### **➤ TYPE II**

During the conversation, the phone number of the incoming call of the second caller can be seen in the unit. This function can be worked when the user applied the Telecom service.

##### **Flash**

When dial a number and the line is busy, press **R/C** key and **RD/P** key to dial it out again.


##### **Pause**

Press **RD/P** key will insert a time delay of 3.6 seconds in a dialing sequence.


## Pre-dialing

The unit has pre-dialing function, when you may enter and edit the number before dial it out.

The following procedure describes how to use this function:

1. In idle mode, enter the number you want to dial. During entering, you can press **R/C** key to correct the number.
2. Press  key, the unit will dial out the number show on the LCD.

## Redial

Press  key, press **RD/P** key, the last dialed number will be dialed again.

## To Lock/Unlock the keypad

### To lock the keypad

Press and hold the  key for about 2 seconds.

You will hear a beep tone. While the keypad is locked, any key you press is invalid.

### To unlock the keypad

Press and hold the  key for about 2 seconds.

You will hear a beep tone again, it will go back to idle mode.



## MULTI-HANSET OPERATION

Maximum 5 handsets can be linked to the same base unit. Maximum 4 bases can be linked to the same handset.

If you have more than one handset registered with one base, there are some advanced functions, operation it by the follow ways:


## Intercom

The intercom feature is activated by pressing the **INT** key.



1. In idle mode, press **INT** key once.
2. The user will be prompted to select the number of the internal handset with which you wish to connect, press the registered number of the handset you want to call
3. The destination handset will ring, press  key to enter conversation mode. To end intercom mode, any handset press  key.



## Call transfer

During a call, it's to transfer the call to another handset.

1. During a phone call, press **INT** key once, you will be prompted to select the number of the internal handset with which they wish to connect, press the registered number of the handset you want to call
2. The destination handset will ring. With the melody defined for an internal call.
3. Press  key of the ringing handset to accept the call.
4. The two internal handsets will be connected. To complete the transfer of the call, the initiating handset should be placed on the cradle and the external call will now be connected to the second handset.

## Three-way conference call

1. When a call comes, Press 
2. Then press **INT** key once, you will be prompted to select the number of the internal handset with which you wish to connect, press the registered number of the handset you want to call
3. The destination handset will ring.
4. Press  key to accept call.

5. Press the  key of the initial handset, then you can talk all together.
6. Press  to quit the three-way conference mode, then other parties can also continue to communication.

## TROUBLE SHOOTING

### ✧ **No signal bar is displayed on the screen**

- ✓ The handset is out of range. Move it closer to the base station

### ✧ **No dialing tone**

- ✓ Check your phone connections
- ✓ The handset is out of range. Move it closer to the base station

### ✧ **No docking tone**

- ✓ The handset is not placed properly on the base station/ charger
- ✓ The charging contacts are dirty. Disconnect the power adaptor first and clean the contact with proper damp cloth.

### ✧ **The handset on the charger does not charge**

- ✓ Make sure the batteries are inserted correctly.
- ✓ Make sure the handset is placed properly on the base station/ charger
- ✓ The charging contacts are dirty. Disconnect the power adaptor first and clean the contact with proper damp cloth.
- ✓ Batteries are defective. Purchase new ones for replace.

### ✧ **No display**

- ✓ Make sure the batteries are charged
- ✓ Make sure there is power and the phone is connected

### ✧ **The handset no ring**

- ✓ Make sure it is not in mute
- ✓ Make sure the handset ring tone is turned on.

### ✧ **Ring volume too low**

- ✓ Check if the ringing volume is set improper, reset it.

### ✧ **Receive only**

- ✓ Check if P/T mode is properly set.
- ✓ Check if you have set the barring number, if you want dial out this number, reset the barring number.

### ✧ **The base can not page the handset**

- ✓ Repeat the registration operations to register the base and handset again.

### ✧ **Most of the functions failed**

- ✓ Check if the batteries are strong enough, charge the batteries.
- ✓ If batteries are ok, remove the battery, unplug the lines and reinstall after 10 minutes.

**Note:** Due to continuous product development, all features and specifications are subject to change without prior notice.

1. This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the bottom of this equipment is a label that contains, among other information, a product identifier in the format US:AAAEQ##TXXXX. If requested, this number must be provided to the telephone company.
2. A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.
3. If this equipment [US: RWCW401A4304327] causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.
4. The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.
5. If trouble is experienced with this equipment [US: RWCW401A4304327], for repair or warranty information, Service can be facilitated through our office at:  
U.S. Agent Company name: Iconsigh Inc  
Address: 2310 Homestead Road, Suite C1, Los Altos, CA, 94024, USA  
Tel: +1 (408) 320-9867  
Fax: N/A  
If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.
6. Please follow instructions for repairing if any (e.g. battery replacement section); otherwise do not alternate or repair any parts of device except specified. For repair procedures, follow the instructions outlined under the limited warranty.
7. Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information.
8. If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this [TE] does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.
9. If the telephone company requests information on what equipment is connected to their lines, inform them of:
  - a) The ringer equivalence number [01A]
  - b) The USOC jack required [RJ11C]
  - c) Facility Interface Codes ("FIC") [N/A]
  - d) Service Order Codes ("SOC") [N/A]
  - e) The FCC Registration Number [US: RWCW401A4304327]
10. The REN is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company. The REN for this product is part of the product identifier that has the format US:AAAEQ##TXXXX. The digits represented by ## are the REN without a decimal point. For this product the FCC Registration number is [US: RWCW401A4304327] indicates the REN would be 01A.
11. We suggest the customers use a surge arrestor to protect the device.

#### FCC Caution:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Privacy of communications may not be ensured when using this phone.

#### IMPORTANT NOTE:

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### Radiation Exposure Statement:

This base complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator& your body. The handset has been tested and comply with FCC SAR limits.