


USER MANUAL

CONTENTS IS INSPECTED

1

I. KEYS INTRODUCTION

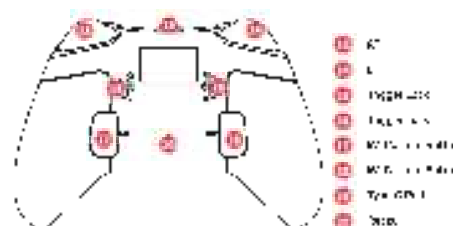

2

II. POWER ON/OFF


1. [Power On]

Press the Power On button to turn on the controller.



2. [Power Off]

Press the Power Off button to turn off the controller.

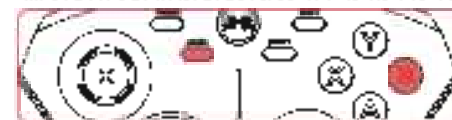

3. [Emergency shutdown button]

When the controller is in a state of emergency, the emergency shutdown button can be used to stop the controller. The emergency shutdown button is located on the back of the controller.

3

III. CONNECT TO PC/TV

1. [WIRELESS CONNECTION]

Press the Power On button to turn on the controller.

Press the Connect button to connect the controller to the PC/TV.



Press the Power On button to turn on the controller.

Press the Connect button to connect the controller to the PC/TV.



4

VI. OTHER FUNCTIONS AND BATTERY

1. [TURBO FUNCTION]

Press the Turbo button to activate the Turbo function.



Press the Turbo button to activate the Turbo function. The Turbo function allows the controller to operate at a higher frequency, resulting in faster response times.

2. [JOYSTICK D-PAD SWITCH]

Press the Joystick D-Pad Switch button to toggle the Joystick D-Pad Switch.



Press the Joystick D-Pad Switch button to toggle the Joystick D-Pad Switch. The Joystick D-Pad Switch allows the controller to operate in either Joystick or D-Pad mode.

5

IV. FEATURES FOR CONTROLLER

1. [SENSITIVITY KEY OPERATION]



Press the Sensitivity Key to adjust the sensitivity of the controller. The Sensitivity Key is located on the back of the controller.

2. [WIRE CONNECTION]

Press the Wire Connection button to connect the controller to the PC/TV via a wired connection. The Wire Connection button is located on the back of the controller.

Press the Wire Connection button to connect the controller to the PC/TV via a wired connection. The Wire Connection button is located on the back of the controller.

6

V. SOFTWARE CONFIGURATION

1. [CONTROLLER ASSISTANT DOWNLOAD]

Press the Power On button to turn on the controller. Press the Connect button to connect the controller to the PC/TV. Press the Assistant Download button to download the Controller Assistant software.



2. [MINI GAME UPDATES]

Press the Mini Game Updates button to update the Mini Game software.



Press the Mini Game Updates button to update the Mini Game software. The Mini Game Updates button is located on the back of the controller.

Press the Mini Game Updates button to update the Mini Game software. The Mini Game Updates button is located on the back of the controller.

7

COUNTERWEIGHT & RECEIVER STORAGE

Press the Counterweight & Receiver Storage button to store the counterweight and receiver.

Press the Counterweight & Receiver Storage button to store the counterweight and receiver.

Press the Counterweight & Receiver Storage button to store the counterweight and receiver.



3. [TRIGGER STROKE ADJUSTMENT]

Press the Trigger Stroke Adjustment button to adjust the trigger stroke.

Press the Trigger Stroke Adjustment button to adjust the trigger stroke.

Press the Trigger Stroke Adjustment button to adjust the trigger stroke.



8

ABOUT BEITONG

Beitong is a leading manufacturer of gaming controllers. We have over 25 years of experience in the industry. Our products are known for their high quality and performance.

CUSTOMER SERVICE

For more information, please contact our customer service team.

9

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.