


switch is on, and whether the tool supports the vehicle.

2. Q: Why does the system stop while reading the data stream?

A: This may be caused by loose diagnostic connection. Please unplug the connector and



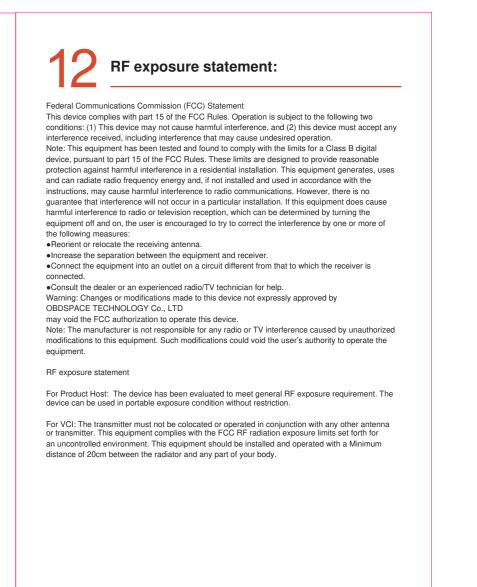

PDF