(90*110mm说明书做风琴折)


ANJANK

AC201 User Manual



If a faulty product is found when setting up please email us at customer02@kerchanstar.com

Power Specifications	1
Package Include	
Features	
Front View	
Top View	2
Back View	
Bottom View	4
Getting Started	
Dimmer Control	
Wireless Speaker Pairing	
Auto Time Setting	•
Manual Time Setting	
Alarm and Ringtone Setting	
Alarm Pause / Snooze1	
Alarm On/Off1	
Manual-scan Radio Station1	
Auto-scan Radio Station1	-
Radio Alarm Setting1	-
Sleep Timer Setting1	
Wireless Charging	
Support1	
	•

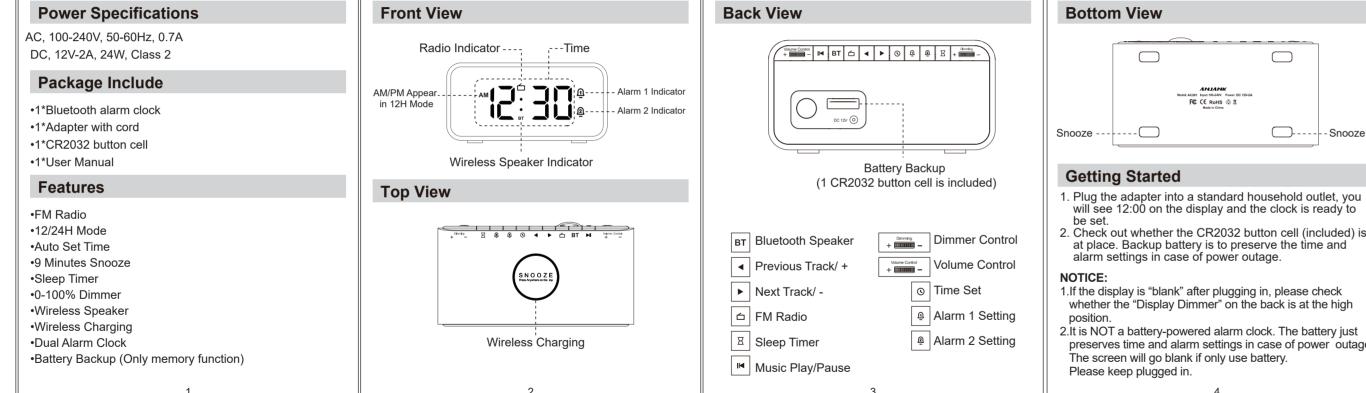

- will see 12:00 on the display and the clock is ready to

- whether the "Display Dimmer" on the back is at the high
- preserves time and alarm settings in case of power outage.

Dimmer Control

The "Display Dimmer" dial is at the back of the clock, an the adjustable brightness range is from 0 to 100%.

Wireless Speaker Pairing

1.Press " **BT** " button to turn on/off the wireless speaker. When the wireless speaker turns on, "BT " icon will blink for pairing.



2. Enable your phone bluetooth and select "AC201" from its available/paired list. After pairing successfully, " BT light on.



- 3.Press " **4** " or " **b** " button to play the previous trac next track, or press " 🚺 " button to pause it.
- 4.Slide the "Volume Control" dial or use your phone to a the speaker volume.

NOTICE:

- 1. When wireless speaker turns on, the "AC201" will automatically connect to the last phone if available If not, "AC201" will enter pairing mode.
- 2. Long press "BT" button to exit the current bluetooth device connection and enter paring mode again, " **BT** " icon will blink.
- 3. When radio is on, press " BT " button, radio will turn off. And the "AC201" will automatically connect to the last phone, but the music will not play automatically, you need to press " I button or use your phone to start.
- 4. Not available as the phone function.
- 5. Place your speaker and phone no more than 10 meters (33ft) away from each other.

Under Bluetooth connection, the clock will auto-sync tim according to your phone. If you want change hour format press the " 🕟 " button.

Because of the MAP/HFP protocol restriction, some phone did not support the auto-setting. If the clock cannot autocorrect time, please set time manually.

Auto Time Setting

NOTICE:

Manual Time Setting


1.Press the " ()" button to set HOUR setting. Press "
" or "
" button to set hour.



2.Press the " () " button to confirm and enter MINUT setting. Press " < " or " > "button to set minute.



3.Press the "O" button to confirm and enter 12/24 hour mode setting. Press "◀ " or " ▶" button to select

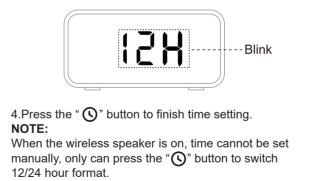

Alarm And Ringtone Setting

.Take the example of setting Alarm 1. Press the "ቧ" button to enter ALARM HOUR setting. Press " to set hour.

Blink ----

2.Press the " 🗿 " button to confirm and enter MINUTE setting. Press "◀ " or " ▶ " button to set minute.



3.Press the "1 " button to confirm and enter RINGTONE setting. A number will be shown on the display and sound will be played accordingly to indicate the alarm ringtone (#01 is Beep, #02 is FM Radio). Press "◀" or "▶" button to select your preferred ringtone



4.Press the "@" button to finish alarm setting. The Alarm 2 also works in the same way.

NOTICE:

"ቧ" button only works on alarm 1 setting, not alarm

Alarm Pause / Snooze

When the alarm goes off, you have two options: 1.Press any button except SNOOZE button to stop the alarm when it's ringing. Alarm will go off next day.

2.Press SNOOZE button to snooze, " @ " icon will blink on the display. The alarm will go off again 9 mins late If you want to cancel snooze, press " A ", and the alarr 1 will not go off today.


NOTICE:

when setting alarm.

Alarm On / Off

Long press the "ฏ" button to turn on or off the Alarm 1. If "🗓" icon on the display disappears, this alarm will NOT go off next day. The Alarm 2 also works in the

- 1. The SNOOZE button is at the bottom of clock, press the clock top to get snooze.
- 2.Beep alarm (#01 ringtone) will last 5 minutes; FM radio alarm (#02 ringtone) will sound for 1 hour.
- 3. The alarm ringtone will start off quiet and gradually get louder for the first 30s.
- 4.The beep alarm (#01 ringtone) volume is default, can n be adjusted. You can adjust the FM radio alarm (#02 ringtone) volume by rolling the "Volume Control" of

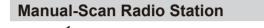

1.Press " 👉 " button to turn radio mode on or off. 2.When the radio is on, press " channel.




Auto-scan Radio Station

When the radio is on, long press " 숩 " button, FM radio will scan and auto-store the scanned stations. T press " < " or " < " button to select your favorite channel

Radio Alarm Setting

When the radio is on, you can select the channel you wan and long press " @ " button until the letter "AL1" blinks on the display. It means this channel is saved as the second alarm ringtone for Alarm 1.

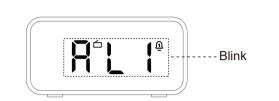

Sleep Timer Setting

When the radio or wireless speaker turns on, you can pres the "X" button repeatedly to select the sleep time ranging from OFF, 10, 20, 30, 40 to 120 minutes.

Wireless Charging

The round area of clock top is wireless charging sensor. Place your phone in the center, the phone will light up if charging successfully.

1.Remove any protective cases containing magnet, metal, or materials thicker than 0.12" (3mm)

2.Compatible with wireless charging enabled devices iPhone14/14Pro/14Pro Max/14 mini/13/13 Pro/ 13 Pro Max/13 mini/12/12 Pro/12 Pro Max/12 mini/11/ 11 Pro/11 Pro Max/XS Max/XS/XR/X/8/8 Plus; Samsung Galaxy Note 9/Note8/S8/S8 Plus/S7/S7 Edge/ S6 Edge Plus/S9/S10/S10 Plus/S10E/S20/S21/S22/S Google Pixel 7/7Pro/6/5/4/4XL/3/3XL, Nexus 4/5/6/7; LG V50/V40/V35/V30: LG G8/G7/G6. And other device with wireless charging function.

Support

If you have any issue with this clock, please contact us a customer02@kerchanstar.com. We will address your issue within 24 hours.

Any changes or modifications not expressly approved by the party responsible for comp the user' s authority to operate the equipm

e complies with Part 15 of the FCC Rules. Operation is subject to the following uipment has been tested and found to comply with the limits for a Class B dig rsuant to Part 15 of the FCC Rules. These limits are designed to provide reasonal against harmful interference in a residential installation. This equipment generate datate radio frequency energy, and if not installed and used in accordance with th In addite factor feedback energy, and in instance and used in accordance with the nos, may cause harmful interference to radio communications. However, there is no ee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by turning the ent off and on, the user is encouraged to try to correct the interference by one or more of

the following measures: - Reorient or relocate the receiving antenna.- Increase the separation between the equipmer and receiver.- Connect the equipment into an outlet on a circuit different from that to which th receiver is connected.- Consult the dealer or an experienced radio/TV technician for help. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 2 between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitte