

Security Menu

6 Security

- 1 Lock code
- 2 Locking the phone
- 3 Restricting the phone
- 4 Entering priority numbers
- 5 Erasing call history list
- 6 Erasing phone book entries
- 7 Erasing SMS messages
- 8 Resetting preferences

This section provides information on how to use the following security features:

- Lock code
- Locking the phone
- Restricting the phone
- Entering the priority numbers
- Erasing call history list
- Erasing phone book entries
- Erasing SMS messages
- Resetting preferences

Lock code

When accessing the Security menu for the first time, enter the lock code supplied by your service provider. If you forget your lock code, contact your service provider.

Entering a new lock code

If it becomes necessary to change the lock code, create a new 4-digit code.

Security Menu

To enter the new lock code

1. From standby mode, press  menu.
 2. Press  Security
 3. Enter the current lock code.
 4. Press  New Code.
 5. Enter your new 4-digit lock code.
 6. Press  save.
- The phone displays confirmation of the new code entry.

Locking the phone

The phone can be locked to prohibit any outgoing calls except priority and emergency numbers.

- Incoming calls are not affected.
- No shortcuts are available for dialing emergency or priority numbers.
- All other functions are locked.



Tip

To unlock the phone, enter the lock code used to access the Security menu.

To lock the phone

1. From standby mode, press  menu.
2. Press  Security.
3. Enter your lock code.
4. Press  Lock Phone.
5. Scroll to select one of these options:
 - Never – The phone cannot be locked.
 - Now – Immediately locks the phone for one time only.
 - On Power Up – Locks the phone every time you turn the phone on.

Security Menu**To unlock the phone**

1. Press  **unlock**.
2. To return to the main menu, enter your lock code. (Enter the same lock code used to access the Security menu.) If you forget your lock code, contact your service provider.

Restricting the phone

Restricting the phone limits outgoing calls to emergency and priority numbers, plus phone book locations 1 to 9. Phone book changes cannot be made in this mode.

To restrict the phone

1. From standby mode, press  **menu**.
2. Press  **Security**.
3. Enter your lock code.
4. Press  **Restrict**.
5. Scroll to select one of these options:
 - **Yes** – Make calls to emergency numbers, priority numbers, and phone book locations 1 to 9 only.
There are no shortcuts for dialing emergency numbers or priority numbers unless you add them to your phone book.
 - **No** – Make calls to any number.

Entering priority numbers

Priority numbers can be called when the phone is locked or restricted. Store up to three priority numbers (maximum 32 digits each).

To enter a priority number

1. From standby mode, press  **menu**.
2. Press  **Security**.
3. Enter your lock code.

Security Menu

4. Press  Priority #.
5. Scroll to Priority#1, Priority#2, or Priority#3.
6. Press  **edit**.
7. Enter the phone number.
8. Press  **ok**.

Erasing call history list

This feature erases the entire call history list.

1. From standby mode, press  **menu**.
2. Press  **Security**.
3. Enter your lock code.
4. Press  **Erase Call**.
5. Press  **ok**.
 - ☐ To erase the entire call history list, press  **ok**.
 - ☐ To return to the menu without erasing the list, press .

Erasing phone book entries

This feature erases all entries in the phone book.

1. From standby mode, press  **menu**.
2. Press  **Security**.
3. Enter your lock code.
4. Press  **Erase Book**.
5. Press  **ok**.
 - ☐ To erase all entries in the phone book, press  **ok**.
 - ☐ To return to the menu without erasing the list, press .

Erasing SMS messages

This feature erases all SMS (short message service) messages, including all locked or unlocked text messages and all voice mail notification messages. Use this erase feature to avoid running out of memory (see To avoid running out of memory, page 42).

1. From standby mode, press  **menu**.
2. Press  **Security**.
3. Enter your lock code.
4. Press  **Erase SMS (short message service)**.
5. Press  **ok**.
 - ☐ To erase all messages, press  **ok**.
 - ☐ To return to the menu without erasing any messages, press .

Resetting preferences

This feature resets all preferences to the original settings (defaults) entered by your service provider. These preferences include those described in Preferences Menu, page 59, with these exceptions:

 
 
 
- The banner is *not* reset.
- The Service Provider Preferred and Prohibited Lists *are* deleted (see Service Provider Select, page 79).
- The lock code is *not* reset.
- The phone book, call history, or SMS messages are *not* erased.

To reset preferences

1. From standby mode, press  **menu**.
2. Press  **Security**, enter your lock code.
3. Press  **Reset Prefs**.
4. Press  **ok**.
5. When prompted to reset all preferences, press  **ok**.



Security Menu



Preferences Menu

7 Preferences

- 1 Sounds
 - 1 Ringer Type
 - 2 Ringer Volume
 - 3 Earpiece Volume
 - 4 Key Beep Sound
 - 5 Key Beep Volume
 - 6 Key Beep Length
 - 7 Mute Stereo
- 2 Display
 - 1 Backlight
 - 2 Sort Book
 - 3 Banner
 - 4 Auto Hyphens
 - 5 Show Time
 - 6 Time Zone
 - 7 Language
 - 8 Display Color
- 3 Alerts
 - 1 Fade
 - 2 Minute
 - 3 Service change
 - 4 New Message
- 4 Calling
 - 1 Auto Answer
 - 2 Auto Redial
 - 3 One-Touch Dial
 - 4 Auto-Key Answer
 - 5 Ring While Stowed

This section provides information on how to set up the following phone preferences:

- Sounds
- Display
- Alerts
- Calling

Preferences Menu

Sounds

To set up your personal sound preferences, changes can be made to the following functions:

- Ringer type
- Ringer volume
- Earpiece volume
- Key beep sound
- Key beep volume
- Key beep length
- Mute stereo

Ringer Type

For incoming calls, the ringer can be changed to one of eight different rings or melodies.

To set the incoming calls ringer type

1. From standby mode, press  **menu**.
2. Press  Preferences.
3. Press  Sounds.
4. Press  Ringer Type.
5. Press  or  to select the ringer type or melody from the list.
6. Press  **ok**.

Ringer Volume

From standby mode, to change the ringer volume choose *one* of the following:

- Press the volume buttons on the side of the phone.
- Press  **menu**.
 - Press  Preferences.
 - Press  Sounds.
 - Press  Ringer Vol.

Preferences Menu

- ❑ Press to increase or to decrease the volume.
- ❑ To turn off the ringer, press until the word “Silent” appears.
- ❑ To remind you that the ringer is off, the “Ringer Silenced” icon () displays.
- ❑ Press **ok**.

To silence the ringer when receiving a call

- Press .

Earpiece Volume

The earpiece volume is adjustable while on a call or from standby mode.

To adjust the earpiece volume while on a call

- Press the volume buttons on the side of the phone.

To adjust the earpiece volume while in standby mode

1. Press **menu**.
2. Press Preferences.
3. Press Sounds.
4. Press Earpiece Vol.
5. Press to increase or to decrease the volume.
6. Press **ok**.

Key Beep Sound

The sound you hear when pressing the keys (key beep) can be adjusted to either a tone or a click.

To adjust the key beep sound

1. From standby mode, press **menu**.
2. Press Preferences.
3. Press Sounds.
4. Press KeyBeepSound.

Preferences Menu

5. Press or to select “tone.” A tone sounds.
6. Press or again to select “click.” A click sounds.



Note

While on a call, if you select “click,” keys pressed for voice mail sound as “tones.” Other keys pressed in menus sound as “clicks.”

7. Press **ok**.

Key Beep Volume

The volume of the sound you hear when pressing the keys (key beep), can be adjusted.

To adjust the key beep volume

1. From standby mode, press **menu**.
2. Press **7 Prefs**.
3. Press **1** **Sounds**.
4. Press **5** **KeyBeepVol**.
5. Press to increase or to decrease the volume.
6. To turn the key beep volume off, press until the word “Silent” appears.
7. Press **ok**.

Key Beep Length

The length of the sound you hear when pressing the key (key beep) can be changed. The standard key beep is short and fixed in length. The custom key beep sounds as long as you press a key.

Using the standard key beep setting is recommended unless a service or device, such as answering machines, requires a custom key beep.