



MLS Kick It!

OPERATING INSTRUCTIONS

Remote Controller

- Unscrew the battery cover on the bottom of the remote with a Philips screw driver.
- Install 1 9v battery with polarities as shown inside the battery compartment.
- Replace the battery cover and screw shut.

Cleats/Vehicles

- Unscrew battery cover on the bottom of the cleat with a Philips screw driver.
- Install 2 AAA batteries with the polarities as shown inside the battery compartment.
- Replace the battery cover and screw shut.
- Turn switch ON to start your cleat.

Note:

 
 
 
 
 
 
For game play, only different frequencies can be operated at the same time. Your game includes a 27 and a 49 MHz cleat / vehicle.

The radio circuitry in your cleat and remote controller is sensitive. Radio interference can affect the control of the vehicle. You may have to choose another location to operate your vehicle.

PLAY with knobs for wheelies, turns, and spins



Copyright ©2005 Kid Galaxy, Inc.

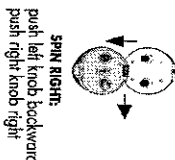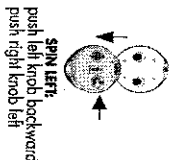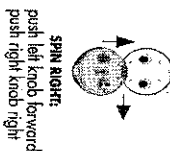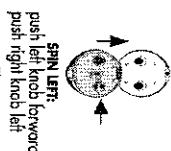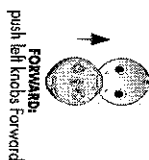

USER MANUAL

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Thank you for choosing MLS Kick It!, a high speed action RC soccer game that you can play in any room! One of the world's most popular sports is now in the palm of your hand! So have fun and Kick It!

Contents:

- 2 MLS Soccer Cleat vehicles
- 2 remote controls
- 2 soccer ball
- 4 disk cones
- 2 Kick It! scoops

Object:

1. Drive your MLS soccer cleat to kick the ball into your opponent's goal.
1. Choose the location and size of the playing field (5' by 3' field works best).
2. At the ends of the field set up your disk cones for your goals. Goals can be any size, bigger is better.
3. Choose your cleat vehicle and remote. The color of the button on the corresponding remote will match the color of the cleat.
4. MLS Kick It! comes with a special "scoop" attachment for each cleat. The scoop will make it easier for younger players and beginners. Remove the scoop for more challenging advanced play.

Playing the Game:

1. Start with a kick off in the center of your playing field. Face both cleats head to head with the ball in between them. On the count of 1-2-3, activate your cleat.
2. Drive, Dribble and Kick the ball with your cleat to your opponent's goal.
3. A goal is scored when the ball totally crosses the end line between the cones.
4. After a goal is scored resume play with a kick off in center field.
5. Game can be 10 minutes or 4 goals which ever comes first.

BATTERY OPERATED FOR HOURS & HOURS OF FUN!

1. Quality Full Function Control Requires: (1) 9 volt battery(not included).
2. KG Racer Car Requires: (2) AAA batteries (not included).
3. Available in 27MHz and 49MHz frequencies. Use different frequencies when racing two cars together.
4. Do not mix alkaline, standard (carbon-zinc), or rechargeable(Ni-Cd)batteries.
5. Do not mix old and new batteries.

WARNING:

Item No.: 50201

CHOKING HAZARD - Small parts
Not for children under 3 years.