

# SafetyPro™ IF2

MXA-K012-001



**Quick Start Guide** 



List of items	01
Meet xTool SafetyPro™ IF2	01
Connect xTool SafetyPro™ IF2	02
(Optional) Wall mounting	07
Use xTool SafetyPro™ IF2	09
Use with XCS	09
Indicator description ————————	09
Maintenance — — — — — — — — — — — — — — — — — — —	10

## List of items



Inline fan and controller



Protective cover



Ribbed plastic anchors



Screws



Bluetooth dongle



Wall-mounting fixture



Smoke exhaust pipe



Pipe connector 1



Pipe connector 2



Pipe clamp



Hex key



Quick start quide




Safety instructions

#### Note:


- The power cable varies according to the region in which the product is delivered.
- Pipe connector 1 is applicable to xTool S1 and F1 Ultra.
- Pipe connector 2 is applicable to xTool M1 Ultra, M1, F1, P2, P2S, D1, and D1 Pro.

## Meet xTool SafetyPro™ IF2

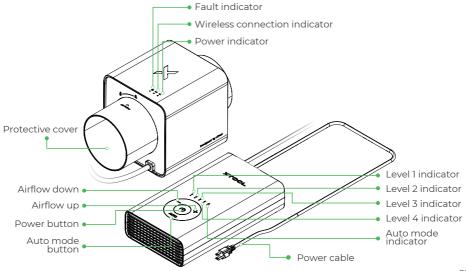


# Connect xTool SafetyPro™ IF2

## 1 Install the protective cover

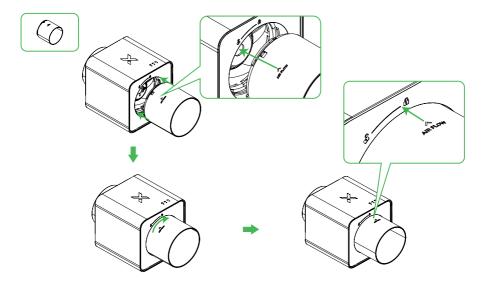

• Install the protective cover to the inline fan. Align the airflow inlet label with the locking symbol as illustrated.


## 2 Install the smoke exhaust pipe of the xTool SafetyPro™ IF2

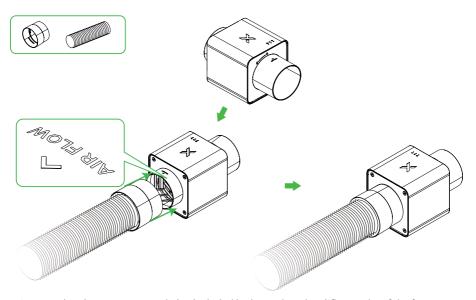


• Connect the pipe connector and pipe included in the pack to the airflow outlet of the fan.

## Connect the smoke exhaust pipe of xTool machines


### Applicable to xTool S1 and F1 Ultra

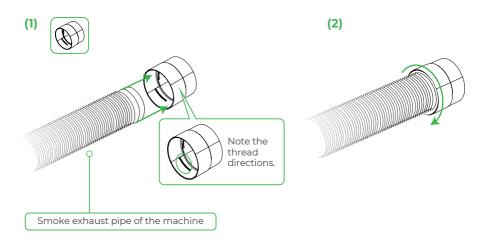


- Connect the smoke exhaust pipe of the machine to pipe connector 1.
- Rotate the pipe connector counterclockwise to secure the pipe and connector.

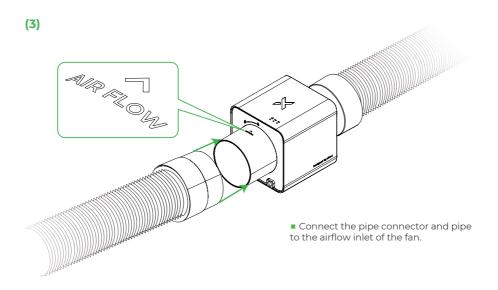


### Applicable to xTool M1 Ultra and F1

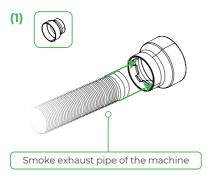


■ Connect the smoke exhaust pipe of the machine to pipe connector 2.

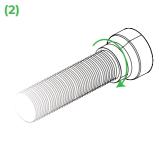


• Rotate the pipe connector counterclockwise to secure the pipe and connector.

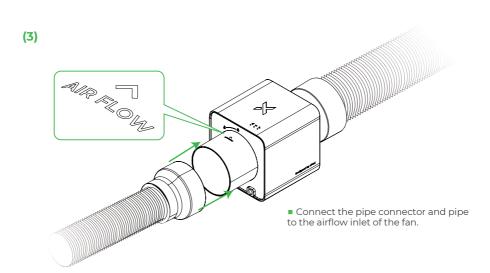



### Applicable to xTool M1, P2, P2S, D1, and D1 Pro

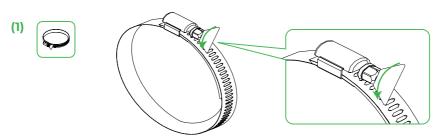


Loosen the pipe clamp.

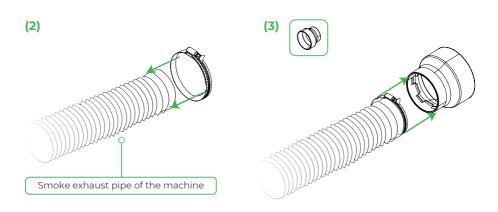

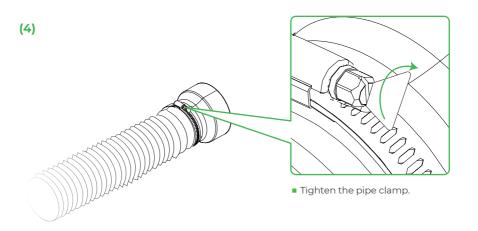

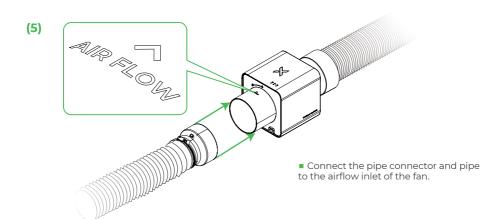


### 4 Connect to a power supply

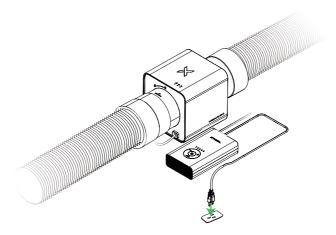

## 5 Set up wireless connection




A wireless connection can be established only with xTool S1, M1 Ultra, P2S, and F1 Ultra.

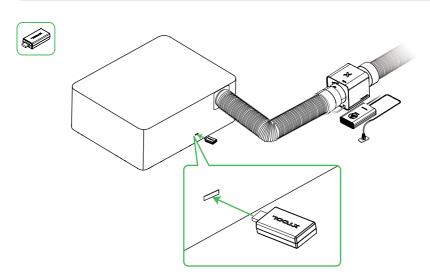


- Connect the Bluetooth dongle to the extension port of the xTool machine. The preceding figure is for reference only.
- After the Bluetooth dongle is connected, the connection between the inline fan and the xTool machine is automatically established. The machine's **Device settings** page on XCS displays information about the inline fan. For more details, see "Use with XCS."
- To pair again, press the power button of the inline fan for at least five seconds. The wireless connection indicator blinks white.


# (Optional) Wall mounting

 ■ To fix the device in a place, you can fasten it to a wall-mounting fixture before installing the smoke exhaust pipes.



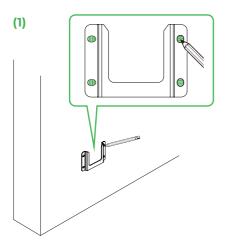


■ Place the wall-mounting fixture against the wall, determine the proper position, and mark each hole's location with a pencil.

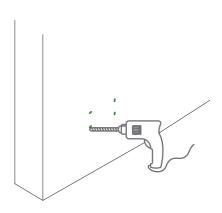


■ Drill the four holes marked.




■ To better secure the screws, you can hammer the ribbed plastic anchors into the holes before applying the screws.

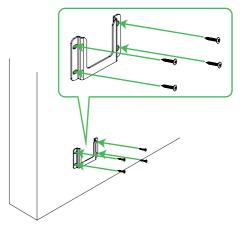


 (3)

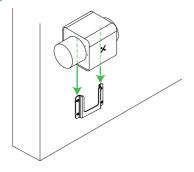




■ Slide the fan body along the fixture, with the wall-mounting bracket of the fan fitting on the fixture.

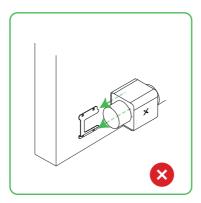




• Never mount the wall-mounting fixture sideways or mount on a ceiling. Otherwise, the inline fan may not be fixed properly.



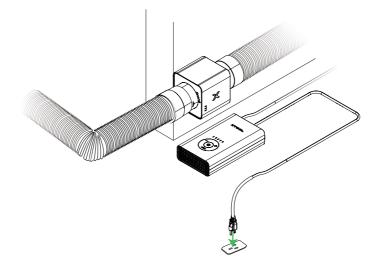

# Use xTool SafetyPro™ IF2

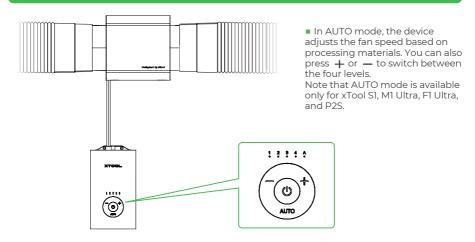

## **Use with XCS**

#### **Download XCS**



### Use xTool SafetyPro™ IF2 on XCS



support.xtool.com/article/1644

# Indicator description


Indicator	Indicator status	Device status
Power indicator 💃	Solid green	Connected to power
Wireless connection indicator	Blinking white	Connecting to the machine
	Solid white	Connected to the machine
Fault indicator	Solid red, with the buzzer beeps once every 8 seconds	<ul><li>Fan blocked due to dust build-ups</li><li>Abnormal fan speed</li></ul>
	Blinking red, with the buzzer beeps twice every 8 seconds	Protective cover not installed or incorrect installation of the cover
	Solid white	Working in AUTO mode
Auto mode indicator Å	Blinking white	Failed to work in AUTO mode due to mismatched machine model or incorrect Bluetooth connection

## Maintenance

### Clean the fan


In the case of abnormal fan speed or poor smoke exhaust due to dust build-ups, you need to clean the fan blade.

#### 1. Remove the fan

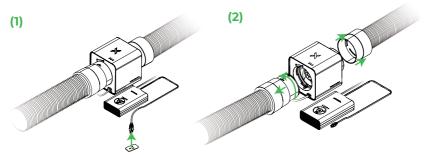



■ Disconnect the power cable.

■ Remove the protective cover by rotating it counterclockwise. Then remove the pipe connector at the other side.

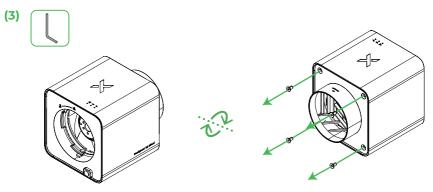


■ Remove the four screws securing the case using the hex key included in the package.

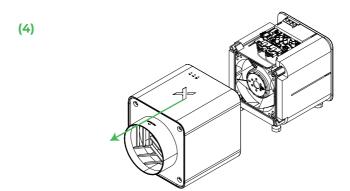


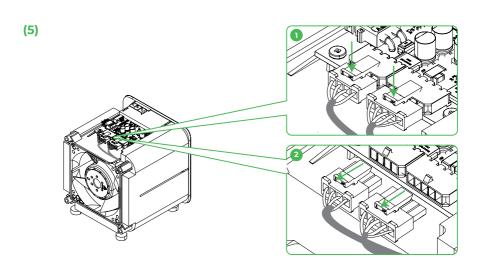


■ Hold one terminal and press the position illustrated using your thumb. Then take out the terminal. Repeat the steps and take out the other terminal.

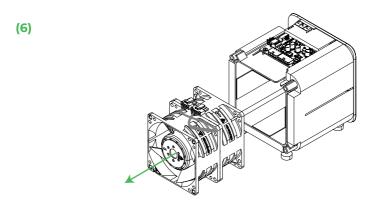

#### 2. Clean the fan

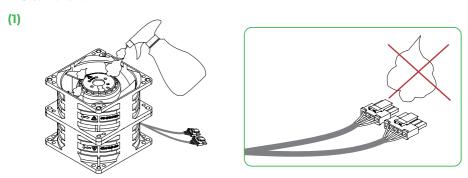


• Clean the fan blade using a degreasing cleaner. Avoid applying the cleaner on the terminals.

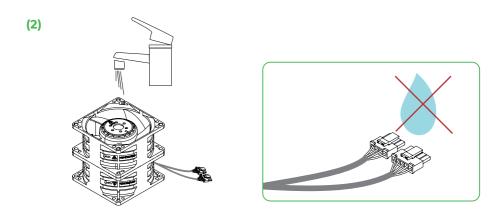


■ Wash the fan blade with a gentle stream of water. Ensure that water does not come into contact with the terminals.

**Note:** To prevent damage to the fan, do not use a high-pressure water spray to rinse the fan or immerse the fan completely in water.

#### 3. Install the fan back

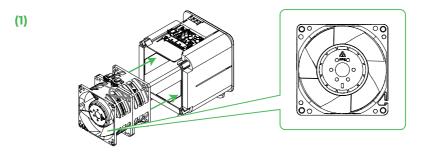

• When the fan is dry, put it back with the four-blade side facing outward.

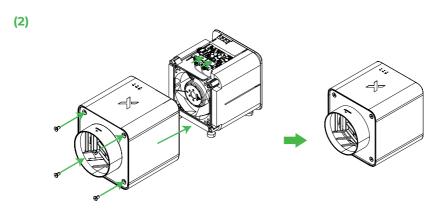

■ Insert the terminals back in place and install the cover back.

