

#### SPECIFICATIONS:

Frequency Response: 20 Hz to 20 KHz  
Driver Size: 10 mm  
Nominal Impedance: 16 ohm  
Sweat Proof: IPX4 (for earbuds only)

#### BATTERY INFORMATION:

Build-in Battery: Lithium Rechargeable  
Earbuds Battery Capacity: 30mAh  
Charging Case battery Capacity: 200mAh  
Input: DC 5V/60mA  
Music playing time: Approx. 4 hours\*  
Earbuds charging time: Approx. 2 hour  
Input Voltage Rating: DC 5 V.1Amp  
Output Voltage Rating: 3.7V

#### BLUETOOTH INFORMATION:

Bluetooth Specification: V5.4  
Operating Distance: Up to 33 ft. (10 Meters)  
System Requirements: Bluetooth\* enabled device

\* Approximate playback time depends on individual use and may be more or less than the time specified.

#### FCC NOTICE

FCC ID: 2A ML6KR414

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction

Bluetooth®



True Wireless Earbuds 6 Charging Case

USER MANUAL FOR BSTWS44

IMPORTANT PLEASE READ BEFORE USING THIS PRODUCT

#### AUTO PAIRING

· Open the charging case and take earbuds out, the earbuds will automatically turn on. To pair the earbuds with your Bluetooth enabled device, open the Bluetooth setting on your device and select "BSTWS44." After the initial pairing, the earbuds should pair to the device automatically every time they are taken out of the case.

#### OPERATION

##### POWER ON/OFF

· Remove the earbuds from the charging case. The earbuds will automatically turn on. Place earbuds into charging case to automatically turn off.

##### PLAY/PAUSE MUSIC

When listening to music:

· Tap the left or right earbud once to play or pause the music.

##### PREVIOUS/NEXT SONG

When listening to music:

· Tap the left earbud two times to go to Previous Song.

· Tap the right earbud two times to go to Next Song.

##### VOLUME +/-

· Tap the right earbud three times to increase Volume.

· Tap the left earbud three times to decrease Volume.

##### ANSWER/HANGUP CALL

When there is an incoming call:

· [Right] once to answer the call.

##### REJECT INCOMING CALL

When there is an incoming call:

· [Left] x3 or [Right] x3 for 2 seconds to reject the call.

##### VOICE ASSISTANT

· Press and hold left or right earbud for 3 seconds to activate Siri voice assistant.

NOTE: Siri voice assistant feature is only available when the earbuds are paired with your iOS Smartphone or Tablet device. This feature will not work with any other Bluetooth enabled devices connected to your earbuds.

#### CHARGING FUNCTION

##### RECHARGING THE BATTERY IN THE CHARGING CASE

· There is a USB-C cable included in the box.

· Connect it to the USB type-C charging port on the charging case and the other end into a USB power source to charge your case. While charging, the LED lights on the charging case will flash.

· When the battery meter on the charging case shows fully charged, the USB power source is fully charged and you can disconnect the USB-C charging cable from the case and the USB power source.

##### EARBUDS CHARGING

· Earbuds light will turn solid red, and LED display of case will flash white. After fully charged, the LED indicator light will go out.

· Place the earbuds back into the charging case to recharge.

· While charging, the LED indicator lights on the earbuds will turn solid Red. When the earbuds have been completely charged, the LED indicator light on the earbuds will go out.

#### RECONNECT TO YOUR DEVICE

· You only need to pair your Bluetooth® device with these earbuds once.

· With your device's Bluetooth feature turned on and in range, remove the left & right earbuds from the charging case. They will automatically connect to each other and to your Bluetooth enabled device.

· If you have a previously paired device that does not auto-reconnect, navigate to the Bluetooth settings menu on your device and select "BSTWS44" from the list of paired Bluetooth devices and press "forget this device" and then proceed to follow the instructions on how to pair the earbuds to a Bluetooth enabled device.

1. Multi-Function Touch Control Button
2. LED Indicator Light
3. LED Battery Meter display



#### WARNING

Read the following warning thoroughly before you start using your earbuds. Store this manual with product packaging for future reference. The safety precaution warning helps protect you and your device.

##### TO REDUCE THE RISK OF INJURY

- Keep batteries out of reach of children.
- Do not heat, open, or dispose of product in fire.
- Do not allow metal objects to touch the battery contacts on the earbuds and inside charging case.
- Do not expose battery pack to excessive heat.

#### TROUBLESHOOTING

No power

Recharge your earbuds using the included USB charging cable. Try using a different USB cable.

Music is not playing over Bluetooth

Make sure your Bluetooth device has A2DP profile. Check if both devices are paired and connected over Bluetooth\*. Restart the earbuds to reconnect your Bluetooth\* device.

Bluetooth\* device will not reconnect with the earbuds

Navigate to your Bluetooth\* settings menu on your Bluetooth\* device, tap "BSTWS44," and select "Forget." Now follow the steps to pair your device again.