



User Manual (X6)

## Function diagram:

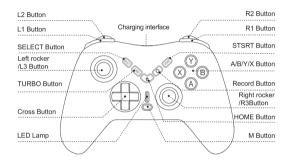

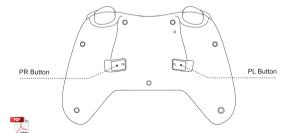

## Applicable instructions:

- 1. This product adopts ergonomic design and feels comfortable.
- 2. It adopts Bluetooth 5.0 edr/ble connection, and the controller is connected with N-S and other hosts through Bluetooth.
- 3. This handle is applicable to switch, ps3/ps4, Android, IOS mfi/apple arcade, PC Steam and other platforms.
- 4. It supports shootingplus V3 app, which can be downloaded through various mobile application markets
- 5. Support Android and Hongmeng hid standard mode, and you can play all kinds of game hall games that support HID standard mode.
- 6. Support mfi/apple arcade games in iOS 13.0 and above systems, and MFI games can also be found inShanwan MFI app download.
- 7. Support PS3 /ps4/switch game console to play games with Bluetooth connection.
- 8. Support Bluetooth connection of windows 10 system laptop and play X-input games. 9. It supports USB cable and can play pc/ps3/switch games.

Due to the problem of mobile phone system, some mobile phones may not support this device


Our company is not responsible for the inability of some games to connect with this product due to irresistible factors such as software upgrade or source code change of he official game platform. Our company reserves the right of final interpretation.

### lectrical parameters:

1. Working voltage: DC3.7V	5、Working current:<25mA
2. Duration of use:>20H	6、Sleep current:<10uA
3, Charging voltage / current: DC5V/300mA	7, Bluetooth transmission distance:
4. Battery capacity: 450mAh	8、Standby time: 30 days at full pow

SWITCH Mode: On the SWITCH host, select Controllers-> Change Grip/order,

the SWITCH host pairing mode screen is displayed. Press L+R on the controller. At the same time, press R2 + 3 Button for 2 seconds to enter the SWITCH mode for pairing. The LED indicator of the handle blinks green at short intervals, and the LED indicator of the controller blinks green for a long time after pairing. Have successfully connected, you can directly press C Button, LED light green slow flashing, automatic back connection.

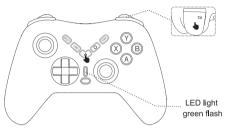

## PS3/PS4 Mode:

<=8N

Connect the controller directly to the PS3/PS4 host with the USB data cable. Press Button to perform code alignment. After code alignment is successful, the LED indicator blinks red slowly

Has been successfully connected, you can directly press the 🟠 Button, LED light red long bright, automatic back connection.



### Android ShootingPlus V3 Mode (Hongmeng system is the same as Android ShootingPlus V3 Mode):

At the same time, press A + 3 Button for 2 seconds to enter the V3 Android mode. The LED light of the controller blinks purple quickly. When the Android phone searches for Gamepad, select Connect. After the connection is successful, the LED light of the controllers will brighten in purple.

Has been successfully connected, you can directly press 3 Button, LED light purple light slowly flashing, automatic back connection.



## iOS ShootingPlus V3 mode:

At the same time, press Y + 🐼 Button for 2 seconds to enter the V3 iOS mode. The LED indicator of the controller blinks purple quickly. When the iPhone searches for Gamepad select Connect. After the connection is successful, the LED light of the controllers will brighten in purple.

Have successfully connected, you can directly press S Button, LED light purple slow flash, automatic back connection.





### Android Standard Mode:

- 1. Press X + 🐼 Button at the same time to enter the standard Android mode. The LED light of the controller flashes vellow quickly. When the device name "Gamepad" is found on the Android/Hongmon phone, select Connect. After the connection is successful. the LED light of the controllers will be bright vellow
- Have successfully connected, you can directly press the S Button, LED light vellow slow flash, automatic back connection.
- 2. Android/Honomeng standard mode game download, you can download a variety of game halls, enter the platform to download the required games.



### iOS MFi / Apple Arcade mode (iOS 13.0 or later):

At the same time, press the **B** +  $\bigotimes$  Button for 2 seconds to enter the iOS MEi mode The LED light of the Controller flashes cvan guickly. When the device name"DUALSHOCK 4 Wireless Controller" is found on the iPhone select Connect After successful connection, the controllers LED light is cyan and bright.

Have successfully connected, you can directly press 🐼 Button . LED light cvan slow flashing, automatic back connection.

MFi games can also be downloaded from the ShanWan MFi app.



### PCX-input Bluetooth mode

At the same time, press the R1 + 3 Button for 2 seconds to enter the X-input Bluetooth mode. The LED light of the Controller flashes blue quickly. When the PC searches for the device name "Xbox Wireless Controller", select Connect, After the connection is successful the LED light of the controllers will be blue and bright.

Have successfully connected, you can directly press the C Button, LED light blue slow flash, automatic back connection.



### Programming:

1. When the gamepad is enabled, the default programming key PL/PR is null

- 2. Press and hold the "M" button and the programming button (PL/PR), which need to be set at the same time, and then pair the LED indicator The light flashes slowly the moto shakes a hint, and the key is released to enter the programming mode.
- 3. Press one or more regular function keys to copy (for example, press "A/B/X/Y /R1 /R2 /L1/L2/L3/R3 and arrow keys and left and right joysticks [joysticks count as eight kevs]". When you press the copy key, the LED flashes [can recognize and record two or more consecutive entries of the same key, for example, the A key is pressed twice continuously during the input, and the A key is also pressed twice continuously during the output], press the corresponding programming "PL/PR" button again to confirm and automatically exit [if you do not press the M key for 60 seconds to automatically save the exit], and the motor vibrates when exiting. When the programming setting is complete, the mode indicator returns to the display state before the setting.
- 4. Cancel the programming function: After entering the programming setting mode directly press the PL/PR Key to exit, without setting any Key IThis PL/PR Key is empty without any key value]

## 2.4G mode (optional):

#### PC device / smart TV / TV box /PS3 host 2.4G wireless connection operation method:

1. Insert the 2.4G wireless receiver into the USB port of the PC device/smart TV/TV box. 2. After pressing the L1 + (3) Button at the same time, the controller enters wireless pairing mode, and the LED light flashes white.

3. After the wireless connection is OK, the LED light will remain white for a long time. 4. You can start operating PC devices/smart TVs/TV boxes/PS3 consoles to download and install games.

## Controller charge / sleep / wake-up function:

1. When the controller is charged in the off state (press the 🏵 Button to turn on / off), the

mode indicator flashes slowly and remains on after full charge. When charging in the Bluetooth connection state, the corresponding mode indicator light flashes slowly and stays on after being fully charged.

2. Sleep / wake-up function: the game controller will enter sleep state if it is not used within 1 minutes. When heavy Press the S Button to wake up when new use, and then connect

3. When the battery is low, the corresponding mode indicator flashes,

4. In wired mode, the corresponding mode does not make charging instructions.

#### /ired USB mode operation method and precautions:

1. Insert the USB cable, and the controller will automatically recognize the currently inserted device (there is no need to press the S Button to power on in wired mode); 2. After inserting the USB, the LED light flashes. In PS3 and Switch host modes, the indicator light for successful USB recognition will automatically assign colors based on the channel issued by the host

#### Matters needing attention:

. Please do not store this product in a damp or hot place.

- 2. Do not knock, beat, stick, puncture, or try to disassemble this product, so as to avoid unnecessary damage to the product.
- 3. The built-in battery of the product should not be discarded with garbage

4. Do not charge the handle near fire or other heat sources.

5. Non professionals are not allowed to disassemble this product, otherwise it will not be included in the after sales warranty service.

## peration mode:

## Bluetooth profile:

Applicable system	Android system		iOS system	
Working mode	Android V3 games mode	Android standard HID mode	iOS MFi mode	iOS V3 mode
Mode pairing (long press for 2 seconds)	A Button	X Button	B Button	Y Button
Indicator light	Purple	Yellow	Cyan	Purple
Remarks	Play Android Market Downloaded games	Play games in the game hall	Play ShanWan MFi App in game	Play App Store in game

#### Other Bluetooth profiles:

Working mode	PS3 host	PS4 host	Switch host	PC Bluetooth mode
Mode pairing (long press for 2 seconds) Plug in USB for pairing				R1 Button
Indicator light	Red	Red	Green	blue
Remarks	Play PS3 games	Play PS4 games	Play Switch games	Play PC X-input game

PS4 Bluetooth mode has no function in Android version

## 2.4G mode:

Applicable system	Windows system	PS3 Game Console	Switch game console	
Working mode	2.4G wireless mode 2.4G wireless mode		2.4G wireless mode	
Mode pairing (long press for 2 seconds)	L1 Button	L1 Button	L1 Button	
Indicator light	White	White	White	
Remarks	Wireless receiver is required. Power on the default bit X-input 360 mode, press Select + start key for 2 seconds to switch to D-input mode	Wireless receiver required	Wireless receiver required	

## Wired mode:

Applicable system	Windows system	PS3 Game Console	Switch game console	
Working mode	Vorking mode USB Wired mode USB Wired mode		USB Wired mode	
Mode pairing	Plug in USB automatic recognition	Plug in USB automatic recognition	Plug in USB automatic recognition	
Unrecognized status	LED light flashes blue	LED light flashes blue	LED light flashes blue	
Identification status	X -INPUT: LED Blue D-INPUT :LED Green	The corresponding channel light is always on	The corresponding channel light is always on	
Remarks	Long press MODE for 5 seconds to switch X &D INPUT to each other			

## List of products:





 	_

Wireless controller x





Android Version(Overseas version)

# FCC Warnning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection againstharmful interference in a residential installation. This equipment generates, uses and can radiateradio frequency energy and, if not installed and used in accordance with the instructions, maycause harmful interference to radio communications. However, there is no guarantee thatinterference will not occur in a particular installation. If this equipment does cause harmfulinterference to radio or television reception, which can be determined by turning the equipmentoff and on, the user is encouraged to try to correct the interference by one or more of thefollowing measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1)This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.