


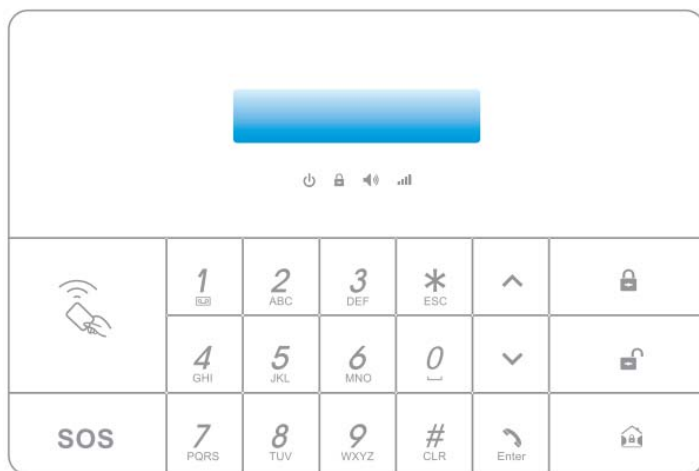

GSM

Alarm System

User Manual

Content

Chapter 1 Knowing the alarm host

- 1.1 Features
- 1.2 Technical Parameters
- 1.3 Packing List
- 1.4 Knowing the alarm host

Chapter 2 Alarm phone&SMS number settings

- 2.1 Alarm phone setting.
- 2.2 SMS numbers setting

Chapter 3 Accessories settings

- 3.1 Remote controller&keypad settings
- 3.2 RFID tag settings
- 3.3 Wireless sensor settings

Chapter 4 System setting& alarm logs

- 4.1 Date and time
- 4.2 Exit/Entry Delay
- 4.3 Timing Arm and Disarm
- 4.4 Remote Control Switch
- 4.5 SIM Card Notice Switch
- 4.6 AC / DC Notice
- 4.7 Key tone
- 4.8 Password
- 4.9 Ring times
- 4.10 Cycle Call times
- 4.11 Siren Setup
- 4.12 SMS notice of Arm/Disarm
- 4.13 Reset to defaults
- 4.14 Check the alarm logs

Chapter 5 Daily use

5.1 Preparations before use

5.2 Arm/disarm/SOS daily use

5.3 RFID tag use

5.4 Phone calling

5.5 Voice record

5.6 Menu settings

Chapter 6 Remote control via APP&SMS&call

6.1 APP operation

6.2 SMS operation

6.3 Remote control via calls

Chapter 7 Maintenance and Troubleshooting

7.1 Maintenance

7.2 Troubleshooting

Appendix

Table 1 Contents & meanings on LCD

Table 2 Menu settings on LCD

Chapter 1 Knowing the GSM alarm host

1.1 Features:

Smart GSM alarm system with APP, LCD display
APP for Android and IOS system
Remote operation and settings by App&SMS
99 wireless zones and 8 wired zones
Support 10 remote controllers and 50 RFID tags
Digital touch keypad, fashion & novelty
Matrix LCD display, menu navigation
Support 6 alarm phone numbers and 4 SMS alarm mobile numbers
10 seconds record
40 event logs of alarm and operations
Support coercion password, secretly make police calls in emergency
Timing Arm and Disarm
Name all the defense zones and RFID tags
Monitoring and intercom
Built-in transmitter module for connecting wireless siren and smart home
Remote operation by phone, fast and convenient

1.2 Technical Parameters:

Power adapter: DC 12V 1A
Standby power: $\leq 80\text{mA}$
Alarm current: $\leq 450\text{mA}$
Back-up battery: Li-ion DC7.4V 500mAh
Built-in Siren Volume: 90DB
Wireless frequency: 315/433/868MHz
Housing material: ABS
Temperature range: $-10^{\circ}\text{C} \sim +55^{\circ}\text{C}$
Humidity range: $\leq 80\%$ (No freezing)
Panel size (L*W*H): 186*125.7*25mm

1.3 Packing List:

Alarm host&bracket x1

PIR detector&bracket x1

Wireless door sensor&adhesive tape x1


RFID card x2

Bulged tube & screw x 2


User manual x1

1.4 Knowing the alarm host

1.4.1 Panel front view

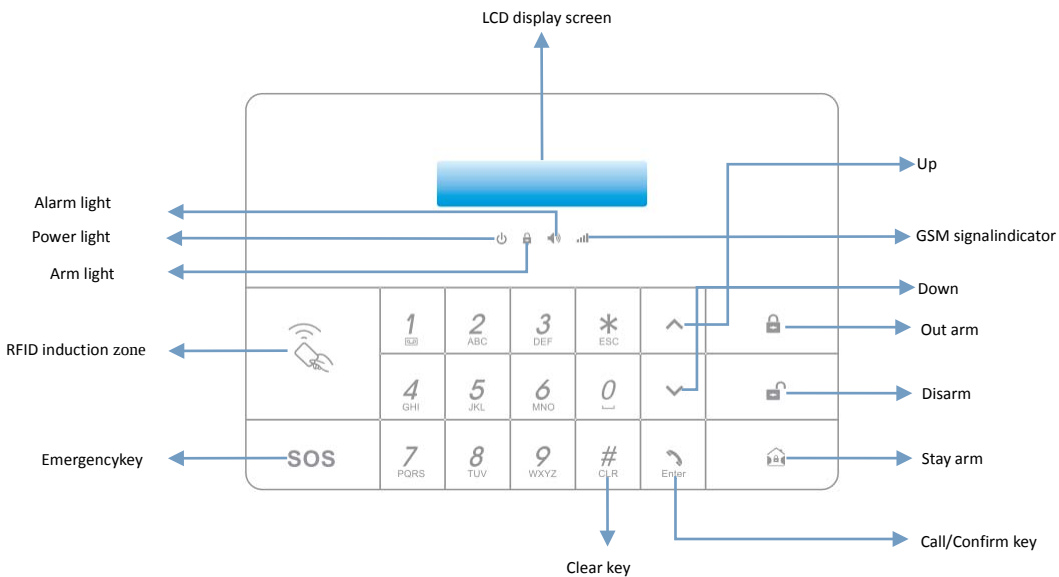

1.4.2 Panel back view

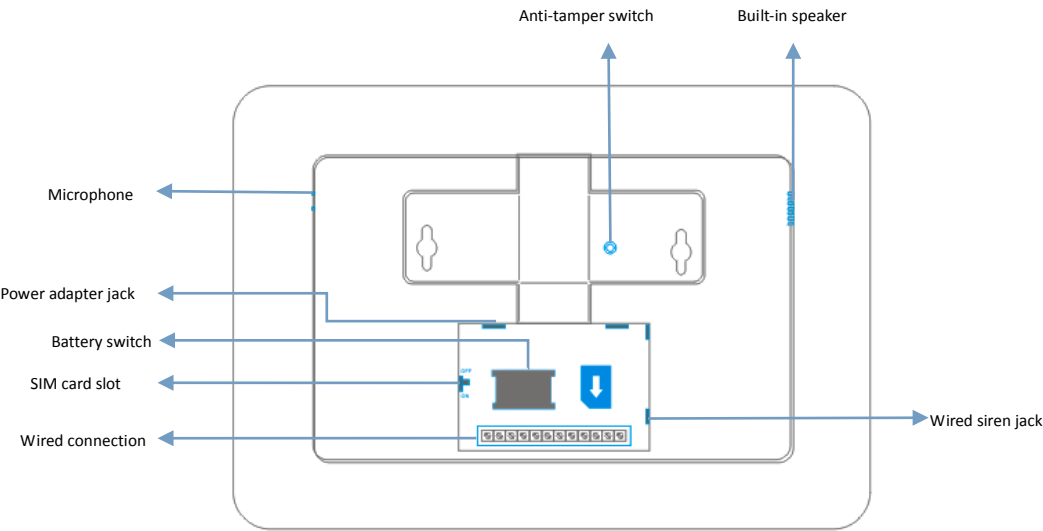

1.4.3 Remote controller



Chapter 2 Alarm phone&SMS number settings

In disarm status, enter administrator password(Default value is 1111), press 【  Enter 】 key to enter into settings. Press 【  ESC 】 key for exit if need.

2.1 Alarm phone setting.

User can set 6 alarm phone numbers and 4 SMS mobile numbers. When alarming, the system will send SMS alarm message to SMS numbers by turn, then call alarm phone numbers by turn.

2.1.1 Add alarm phone numbers.

- (1) Enter into menu settings, select “Phone numbers”, press 【  Enter 】 to confirm.
- (2) Press 【  ↑ 】 or 【  ↓ 】 , select “Add”,press 【  Enter 】 to confirm。
- (3) Press 【  ↑ 】 or 【  ↓ 】 , select “Phone Number (1~6) ”by turn ,press 【  Enter 】 to confirm.
- (4) Enter phone number which you want to set, Press 【  Enter 】 to confirm.

Notice: If user want to check or change saved phone numbers, enter into “Phone Number(1~6)”then check or change. The max digits of phone number can be set to 16.

2.1.2 Delete phone numbers.

- (1) Enter into menu settings, select “Phone numbers”, press 【  Enter 】 to confirm.
- (2) Press 【  ↑ 】 or 【  ↓ 】 , select “Delete”,press 【  Enter 】 to confirm。
- (3) Press 【  ↑ 】 or 【  ↓ 】 , select “Phone Number (1~6) ”by turn ,press 【  Enter 】 to confirm.
- (4) Delete the saved phone numbers by turn, press 【  Enter 】 to confirm.

2.2 SMS numbers setting

2.2.1 Add SMS numbers

- (1) Enter into menu settings, select “Phone numbers”, press  **【 Enter 】** to confirm.
- (2) Press  or , select “Add”,press  **【 Enter 】** to confirm.
- (3) Press  or , select “SMS Number (1~4) ”by turn(it is after phone number 6), press  **【 Enter 】** to confirm.
- (4) Enter SMS number which you want to set, Press  **【 Enter 】** to confirm.
- Notice: If user want to check or change saved phone numbers, enter into “SMS Number (1~4) ”then check or change. **The max data of phone number is 16 data.**

2.2.2 Delete SMS numbers.

- (1) Enter into menu settings, select “Phone numbers”, press  **【 Enter 】** to confirm.
- (2) Press  or , select “Delete”,press  **【 Enter 】** to confirm.
- (3) Press  or , select “SMS Number (1~4) ”by turn, press  **【 Enter 】** to confirm.
- (4) Delete the SMS number by turn, press  **【 Enter 】** to confirm.

Chapter 3 Accessories settings

Accessories include Remote controller, keypad, RFID card, and wireless sensors.
The alarm host can recognize and receive signals from accessories only after coding.

3.1 Remote controller&keypad settings

3.1.1 Add Remote controller&keypad

- (1) Enter into menu setting, press  or , select “Accessories”, and press  **【 Enter 】** to confirm.

(2) Press 【】 or 【】, select “Remote & Keypad”, and press 【】 to confirm.

(3) Press 【】 or 【】, select “RC 01-10” by turn, and press 【】 to confirm.

(4) Press 【】 or 【】, select “Add”, and press 【】 to enter into coding. LCD display shows “Synchronize”,

(5) Press any key of remote or keypad to let it transmit a wireless signal to alarm host. Then the alarm host beep once, indicates coding is successful. If beep twice and display “Already added” on LCD, it indicates repeated coding.

Note 1: After coding, it will display “control” on second line, if still display “empty”, it means coding failed.

Note 2: For coding wireless keypad, user also need to enter password of wireless keypad, then press “Arm” or “Disarm” key to transmit wireless signal to host.

3.1.2 Delete single remote&keypad

If user needs to delete a coded remote or keypad, please select "Delete" in step (4), and press 【】 to confirm.

3.1.3 Delete all remote&keypad.

(1) Enter into menu setting, press 【】 or 【】, select “Accessories”, and press 【】 to confirm.

(2) Press 【】 or 【】, select “Remote & KeypadDelete All? ”, and press 【】 to confirm.

(3) The display will show “Sure?”, press 【】 to delete, or press 【】 to cancel.

3.2 RFID tag settings

3.2.1 Add RFID tag

(1) Enter into menu setting, press 【】 or 【】, select “Accessories”, and press 【】 to confirm.

(2) Press 【】 or 【】 , select “RFID Tag”, and press 【】 to confirm.

(3) Press 【】 or 【】 , select “RFID (1~50)” by turn, and press 【】 to confirm.

(4) Press 【】 or 【】 , select “Add” by turn, and press 【】 to enter into coding. LCD display shows “Synchronize”.

(5) Closea RFID tagto the induction area of alarm host panel. Then the alarm host beep once, indicates coding is successful. If beep twice and display “Already added” on LCD,it indicates repeated coding.

3.2.2 Name the RFID tag

If user needs to name the coded RFID tag, please select “ Edit name” in step (3), and press 【】 to confirm, then input its name.

Notes: To press 【】 on panel to modify while editing the name. If press 【】 on panel, it goes back to previous level menu.

3.2.3 Delete single RFID tag

If user needs to delete the coded RFID tags, please select "Delete" in step (4), and press 【】 to confirm.

3.2.4 Delete all RFID tag

(1) Enter into menu setting, press 【】 or 【】 , select “Accessories”, and press 【】 to confirm.

(2) Press 【】 or 【】 , select “RFID TagDelete All?”, and press 【】 to confirm.

(3) The display will show “Sure?”, press 【】 to delete, or press 【】 to cancel.

3.3 Wireless sensor settings

3.3.1 Add Wireless sensor

- (1) Enter into menu setting, press 【】 or 【】 , select “Accessories”, and press 【】 to confirm.
- (2) Press 【】 or 【】 , select “Wireless Sensors”, and press 【】 to confirm.
- (3) Press【】or【】 , by turn select “Sensor (01~99)”, and press 【】 to enter into coding.
- (4) Press 【】 or 【】 , select “Add”, and press 【】 to enter into coding. LCD display shows “Synchronize”
- (5) Trigger the sensor and let it transmit wireless signal to alarm host, then the alarm host beep once, indicates coding is successful. If beep twice and display “Already added” on LCD, it indicates repeated coding.

3.3.2 Edit sensor type

- (1) If user needs to edit sensor type, please select “Edit type” in step (4). Press 【】 or 【】 , select “Normal Sensor/24 Hour Sensor/Delay Sensor/Home sensor”, then press 【】 to confirm type of the sensor.

- (2) Description of sensor types:

Normal Sensor:

Sensors of normal defense zone. The normal sensors can trigger alarm host to alarm only when it is armed, won't trigger alarm if disarmed.

24 Hour Sensor:

Sensors of 24 hours defense zone. No matter what status the system is in, 24 Hour Sensor can trigger host to alarm.

Delay Sensor:

Sensors of delay defense zone. The alarm host will ignore the delay sensor in the entry/exit delay time, wait for user entering or exiting the house; after the delay time, the delay sensor will work

normally and can trigger host to alarm. User need to set entry/exit delay time in advance. Please refer to 4.2.

Home Sensor:

Sensors of home defense zones. The home sensors protect the living areas of the house like living room, bedroom, the alarm host will ignore the home sensors if user stay arm the host but activate other sensors.

3.3.3 Name wireless sensors

- (1) Enter into menu setting, press 【】 or 【】 , select “Accessories”, and press 【】 to confirm.
- (2) Press 【】 or 【】 , select “Wireless Sensors”, and press 【】 to confirm.
- (3) Press 【】 or 【】 , by turn select “Sensor (01~99)”, and press 【】 to confirm.
- (4) Press 【】 or 【】 , select “Edit name”, press 【】 to confirm, and input the name of the sensor.

3.3.4 Delete a single sensor

If user needs to delete a coded sensor, please select "Delete" in step (4), and press 【】to confirm.

3.3.5 Delete all sensors

- (1) Enter into menu setting, press 【】 or 【】 , select “Accessories”, and press 【】 to confirm.
- (2) Press 【】 or 【】 , select “Wireless SensorsDelete All?”, and press 【】 to confirm.
- (3) The display will show “Sure?”,press 【】 to delete, or press 【】 to cancel.

Chapter 4 System setting

4.1 Setting date and time

4.1.1 Date setting

- (1) Enter into menu setting, press 【】 or 【】 , select “System Settings”, and press 【】 to confirm.
- (2) Press 【】 or 【】 , select “Date and Time”, and press 【】 to confirm.
- (3) Press 【】 or 【】 , select “Date”, and press 【】 to confirm.
- (4) Input the date and press 【】 to confirm.

4.1.2 Display Format of date and time

- (1) Enter into Menu Setting, press 【】 or 【】 ,select System Settings, press 【】 key to confirm.
- (2) Press 【】 or 【】 ,select “Date and Time”, press 【】 key to confirm.
- (3) Press 【】 or 【】 , select “Date Format”, press 【】 key to confirm
- (4) Press 【】 or 【】 , select “Time Format” , press 【】 key to confirm.

4.1.3 Time setting

Default: 24-Hour Time System

- (1)Enter Menu Setting ,press【】or【】 ,select “System Settings”,press【】key to confirm.
- (2)Press 【】 or 【】 , select “Date and Time”, press 【】 key to confirm.
- (3)Press 【】 or 【】 , select “Time”, press 【】 key to confirm.

(4) Input your local(current) time , press  **【 Enter 】** key to confirm.

Please reset the time with the recovery of power supply.

4.2 Entry/Exit Delay

By setting this functions, the alarm host will ignore the delay sensor in the exit/entry delay time, wait for user exiting or entering the house; after the delay time, the delay sensor will work normally and can trigger host to alarm. About the delay sensor, please refer to 3.3.2.

4.2.1 Entry Delay setting

Entry Delay, also called Alarm Delay, by setting this function, the alarm host will ignore the delay sensor in the entry delay time after triggered by the delay sensor, wait for user entering to disarm the host.

(1) Enter menu setting, press  or  ,select “System Settings”,press  **【 Enter 】** key to confirm

(2) Press  or  ,select “Entry Exit delay”,press  **【 Enter 】** key to confirm

(3) Press  or  ,select “Entry delay”, press  **【 Enter 】** key to confirm.

(4) Input time for delay, press  **【 Enter 】** key to confirm

The default value is 200s, the value range is 0~255s.

4.2.2Exit Delay setting

Exit delay, also called arm delay, by setting this function, the alarm host will ignore the delay sensor in the exit delay time after armed, wait for user exiting the house.

(1)Enter Menu Setting, press  or  ,select “System Settings”,press  **【 Enter 】** key to confirm.

(2) Press  or  ,select “Entry Exit delay”, press  **【 Enter 】** key to confirm.

(3)Press  or  ,select “Exit delay”, press  **【 Enter 】** key to confirm.

(4)Input the time for delay, press  **【 Enter 】** key to confirm.

The default value is 200s, the value range is 0~255s.

Notes: In the exit delay time, the host will beep to remind user exiting, in the last 5 seconds, it will

beep more quickly.

4.3 Timing Arm and Disarm

User can set up timing arm/disarmas your schedule to avoid the repetitive operation.

4.3.1 Timing arm

- (1) Enter menu setting , press【  】or【  】 ,select “System Settings”, press【  】key to confirm
- (2) Press 【  】 or 【  】 ,select “Sched Arm/Disarm”,press 【  】 key to confirm
- (3) Press 【  】 or 【  】 , select “Auto Arm Time”,press 【  】 key to confirm
- (4) Input the time for timing Arm, press 【  】 key to confirm

4.3.2 Timing Disarm

- (1) Enter menu setting, press【  】or 【  】 ,select “System Settings”,press【  】key to confirm
- (2) Press 【  】 or 【  】 , select “Sched Arm/Disarm”,press 【  】 key to confirm
- (3) Press 【  】 or 【  】 , select “Auto Disarm Time”,press 【  】 key to confirm
- (4) Input Time for Timing disarm, press 【  】 key to confirm

4.4 Remote Control Switch

- (1) Enter menu setting, press【  】or 【  】 ,select “System Settings”,press【  】key to confirm
- (2) Press 【  】 or 【  】 , select “Control By Phone”,press 【  】 key to confirm
- (3) Press“1 = YES” to turn ON, press “0=NO” to turn OFF

Note: After Close the Remote Switches, user can't control the alarm host by cellphones or Telephone.
Switch ON is default.

4.5 SIM Card Notice Switch

SIM card notice means when there is no SIM card in the slot of host, the LCD will display “No SIM” to remind the user.

(1) Enter Menu Setting, press【】or【】,select “System Settings”, press【】key to confirm

(2) Press 【】 or 【】 ,select “SIM card notice”, press 【】 key to confirm

(3) Press“1 = YES” select Switch ON, Press“0=NO” select OFF.

4.6 AC/DC Notice.

AC/DC Notice means when the AC is Failure/Recovery or Battery is low battery, the LCD will display and remind user.

(1) Enter MENU Setting, press【】or【】,select “System Settings”,press【】key to confirm

(2) Press 【】 or 【】 , select “AC/DC notice”, press 【】 key to confirm

(3) Press“1 = YES” to turn on, press“0=NO” to turn off.

4.7 Keypad sound setting

The default setting is keypad sound on, the host will beep with each touch of the button, if user don't want it, user can set it be off.

1.Switch OFF/ON Key Tone

①enter menu setting, press 【】 or 【】 ,select “System Settings”,press 【】 key to confirm

②press 【】 or 【】 , select “Keypad sound”,press 【】 key to confirm

③Press “1 = YES” Means ON, press“0=NO” Means Switch OFF

4.8 Password settings

There are user password, admin password, and coercion password with the alarm host. User can change it at the first time.

4.8.1 Admin password

User can enter into menu settings by this password. The default value is 1111.

(1) Enter Menu Setting, press 【】 or 【】 , select “System Settings”, press 【】 key to confirm.

(2) Press 【  】 or 【  】 , select “Access password”, press 【  Enter 】 key to confirm.

(3) Press 【  】 or 【  】 , select “Admin password”, press 【  Enter 】 key to confirm

(4) Input 4 digits Password, Press 【  Enter 】 to confirm.

Warm Prompt: If you forget your Administrator password, and can't set the panel, please contact with your dealer.

4.8.2 User Password

With user password, user can disarm alarm host by keypad, or remotely control host by phones. Its default value is 2222.

(1) Enter Menu Setting, Press, 【  】 or 【  】 ,select “System Settings”, press 【  Enter 】 key to confirm

(2) Press 【  】 or 【  】 , select “Access password”, press 【  Enter 】 key to confirm.

(3) Press 【  】 or 【  】 , select “User password”, press 【  Enter 】 key to confirm.

(4) Input 4digits Digital Password, press 【  Enter 】 to confirm.

4.8.3 Coercion Password

In emergency, when user is forced to disarm the system, user can enter the coercion password to disarm, but host will call the preset phone numbers secretly. Its default value is 3333.

(1)Enter Menu Setting, press【  】or【  】 , select “System Settings”, press【  Enter 】key to confirm.

(2)Press 【  】 or 【  】 , select “Access password”, press 【  Enter 】 key to confirm.

(3) Press 【  】 or 【  】 , select “Coercion password”, press 【  Enter 】 key to confirm.

(4)Input 4 digits digital code, press 【  Enter 】 key to confirm.

4.9 Ring times

Ring times means the times of host ringing before it take the phone call by preset phone numbers. Its default value is 6 times.

- (1) Enter Menu Setting, press  or , select “System Settings”, press  key to confirm.
- (2) Press  or , select “Ringing Times”, press  key to confirm.
- (3) Input (0-9) times, press  key to confirm.

4.10 Cycle Call times

Cycle call times means the times of alarm host calling the preset phone numbers by circle when alarm. Its default value is 6 times.

- (1) Enter Menu Setting, press  or , select “System Settings”, press  to confirm
- (2) Press  or , select “Call Times”, press  to confirm
- (3) Input (0-9) times, press  to confirm

4.11 Siren Setup

The built-in siren is with the alarm host, wired siren, wireless siren need to connect to alarm host by wire or wireless signal. User can set their alert/sound time and turn them on/off.

4.11.1 Set alert/sound time for all sirens.

The unit of siren sound time is minute, the default value is 5 minutes, if set “0”, the siren will not sound.

- (1) Enter into Menu, press  or , select “System Settings”, press  to confirm.
- (2) Press  or , select “Siren Setup”, press  to confirm.
- (3) Press  or , select “Siren alert time”, press  to confirm.
- (4) Input siren ringing time (0-9), press  to confirm.

4.11.2 ON/OFF wired siren

User can set the wired siren be on or off, default value is on.

- (1) Enter into Menu, press 【】 or 【】, select “System Settings”,press 【】 to confirm.
- (2) Press 【】 or 【】, select “Siren Setup”,press 【】 to confirm.
- (3) Press 【】 or 【】, select “Wired Siren”,press 【】 to confirm.
- (4) Press“1 = YES” to turn ON, press“0=NO” to turn OFF.

4.11.3 ON/OFF wireless siren

User can set the wireless siren be on or off, default value is on.

When user need to code wireless siren with the alarm host, please turn on the wireless siren, otherwise they can't code together.

- (1) Enter into Menu, press 【】 or 【】, select “System Settings”,press 【】 to confirm.
- (2) Press 【】 or 【】, select “Siren Setup”,press 【】 to confirm.
- (3) Press 【】 or 【】, select “Wireless Siren”,press 【】 to confirm.
- (4) Press“1 = YES” to turn ON, press“0=NO” to turn OFF.

4.11.4 Built-in siren sound volume level settings

Built-in siren is the siren built in the alarm panel, User can set its sound volume.

- (1) Enter into Menu, press 【】 or 【】, select “System Settings”,press 【】 to confirm.
- (2) Press 【】 or 【】, select “Siren Setup”,press 【】 to confirm.
- (3) Press 【】 or 【】, select “Built-in Siren”,press 【】 to confirm.
- (4) Enter sound level (0-4), press 【】 to confirm

Note: System default value is 4, if choose 0, it will be mute when alarm.

4.12 SMS notice of Arm/Disarm

After user set the SMS notice of Arm/Disarm function on, the panel will send SMS notice to users when panel armed and disarmed, so users can know the panel's situation. The default value is off.

(1) Enter into Menu, press 【】 or 【】, select “System Settings”,press 【】 to confirm.

(2) Press 【】 or 【】, select “Arm SMS”or“Disarm SMS”, press 【】 to confirm

□press“1 = YES” to turn ON, press“0=NO” to turn OFF。

4.13 Reset to defaults

This function is to reset all values to default values, the phone number will be deleted, but the coded accessories won't be deleted.

(1) Enter into Menu, press 【】 or 【】, select “System Settings”,press 【】 to confirm.

(2) Press 【】 or 【】, select“Reset”,press 【】 to confirm, Reset to defaults

4.14 Check the alarm logs

Users can check alarm logs in anytime, the system can store 40 alarm logs at most.

(1) Enter into Menu, press 【】 or 【】, select“Events”,press 【】 to confirm

(2) Press 【】 or 【】, select“View”, press 【】 to confirm

(3) LCD display shows the log's time, alarm mode, arm/disarm record etc..

Delete logs: in step (2) select “Delete”, press 【】 to confirm

Chapter 5 Daily Use

5.1 Preparations before use

5.1.1 Power supply connection


(1) First insert the output plug of adapter into power jack of panel

(2) Then insert the adapter into AC power socket

Notes: AC power is for normal use, the built-in rechargeable battery is backup power, use only when AC power fails.

5.1.2 SIM card inserting


Insert the SIM card into slot by correct direction.

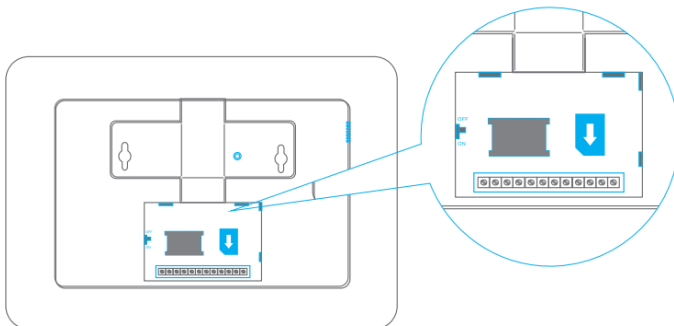

Notes: After insert the SIM card, it will search GSM signal soon.


5.2 Arm/disarm/SOS daily use

(1) Away arm

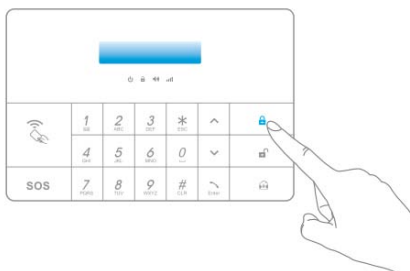


Press Away Arm 【】 key, host releases prompt “System armed”, Arm indicator LED on, all the defense zones enter into Arm status.

(2) Stay arm (partly arm)

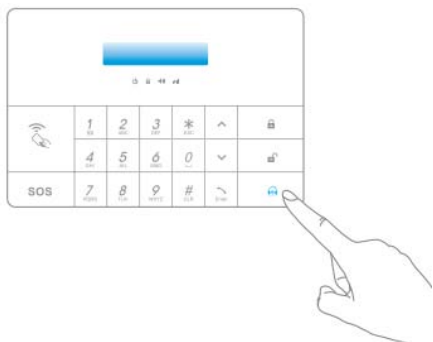

Press Stay arm 【  】 key, host releases prompt “System armed”, Stay arm indicator LED on, all the defense zones enter into Armstatus except for home zones. In home zones user can act freely and won’t trigger alarm, but other zones are in alert status, can protect users from invasion or other danger.

(3) Disarm

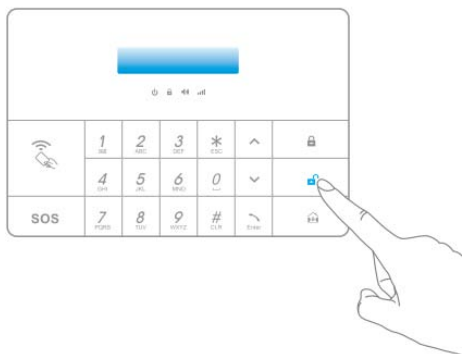

Input user password, press Disarm 【  】 key, panel releases prompt “System disarmed”, Disarm indicator LED on, the system will enter into Disarm status.

(4) SOS



Press any key on panel, LED ON, keep pressing 【 **SOS** 】 key for 3s, system enter into Emergency alarm status, siren sounds, simultaneously host send SMS and makes calls to the pre-set numbers.

Notice: User can do above functions by remote controller also.

5.3 RFID tag use



Close the RFID card to the RFID tag induction area, Green LED will flashes once, you can disarm the system.

5.4 Phone calling

User can use the alarm host make normal call to any phone number in standby status, first press


calling  key, LCD gives hints “Please Input Phone Number”, then input the phone number

you’d dial, press  key to wait for the connection. Press clear  key to clear wrong input.

Press  key to end the call.



5.5 Voice record

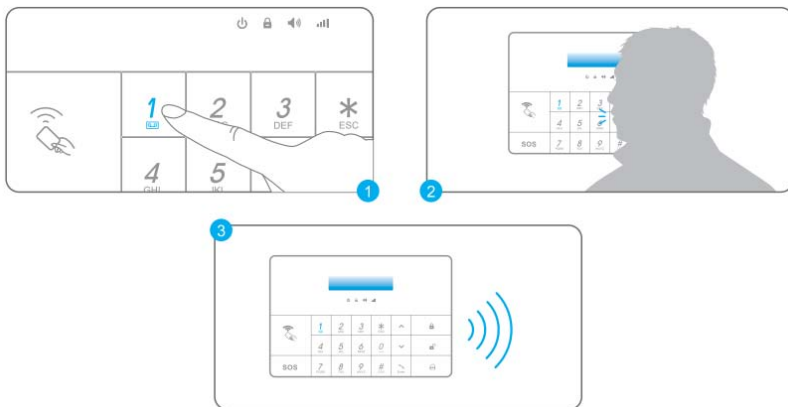

The system has the voice record function. Keep pressing  key for 3s to record 10S voice message. After recording, the panel will automatically play the voice; Keep pressing  key for repeat play. The new record will cover the last one

5.6 Menu settings(Refer to chapter 2,3,4)

In disarm status, Input the administrator password(default value is 1111), press  **Enter**, enter into menu setting.

Chapter 6 Remote control via APP&SMS&call

6.1 APP operation

We have APP for both Android and IOS system. User operate the APP, APP will edit and send SMS to alarm host in back ground, and remotely control the alarm host by SMS message.

6.1.1 Download the APP

User of Iphone enter into APP store, search by “GSM alarm system”, choose our APP, download and install.

User of Android cell phone enter into Google play or other APP store, search by “GSM alarm system”, choose our APP, download and install.

IPHONE APP interface, ANDROID APP interface

6.1.2 APP use

If no SMS numbers are saved, user can control the alarm host to arm, disarm, open or close the siren ect. by APP from any mobile number. If the panel has stored numbers, the panel only received the APP command from the pre-set numbers.

(1) Add host account and name of to the APP

Host Account is the SIM card number of alarm host, Host name can be edited by users freely, an APP can save many host accounts and names.

Enter into the APP, press “Add host account”, input the host name and host account.

 ..

(2) Main operations

Press the host account you would operate, enter into the main menu, user can operate with functions of disarm, home arm, arm, dial back to leave message, monitor and so on.

(3) Delete host account

IOS mobile: press [Edit], then press **【Delete】** , the added host account will be deleted.
Android mobile: press[Edit], long press the phone number, then will come out the dialog window of deleting account, press[Finish], the added account will be deleted.

6.2 SMS operation

If no SMS numbers are saved, user can control the panel to arm, disarm, open or close the siren ect. by SMS of any mobile number. If the panel has stored SMS numbers, the panel only receive the SMS command from the pre-set SMS numbers.

6.2.1Out arm

Command “1”
Edit SMS “1” and send to the host number with your mobile phone



The panel gets the SMS, and the Arm indicator lamp keep lighting, the system is in arm status. The panel will send one SMS “SMS ARM” back to your mobile, remind you arm successfully.

6.2.2 Home arm

Command “0”
Edit SMS “0”and send to the panel number with your mobile phone

The panel gets the SMS, and the Home Arm indicator lamp keep lighting, the system is in home arm status. The panel will send one SMS “SMS STAY HOME” back to your mobile, remind you home arm successfully.

6.2.3 Disarm

(1) Command “2”

Edit SMS “2” and send to the panel number with your mobile phone
The panel gets the SMS, and the Disarm indicator lamp keep lighting, the system is in Disarm status.

The panel will send one SMS “SMS DISARM” back to your mobile, remind you disarm successfully.

6.2.4 Monitor

Command “3”

Edit SMS “3” and send to the panel number with your mobile phone

The panel get the SMS, then dial back, pick up the phone you can monitor the house with mobile.

6.2.5 Bilateral intercom

Command “4”

Edit “4” and send to the panel number with your mobile phone

The panel get the SMS, then dial back, pick up the phone you can intercom

6.2.6 Emergency Alarm

Command “62”

Edit SMS “62” and send to the panel number with your mobile phone.

The panel will get in emergency alarm status automatically after get the SMS.

6.2.7 Table of SMS message and feedback

SMS message	Function	Feedback from host by SMS or meanings
【1】	Out arm	SMS ARM
【2】	System disarm	SMS DISARM
【0】	Home arm	SMS STAY ARM
【3】	Monitor	Monitor the local sound
【4】	Bilateral intercom	Intercom
【62】	Play the record of voice	Play the record of voice

6.3 Remote control via calls

There are two ways for telephone remote control, answer the alarming call from alarm host or call the alarm host.

6.3.1 Answer the alarm phone to remotely control

When alarm, the alarm host dial the pre-set phone numbers, users pick up the phone, and remotely control by commands (please refer to the command list)

6.3.2 Dial the alarm host number to remotely control

(1)Dial the host number with any telephone, after connect, the panel will beep once.

(2)Enter administrator Password, press  **Enter** to confirm. After the panel beeps once, then you can remotely control by command.

(3)If user enter into wrong password by 3 times the panel will hang up.

(4)Enter command based on your need (please refer to the command list). If no operation in 30 seconds, the system will hang up the phone.

6.3.3 Command list of Telephone remote control.

Phone button	Function	Meaning
Press 【1】	Out arm	The phone sound “System armed”
Press 【2】	System disarm	The phone sound “system disarmed”
Press 【0】	Home arm	The phone sound “System armed”
Press 【3】	Monitor	Monitor the local voice
Press 【4】	Bilateral intercom	Intercom
Press 【5】	Open the siren	Deterrent intruder
Press 【6】	Close the siren	siren stop ring
Press 【*】	Play the record of voice	Play the record of voice
Press 【Hang Up】	Exit telephone remote control, hang up	Hang up directly

Chapter 7 Maintenance and Troubleshooting

7.1 Maintenance

The alarm host has an excellent design and process, please use with care. The following recommendations can help you fulfill warranty obligations and extend the service life of the product.

(1) Please keep the alarm host out of reach of children.

(2) Please keep the alarm host dry. Rain, moisture, and various liquids might contain minerals, will corrode electronic circuits.

- (3) Don't store or use alarm host in dusty or dirty places, otherwise it may damage the electronic components.
- (4) Please do not place the alarm host in a hot place. High temperatures can shorten the life of electronic devices, damage batteries, and melt or deform the plastic.
- (5) Do not store the alarm host in a very cold place, otherwise when the alarm host is warming up, it will cause moisture inside of the panel, which may damage circuit boards.
- (6) Please test the alarm host by regular intervals, in order to exclude and solve problems in time.
- (7) Please check the battery of wireless accessories regularly, if there is insufficient battery power please change, to avoid affecting the normal use.
- (8) Because the alarm host is in uninterrupted work or standby status for long time, so when installed, panel adapter must be connected to the power socket reliable and secure.
- (9) Please do not place the alarm panel and built-in siren in the bedroom and office desk, otherwise alarm sound might affect your rest and work.
- (10) If there is dust on the surface of panel, please use a soft cloth or paper towel to wipe; if there is dirt, use a soft cloth with diluted alkaline detergent, wring dry and wipe, then wipe dry with absorbent cloth.

All of the above recommendation, please read and follow it carefully. If the device can not working properly, please send them to your dealer for repair, we will finish the troubleshooting as soon as possible.

7.2 Troubleshooting

Problem	Fault reason	Processing method
No any response when operate the host	The power switch is not open	Open the back cover of host, switch the button to ON position
	AC power OFF	Contact with Power supply department
	Li-ion battery run out	Recharge by the AC power adapter
Alarm host can't code with accessories	Host is not in the code status	Confirm the host is in the code status
	Not trigger the accessories in code status	Confirm the accessories in the code status, and send signal to the host to match code
	Alarm host and accessories in different frequency	Please contact with the sales
The host non-response when use remote control	Remote control didn't match code with the host	Follow the user manual and match code with the host
	The remote too far away from the host	The distance between Remote and host should within 80 meters in open space
		Buy signal repeater if need
Can't disarm when use RFID card	RFID card didn't match code with the host	Follow the user manual and match code of RFID with the host
Can't do menu settings by Host keypad	Not in the status of menu setting	In disarm status, Press in right Administrator password, press  [Enter] to confirm
The panel non-response when insert SIM card	SIM card's direction wrong	Re-insert the card in right direction
	Not connect with adapter after insert SIM card	Please connect with the power after insert card
	SIM is not in GSM mode	Please use GSM mode SIM card

Appendix

Table 1: Contents & meaning on LCD

System status	Display	Meaning
Standby	AC Power Failure	No AC power
	Panel low bat	Low battery of backup battery
	Sen. 01-99(Sensor Name)	Wireless sensor 01-99
	low bat	Low battery
	No SIM card	SIM card not inserted in
Arm/disarm	System ARM	Arm by host keypad
	System DISARM	Disarm by host keypad
	System STAY ARM	Stay Arm by host keypad
	RC 01-10 ARM	Arm by Remote controller 01-10
	RC 01-10 DISARM	Disarm by Remote controller 01-10
	RC 01-10 STAY ARM	Stay Arm by Remote controller 01-10
	RFID 01-50(RFID Name)	Disarm by RFID 01-50 (RFID name)
	DISARM	
	Auto ARM	Timing out arm
	Auto DISARM	Timing disarm
	Phone ARM	Arm by phone
	Phone DISARM	Disarm by phone
	SMS ARM	Arm by SMS
	SMS DISARM	Disarm by SMS
	SMS STAY ARM	Stay Arm by SMS
Alarm	SOS	Emergency alarm by host keypad
	Panel tamper	Alarm by host tamper
	Wired sensor 01-08	Alarm triggered by wired sensor01-08
	Sensor 01-99(Sensor Name)	Alarm triggered by wireless sensor 01-99
	Sensor tamper 01-99	Alarm triggered by tamper of wireless sensor 01-99
	SOS RC 01-10	Alarm triggered by SOS of remote controller 01-10

Menu setting on LCD

Main menu	Sub menu 1	Sub menu 2	Sub menu 3
Phone Numbers (Phone number)	Add Phone Numbers	Alarm Number1-6 (Phone number 1-6)	-
		SMS Number1-4 (SMS number 1-4)	-
	Del Phone Numbers (Delete phone number)	Alarm Number1-6 (Phone number 1-6)	-
		SMS Number1-4 (SMS number 1-4)	-
Accessories	Remote& Keypad (Remote controller and wireless keypad)	RC 01-10 (Control/Empty) (Remote controller 01-10) (coded/not coded)	All (Delete all)
			Delete (Delete single)
	Delete All?	Sure?	
	RFID Tag	RFID tag 01-50 (RFID(name)/ Empty)(RFID)RFID 01-50 (coded/not coded)	Add
			Delete
			Edit name
	Delete All?	Sure?	
	Wireless Sensors	Wireless sensor 01-99(Sensor(name)/Empty) (coded/not coded)	Add
			Delete
			Edit name
			Edit type
System Settings	Date And Time	Date	-
		Date Format	-
		Time(24 hours format)	-
	Entry Exit Delay	Entry delay	<255S>
		Exit delay	<255S>
	Backlight Time	(0-9): Minute	-
	Sched Arm / Disarm	Auto Arm time	HH:MM:SS
		Auto Disarm time	HH:MM:SS
	Control by phone	1=ON	-

		0=OFF	-
	SIM card notice (Notice of SIM card existing or not)	1=ON	-
		0=OFF	-
	AC/DC notice	1=ON	-
		0=OFF	-
	Keypad sound	1=ON	-
		0=OFF	-
	Access password	Admin password	Admin password
		User password	User password
		Coercion PWD (Coercion password)	Coercion PWD (Coercion password)
System Settings	Ringing times	0-9(0-9 times)	-
	Call times (Dialing times)	0-9(0-9 times)	
	Siren setup	Siren alert time	0-9: Minute
		Wired siren	1=ON
			0=OFF
		Wireless siren	1=ON
			0=OFF
		Built-in siren	0-4(0=mute):
	Arm SMS (SMS notice for Arm)	1=ON	
		0=OFF	
	Disarm SMS (SMS notice for Disarm)	1=ON	
		0=OFF	
	Reset (Recover factory default value)	Sure?	
		Please wait...	
Events (Records of Arm/disarm/Alar)	View	Empty (Record is empty)	
	Delete	Sure?	

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.

FCC ID: 2AIT9-PG100