

Diagram 1 / Diagrama 1 / figura 1

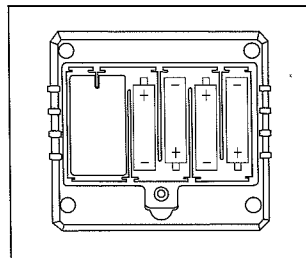


Diagram 2 / Diagrama 2 / figura 2

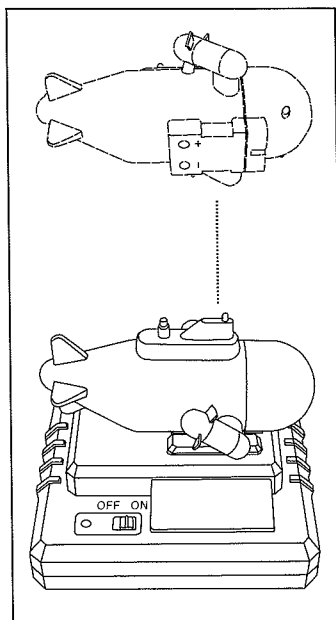


Diagram 3 / Diagrama 3 / figura 3

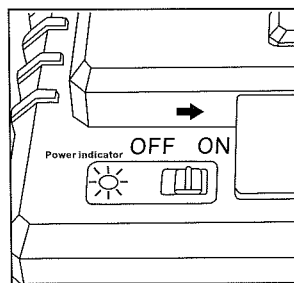


Diagram 4 / Diagrama 4 / figura 4

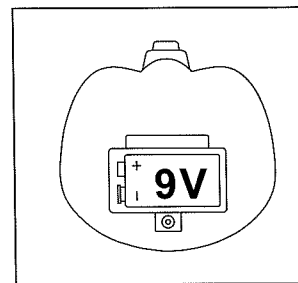


Diagram 6 / Diagrama 6 / figura 6

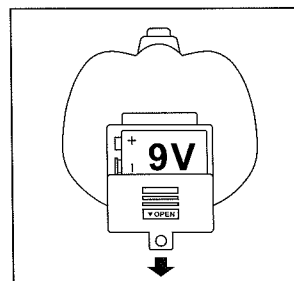


Diagram 5 / Diagrama 5 / figura 5

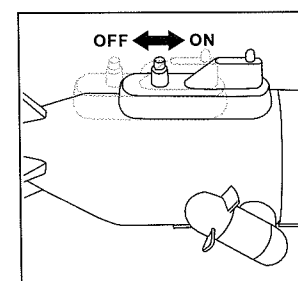


Diagram 7 / Diagrama 7 / figura 7

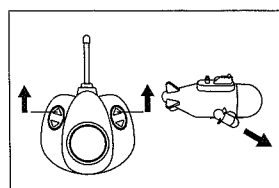


Diagram 8 / Diagrama 8 / figura 8

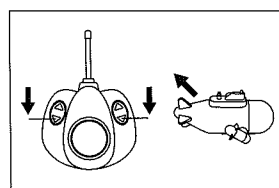


Diagram 9 / Diagrama 9 / figura 9

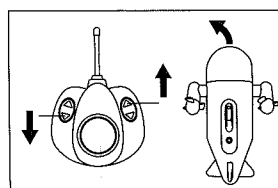


Diagram 10 / Diagrama 10 / figura 10

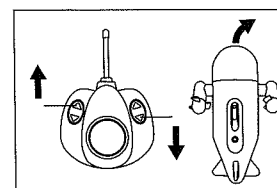


Diagram 11 / Diagrama 11 / figura 11

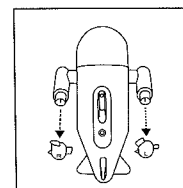


Diagram 12 / Diagrama 12 / figura 12

## OPERATING INSTRUCTIONS

### BATTERY CHARGING

#### BATTERY INSTALLATION: CHARGER

1. Unscrew to open the battery lid of the charger. (See Diagram 1)
2. Install 4 AA cell batteries into the battery compartment. Make sure that the (+) and (-) polarities are positioned properly. (See Diagram 2)
3. Replace the lid and screw to lock the battery lid.
4. Follow the steps in the section CHARGING THE SUBMARINE to begin charging the submarine.

#### CHARGING THE SUBMARINE

1. Ensure the "ON/OFF" switch of the submarine is at the "OFF" position. (See Diagram 7)
2. Plug the submarine into the charging socket. (See Diagram 3)
3. Slide the "ON/OFF" switch of charger to the "ON" position, the power indicator will light up. (See Diagram 4)
4. The power indicator will go off after the battery is fully charged.

#### BATTERY INSTALLATION: TRANSMITTER

1. Slide the battery lid in the direction of the arrow "▼" to open the battery compartment. (See Diagram 5)
2. Insert 9V battery matching the (+) and (-) signs as indicated in the battery compartment. (See Diagram 6)
3. Replace the battery lid.

#### CHARGING TIPS

If the power indicator does not light up during charging, please check the following:

1. Make sure the submarine is connected to the charger securely.
2. Replace the batteries of the charger with new ones.

#### OPERATION

##### DO NOT USE IN DEEP OPEN WATER

1. Unplug the submarine from the charger.
2. Slide the "ON/OFF" switch to the forward direction as shown to switch on the submarine. (See Diagram 7)
3. Operate the submarine with the transmitter as below:
  - Both control sticks forward: submarine dives and goes forward. (See Diagram 8)

- Both control sticks backward: submarine surfaces and goes backward. (See Diagram 9)
- Right control stick forward and left control stick backward: submarine turns left. (See Diagram 10)
- Left control stick forward and right control stick backward: submarine turns right. (See Diagram 11)
- Both control sticks released: submarine surfaces and stops.

#### REPLACING THE PROPELLER

1. There are two spare propellers prepared for replacement.
2. Make sure the "ON/OFF" switch is at "OFF" position.
3. Unplug the damaged propellers and insert with the new one according to the directions given. (See Diagram 12)
4. Make sure the propellers are installed at correct direction.

#### PERFORMANCE TIPS

1. Operate your submarine in a safe place. Avoid operating through mud or other obstacles in the pond, which can impair the performance of the submarine.
2. Do not leave your transmitter or submarine near sources of heat or under direct sunlight for long periods of time.
3. Do not expose your transmitter to humidity as dampness can damage the interior mechanism.
4. Clean the toy regularly with a slightly damp cloth.
5. When the submarine slows down or begins to move erratically, use the charger to recharge the submarine's battery again.
6. Concrete walls, metal posts, wire fence, and other electrical appliances and machineries can interfere with the transmission signal of your transmitter and result in erratic performance of your submarine. In this case, change to a different location.
7. If another radio control boat or CB radio is operating at the same location, they will interfere with the performance of your submarine.
8. Alkaline batteries are highly recommended.

#### BATTERY CAUTIONS

1. Do not charge non-rechargeable batteries.
2. Remove rechargeable batteries from the toy before recharging.

3. Rechargeable batteries are to be recharged under adult supervision.
4. Different types of batteries, new and used batteries are not to be mixed.
5. Only batteries of the same or equivalent type as recommended are to be used.
6. Batteries are to be inserted with correct polarity.
7. Exhausted batteries are to be removed from the toy.
8. The supply terminals are not to be short-circuited.

#### ATTENTION PARENTS:


IT IS RECOMMENDED THAT THIS TOY AND ALL ACCESSORIES BE PERIODICALLY EXAMINED FOR POTENTIAL HAZARDS AND THAT POTENTIALLY HAZARDOUS PARTS BE REPAIRED OR REPLACED.

#### FCC NOTE:

THE ANTENNA PROVIDED IS A UNIQUE ANTENNA. BY INSTALLATION OF UNAUTHORIZED ANTENNA TO THIS EQUIPMENT. SUCH UNAUTHORIZED INSTALLATION COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

**CE 0681**

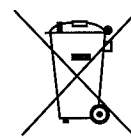

© 2005 SCIENTIFIC TOYS, LTD.  
CHAI WAN, HONG KONG.  
MADE IN CHINA  
O.I. NO.3026