



FOR MORE INFORMATION PLEASE VISIT
• <https://www.xmpow.com/>

H1

Illustration of the included accessories:

 
- Headphones x1
- 3.5mm audio cable x1
- USB-C to 3.5mm adapter x1
- Carrying case x1
- User manual x1

WIE MAN BENUTZT

MOYEN DE L'UTILISATION

MODALITÀ DI UTILIZZARE

Step1

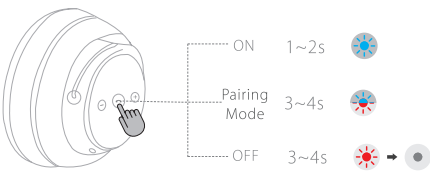

Long press it for 4 seconds to enter the pairing mode. Meanwhile, the red and blue indicator lights flash alternately. Turn on the Bluetooth of the mobile phone, search the Bluetooth device and find "Mpow H1" in the list to connect it. When it doesn't connect to the Bluetooth device of the phone, it will power off automatically after 10 minutes. Voice Dial: Continuously double press it to enter voice dial.

Appuyer longuement pendant 4 secondes pour entrer dans le mode d'appariage. Pendant ce temps, les voyants rouge et bleu clignotent alternativement. Allumez le Bluetooth du téléphone mobile, recherchez le périphérique Bluetooth et trouvez "Mpow H1" dans la liste pour le connecter. Lorsqu'il ne se connecte pas à aucun équipement Bluetooth, il s'éteint automatiquement en dix minutes.

Premere a lungo per 4 secondi per accedere alla modalità di collegamento. Nel frattempo, le spie rosso e blu lampeggiano alternativamente. Accendere il Bluetooth del cellulare, cercare il dispositivo Bluetooth e trovare "Mpow H1" nella lista per collegarlo. Quando non si connette al dispositivo Bluetooth del telefono, si spegne automaticamente in dieci minuti.

 
DE Abspielen / Anhalten / Anrufen / Anruf Annehmen / Anruftauflegen
/ Anruf abweisen

Reproducir / Pausa / Hacer Una Llamada / Responder Una Llamada
/ Colgar Una Llamada / Rechazar Una Llamada

 Riproduci / Pausa / Effettuare una chiamata / Rispondere a una chiamata / Terminare una chiamata / Rifiutare unachiamata

FR Lecture/Pause/Appel / Répondre à un Appel / Raccrochez un Appe
/ Rejeter un Appel

再生/一時停止/電話をかける/電話を受ける/電話を切る
電話を拒否する

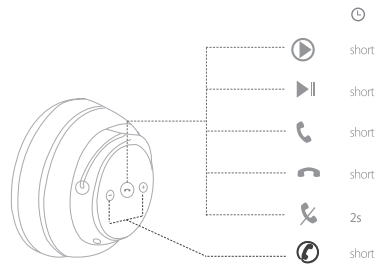


DE Löschen der Kopplungsinformationen

 Borrar la Información de Emparejamiento

IT Cancellazione delle Informazioni di Acco

FR Supprimer des informations d'appariement

  ペアリング情報を削除する

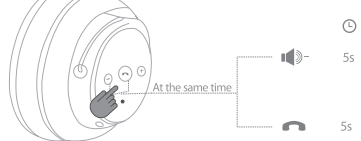


 Lautstärkeregelung / Musiksteuerung

Control de Volumen / Control de la Mús

FR Contrôle du Volume / Contrôle de la Musique

 JP 音量調整/音楽調整

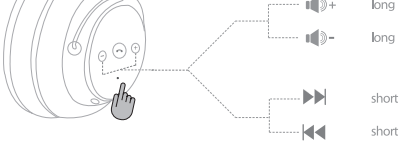

Output
DC 5V
adapter

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.