

# Replacement Transmitter

Python 1-Way Transmitter

P/N 7141P

Compatible with the following systems:

Python 502

Python 702

Python 902

# PYTHON

SECURITY FOR THE BEST

## REPLACEMENT TRANSMITTER

Model 7141P, 4 Button, Stealth Code Remote

The following Learn Routine can be used to program this replacement transmitter to the system. In order to enter the Learn Routine, the system's Valet/Program switch must be plugged into the BLUE port.

1. **Door.** Open a door.
2. **Key.** Turn the key to the ON position.
3. **Choose.** Within 5 seconds press and release the Valet/Program button the number of times corresponding to the desired channel listed below. Once you have selected the channel, press the Valet/Program button once more and hold it. The LED will flash the same number of times as the channel selected and the siren (if connected) will chirp to confirm the selected channel. Do NOT release the button.
4. **Transmit.** While holding the Valet/program button, press the button from the transmitter you wish to assign to that channel. The unit will chirp (if horn or siren connected) to confirm that the transmitter has been taught to the receiver
5. **Release.** Once the code is learned you can release the Valet/Program button and remove the key.

| Channel Number    |                      | Function                               |
|-------------------|----------------------|----------------------------------------|
| with remote start | without remote start |                                        |
| 1                 | 7                    | Auto-learn Standard Configuration      |
| 2                 | 8                    | Auto-learn Single-Button Configuration |
| 11                | 9                    | Delete All Transmitters                |

### Standard Configuration

A remote that has been programmed to an standard configuration will use separate buttons for arm and disarm similar to a factory keyless entry. Using the expanded configuration, the transmitter buttons are assigned to the following functions:

#### Lock Icon Button

The lock icon button arms and locks the system.

#### Unlock Icon Button

The unlock icon button disarms and unlocks the system.

#### AUX Icon Buttons

The AUX icon button operates channel 2.

#### Siren (or Star) Icon Button

The siren (or star) icon button operates Panic only.

### Unlock and Lock (or Star) Icon Buttons

When pressed together, the lock and unlock (or star) icon buttons operate channel 3.

#### P Button (on the back of the transmitter)

Used to enter the Transmitter's programming menu. (See Security/ Remote Start manual for details).

### FCC/ID Notice

This device complies with Part 15 of FCC rules. Operation is subject to the following conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

**CAUTION!** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.



**Directed**  
ELECTRONICS

P/N 7141P 10-06



MADE IN TAIWAN  
©2006 Directed Electronics, Vista CA 92081  
All rights reserved.