

TRANSFORMERS

 


TF-T58真无线蓝牙耳机 使用说明书

包装清单

	充电仓 X1		耳机 X2
	说明书&保修卡 X1		Type-C充电线 X1

产品示意图



① 充电仓指示灯 / ② Type-C 充电口 / ③ 触摸键 / ④ 耳机指示灯
⑤ 耳机充电触点 / ⑥ 耳机出音口 / ⑦ 数显 / ⑧ 复位键 / ⑨ 跑马灯

温馨提示

1. 除说明书有特殊标示的操作方式以外，请勿尝试拆卸或更换产品内的任何零件。
2. 请勿将产品放入水或其他任何液体中，此产品非防水设计。
3. 如果有任何液体不小心进入产品内时，请立即断开连接并移开此产品。
4. 为避免触电，请在安装或卸载产品时，确保手上没有沾水。
5. 请勿将此产品放置于热源附近或直接暴露在火源附近。
6. 请勿将本产品放置在有强大电磁力的环境中，否则会导致产品故障。

产品规格

蓝牙版本：V5.4
传输距离：≥10米
音乐时间：约4小时（MAX）
喇叭尺寸：Φ16mm
充电时间：约45分钟
电池容量：70mAh
额定输入：5V \equiv 140mA

充电仓规格

电池容量：600mAh
充电时间：约2小时
额定输入：5V \equiv 450mA
(所有技术信息以实际性能为准)

给充电仓充电用

Type-C 充电线连接充电仓到5V电源适配器

温馨提示：当耳机电池电量播报低电提醒(声音提示：battery low，每1分钟报1次)时，请及时给耳机充电



额定输入：5V \equiv 140mA(耳机)

额定输入：5V \equiv 450mA(充电仓)

LED指示状态

开机	白蓝灯交替闪烁
关机	蓝灯长亮1秒熄灭
TWS配对状态	白蓝灯交替闪烁
进入设备配对状态	主耳白蓝灯交替闪烁, 副耳熄灭
断开连接	主耳白蓝灯交替闪烁, 副耳熄灭
耳机低电量提示	耳机白灯5秒闪1次
耳机充电	耳机白灯长亮
耳机充满电	耳机白灯熄灭

充电仓指示说明(只做参考, 以实物为准)

充电仓充电	数显个位数字闪烁显示当前电量, 关盖后数显熄灭; 充电仓外指示灯闪烁
充电仓充满电	开盖: 数显和指示灯长亮, 移除电源后灭屏 关盖: 数显灭屏, LED长亮10秒后灭灯
充电仓给耳机充电中	开盖: 数显长亮10秒显示当前电量后灭灯, 对应的耳机跑马灯长跑, 耳机满电后灭灯; 关盖: 数显灭灯, 充电仓外指示灯亮10秒后熄灭
充电仓给耳机充满电	充电仓灯光熄灭
充电仓低电	当充电仓电量低于10%开盖数码管数字闪烁提示; 开盖充电仓外指示灯闪烁
充电仓按键	单击功能按键, 数显显示当前电量, 10秒后灭灯; 长按功能键5秒, 清除耳机互配和配对列表, 耳机重置后关机 (主副数显同步快闪3次; 耳机同步白蓝灯同时闪3下)

产品操作说明

①开机

方法一: 充电盒上盖打开, 取出耳机开机
方法二: 长按左/右多功能按键3秒, 耳机开机
(开机提示音: "power on")

②关机

方法一: 放回充电仓关盖, 耳机自动关机
方法二: 耳机在3分钟内没有连接设备自动关机
(关机提示音: "power off")

③配对

步骤一: 开机后, 左右耳机自动互连后进入与手机配对状态(提示音: "pairing")
步骤二: 打开智能设备的蓝牙列表, 搜索"TF-T58"并连接
温馨提示: 左右耳机出现不配对时, 请恢复出厂设置, 放回充电盒再打开自动配对



触摸操作

■ 常规模式



音量 -: 单击左耳机触摸键(最小提示音"咚咚")

音量 +: 单击右耳机触摸键(最大提示音"咚咚")

■ 音乐播放模式



播放/暂停: 双击触摸键

上一曲: 三击左耳机触摸键

下一曲: 三击右耳机触摸键

■ 通话模式



接听来电: 双击左/右耳机触摸键

结束通话: 双击左/右耳机触摸键

拒接来电: 长按左/右耳机触摸键2秒

■ 游戏/音乐模式




长按左耳机触摸键2秒启动/关闭语音助手

长按右耳机触摸键2秒切换游戏/音乐模式

恢复出厂设置

开盖长按充电仓复位键5秒, 数码管闪3下, 清除耳机与设备连接记录

产品中有害物质的名称及含量

部件名称	有害物质					
	铅 Pb	汞 Hg	镉 Cd	六价铬 Cr(VI)	多溴联苯 PBB	多溴二苯醚 PBDE
印刷电路板组件	○	○	○	○	○	○
外壳等小结构件	○	○	○	○	○	○
<p>本表格依据SJ/T 11364的规定编制。</p> <p>○：表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。</p> <p>×：表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。</p> <p>注：1. 表中标记“×”的部件，皆因全球技术发展水平限制而无法实现有害物质的替代；</p> <p>2. 印刷电路板组件：包括印刷电路板及其零部件、电子元器件等；</p> <p>3. 根据产品类型不同，您所购买的产品可能不会含有以上所有部件。</p>						
	<p>在中华人民共和国境内销售的电子电气产品必须标识此标志，标志内的数字代表在正常的使用状态下的产品的环保使用期限。</p>					

保修声明

免责声明：

本使用手册没有任何形式的担保、立场表达或其他暗示。本使用手册所提到的产品、规格及信息仅供参考，内容亦会随时更新于网页，恕不另行通知。

保修声明：

就本文件附随的产品做如下保证：如产品在您购买日起十二（12）个月（“保修期”）内，在正常使用情况下因质量瑕疵发生损坏，能修理的，免费修理；经厂家确认无法修理的，免费更换；修理或更换后的产品，在剩余保修期（最短不少于30天）内继续享有保修。购买日以销售发票日期为准，如无法确定购买日，则保修期自产品生产日期起按十三（13）个月计算。如申请保修，请先致电产品服务热线，并按我们指示的方式执行。申请保修时，您需要提供准确、完整和清晰填写的有效销售发票。

以上保证不适用于下列情况：

1. 超过三包有效期的；
2. 涂改保修卡，产品编码与产品本体不符；
3. 因误用、滥用或不适当的运输、使用、维护或保管而导致的故障或损坏；
4. 因不可抗力（如地震、战争、火灾等）或意外导致的故障或损坏；
5. 拉链、塔扣因受力过大而损坏；
6. 因承载过重造成的脱线或撕裂；
7. 任何因尖锐物体造成的损坏；
8. 有烧损或水浸迹象的产品；
9. 因擅自拆改导致的损坏；
10. 产品正常使用过程中发生的老化、脱色、磨损、破裂和其他损耗；
11. 如产品原有标识标签被更改或损毁，本保证将失效。

产品及随附物料的齐备和外观完好不属于保证范围。您应在接收产品时当场检验并对任何不符提出异议。

以上保证是我们就产品做出的全部保证，且仅在中国大陆地区境内适用。本文件的任何内容均不影响根据法律规定不能排除或限制的消费者权利。

服务监督热线：400-885-8808



保修卡

尊敬的用户，本保修卡是您将来申请保修的凭证，请您配合销售商填写并妥善保管备用！

用户信息			
用户姓名		电子邮件	
联系电话		邮政编码	
通讯地址			
产品信息			
产品名称		产品型号	
产品条码 / 编号 / 批号			

销售商信息			
名称			
地址			
联系电话		邮政编码	
销售日期		发票号码	
备注			

合格证

产品型号: _____
生产日期: _____
检验员: _____







TRANSFORMERS




TF-T58 Ear mounted BT
headphones Instructions for use

Packing list

	Charging compartment X1		Earphone X2
	Instruction manual & warranty card X1		Type-C charging cable X1

 Product diagram



①Charging compartment indicator light / ②Type-C charging port / ③Touch key
④Headphone indicator light / ⑤Headphone charging contacts / ⑥Headphone outlet
⑦Digital display / ⑧Recall button / ⑨Running lantern

Warm reminders

1. Do not attempt to remove or replace any parts in the product except for the operation method specifically indicated in the instruction manual.
2. Do not put the product into water or any other liquids. This product is not waterproof.
3. If any liquid accidentally enters the product, immediately disconnect and remove the product.
4. To avoid electric shock, please make sure that your hands are not stained when installing or uninstalling the product.
5. Do not place this product near the heat source or directly expose it to the fire source.
6. Do not place this product in a strong electromagnetic environment, otherwise it will cause the product to fail.

Product specifications

蓝牙版本: V5.4
传输距离: ≥10米
音乐时间: 约4小时 (MAX)
喇叭尺寸: Φ16mm
充电时间: 约45分钟
电池容量: 70mAh
额定输入: 5V $\overline{=}$ 140mA

Specifications of charging compartment

Battery capacity: 600mAh
Charging time: about 2 hours
Rated input: 5V $\overline{=}$ 450mA
(All technical information is subject to actual performance)

To charge the charging compartment

The Type-C charging cable is connected to the charging compartment to the 5V power adapter.

Tips: When the headphone battery announces a low-power reminder (sound prompt: battery low, once every minute), please charge the headphones in time.



Rated input: 5V $\overline{=}$ 140mA (headphones)

Rated input: 5V $\overline{=}$ 450mA (charging silo)

LED indicates the status


Start	White and blue lights flash alternately
Shut down	The blue light turns off for 1 second
TWS pairing status	White and blue lights flash alternately
Entering Device Pairing Status	The white and blue lights in the main ear flash alternately, and the secondary ears are turned off
Disconnect	The white and blue lights in the main ear flash alternately, and the secondary ears are turned off
Headphone Low Power Tips	Headphone white light flashes once in 5 seconds
Headphone charging	The white light of the headphones is on
The headphones are fully charged	Headphones turn off white light

Instructions for charging compartment (for reference only, subject to the physical object)

Charging compartment	The digital display flashes the current power, and the digital display turns off after the lid is closed; the indicator light outside the charging compartment flashes
The charging compartment is fully charged	Open the lid: the digital display and indicator light are on for a long time, and the screen is turned off after removing the power supply Close the cover: the digital display screen is turned off, and the LED is on for 10 seconds
Charging Case Charging	Open the cover: the digital display is bright for 10 seconds to show the current power and turn off the light, the corresponding headphones running lights, headphones turn off the light when it is fully charged; turn off the cover: turn off the digital display light, and turn off the indicator light outside the charging compartment after 10 seconds
The charging compartment fully charges the headphones	The light of the charging compartment goes out
Low power in the charging compartment	When the power of the charging compartment is less than 10%, the digital flashing prompt of the digital tube; the indicator light outside the charging compartment flashes Click the function button to display the current power, and turn off the light after 10 seconds. Long press the function key for 5 seconds, clear the list of headphone matching and pairing, and turn off after the headphones are reset (main and secondary digital display synchronous flash 5 times: headphone synchronization white and blue light flash 3 times at the same time)
Charging case button	

Product how-to instructions

 ① Step 1 up
Method 1: Open the lid of the charging case, remove the headphones and turn them on.
Method 2: Long press the left/right multi-function button for 3 seconds, and the headphones turn on. (Power-on tone: "power on")
② Shut down
Method: Put it back in the charging compartment, and the headphones will automatically turn off.
Method 2: The headphones will automatically shut down without connecting the device within 5 minutes. (Shut down tone: "power off")
③ Pairing
Step 1: After turning on, the left and right headphones will automatically interconnect and enter the pairing state with the mobile phone (prompt tone: "pairing")
Step 2: Open the BT list of smart devices, search for "TF-T58" and connect
Tips: When the left and right headphones are not paired, please restore the factory settings, put them back in the charging case and then open the automatic pairing.



Successfully connected the device:
Voice prompt: "connected"



Touch operation

General mode



Volume -: Click the left headphone Touch key (minimum tone "Dong")

Volume +: Click the right headphone Touch key (the maximum tone "Dong")

Music playback mode



Play/Pause: Double-click the Touch key

Previous song: Triple-click the Touch key of the left headset

Next song: Three-click the Touch button on the right earphone

Call mode



Answer the call: double-click the left/right headphone Touch button

End the call: Double-click the left/right headphone Touch button

Reject the call: Long press the left/right headphone Touch key 2S

Game/Music Mode




Long press the right headphone Touch key 2S to switch game/music mode

Long press the Touch button of the left earphone 2S to activate the voice assistant

Restore factory settings

Open the cover and press the charging compartment reset key 5S, flash the digital tube 3, and clear the connection record between the headphones and the device

The name and content of harmful substances in the product

Part name	Harmful substances					
	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
Printed circuit board components	○	○	○	○	○	○
Small structural parts such as shell	○	○	○	○	○	○
<p>This form is compiled in accordance with the provisions of SJ/T 11364.</p> <p>○: Indicates that the content of the hazardous substance in all homogeneous materials of the part is below the limit requirements specified in GB/T 26572.</p> <p>×: Indicates that the content of the hazardous substance in at least one homogeneous material of the part exceeds the limit requirements specified in GB/T 26572.</p> <p>Note: 1. The parts marked with "×" on the table are unable to achieve the replacement of harmful substances due to limitations in global technological development;</p> <p>2. Printed circuit board components: including printed circuit boards and their parts, electronic components, etc;</p> <p>3. Depending on the product model, the product you purchased may not contain all of the above components.</p>						
 <p>Electronic and electrical products sold in the People's Republic of China must mark this logo, the number in the logo represents the product under normal use environmental protection use period.</p>						

Warranty statement

Disclaimer:

This user manual does not have any form of guarantee, position expression or other implication. The products, specifications and information mentioned in this user manual are for reference only, and the content will also be updated on the web at any time without additional separate notice.

Warranty statement:

The product attached to this document is guaranteed as follows: If the product is twelve (12) months from the date of purchase ("Warranty Period"), under normal conditions of use due to quality defects damaged, can be repaired, free repair; free replacement if the manufacturer confirms that it cannot be repaired; repaired or replaced product, continue to enjoy the warranty during the remaining warranty period (the shortest not less than 30 days). The date of purchase is subject to the date of the sales invoice, if the date of purchase cannot be determined, the warranty period shall be thirteen (13) months from the date of production. If you apply for a warranty, please call the product service hotline first and execute it in the manner instructed by us. When applying for warranty, you need to provide an accurate, complete and clearly filled out valid sales invoice.

The above guarantee does not apply to the following situations:

1. Exceeding the validity period of three guarantees;
2. Altering the warranty card, the product code does not match the product body;
3. Failure or damage caused by misuse, abuse or improper transportation, use, maintenance or storage;
4. Failure or damage caused by force majeure (such as earthquake, war, fire, etc.) or accidents;
5. Zipper and tower buckle are damaged due to excessive force;
6. Disconnection or tearing caused by excessive load;
7. Any damage caused by sharp objects;
8. Products with signs of burning or flooding;
9. Damage caused by unauthorized disassembly;
10. Aging, discoloration, abrasion, rupture and other losses that occur during the normal use of the product;
11. If the original identification label of the product is changed or damaged, this guarantee will become invalid.

The completeness and appearance of the product and accompanying materials are not within the scope of the guarantee. You should inspect the product on the spot when you receive it and raise objections to any discrepancies.

The above guarantees are all guarantees we make regarding the products, and are only applicable in Chinese Mainland. Nothing in this document affects consumer rights that cannot be excluded or restricted by law.

Service supervision hotline: 400-885-8808

