



LTE Industrial Router **SmartFlex SR305**

USER'S MANUAL





International Headquarters

Advantech B+B SmartWorx 707 Dayton Road Ottawa, IL 61350 USA

Phone (815) 433-5100 – **General Fax** (815) 433-5105

Websites

www.bb-smartworx.com www.bb-smartsensing.com support@bb-elec.com

Cellular Routers Office

Advantech B+B SmartWorx s.r.o. Sokolska 71 562 04, Usti nad Orlici III, Czech Republic

Phone +420 465 521 020

Websites

www.bb-smartcellular.eu cellularsupport@advantech-bb.com

© 2016 Advantech B+B SmartWorx s.r.o. No part of this publication may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photography, recording, or any information storage and retrieval system without written consent. Information in this manual is subject to change without notice, and does not represent a commitment on the part of Advantech B+B SmartWorx.

Advantech B+B SmartWorx s.r.o. shall not be liable for incidental or consequential damages resulting from the furnishing, performance, or use of this manual.

All brand names used in this manual are the registered trademarks of their respective owners. The use of trademarks or other designations in this publication is for reference purposes only and does not constitute an endorsement by the trademark holder.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following 2 conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.



Used symbols



Danger – Information regarding user safety or potential damage to the router.



Attention – Problems that can arise in specific situations.



Information, notice - Useful tips or information of special interest.

GPL licence

Source codes under GPL licence are available free of charge by sending an email to: cellularsales@advantech-bb.com.



Advantech B+B SmartWorx s.r.o., Sokolska 71, 562 04 Usti nad Orlici, Czech Republic Manual Rev. 1 released in CZ, May 9, 2016

Contents

1	Safe	ety Instruction	;	3
2	WE	EE directive	•	4
3	Rou	ter Description	Į.	5
	3.1	Usage of the Router		6
4	Con	tents of Package		9
	4.1	Recommended Accessories		0
5	Rou	ter Design	1	1
	5.1 5.2 5.3 5.4 5.5 5.6 5.7 5.8	Router versions Delivery identification Order codes Basic dimensions of the router box Mounting recommendations Removing from the DIN rail Description of the rear panel Description of the front panel 5.8.1 Status indication 5.8.2 Power connector PWR 5.8.3 Antenna connector ANT, DIV, GPS and W 5.8.4 SIM card reader 5.8.5 MicroSD card reader 5.8.6 Ethernet Ports (ETH0 and ETH1) 5.8.7 Power over Ethernet (PoE) 5.8.8 USB Port 5.8.9 I/O Port 5.8.10 Reset Interfaces Description 5.9.1 RS232 interface	15 16 17 18 18 18 18 18 18 18 18 18 19 19 19 19 19 20 20 20 20 20 20 20 20 20 20 20 20 20	346678890122346689
6	Firs	5.9.2 RS232-RS485/422 interface		1 3 4
<u></u>	6.1 6.2 6.3	Connecting the router before first use		7

	6.3.1 Configuration over web browser	 38
7	7 Technical Parameters	40
	7.1 Basic parameters	 40
	7.2 Standards and regulations	 41
	7.3 Type tests and environmental conditions	 41
	7.4 Technical parameters of cellular module	 42
	7.5 Technical parameters of GPS	
	7.6 Technical parameters of WiFi	 43
	7.7 Technical parameters of I/O port	 44
	7.8 Technical Parameters of Power over Ethernet (PoE)	
	7.9 Other Technical Parameters	 45
8	Recommended Literature	46
9	7 Troubleshooting	47
	9.1 FAQ	 47
10	0 Customers Support	49
	10.1 Global Customer Support	 49
	10.2 Customer Support for NAM	


List of Figures

1	Access to the Internet from LAN
2	Backed up access to the Internet
3	Using VPN tunnel
4	Serial Gateway
5	Contents of package
6	Basic version (plastic)
7	Basic version with WiFi (plastic)
8	Basic version (metal)
9	Basic version with WiFi (metal)
10	Version SWITCH (plastic)
11	Version SWITCH and WiFi (plastic)
12	Version RS232 (plastic)
13	Version RS232-RS485 (plastic)
14	Ver. RS232-RS485 & WiFi (plastic)
15	Version SWITCH (metal)
16	Version SWITCH and WiFi (metal)
17	Version RS232 (metal)
18	Version RS232-RS485 (metal)
19	Version RS232-RS485 & WiFi (metal)
20	Version RS232-RS485-ETH (plastic)
21	RS232-RS485-ETH & WiFi (plastic)
22	Version RS232-RS485-ETH (metal)
23	RS232-RS485-ETH & WiFi (metal)
24	Label examples
25	Basic dimensions of the router box
26	Default position of DIN holder
27	Removing from the DIN rail
28	SmartFlex front panel
29	Power connector
30	Connection of power supply
31	Connecting of the antenna
32	SIM cards
33	MicroSD card
34	Ethernet connector
35	Connection of ethernet cable
36	PoE PD usage
37	PoE PSE usage
38	USB connector
39	I/O connector
40	Binary inputs connection 27

LIST OF FIGURES



41	Binary output connection	27
42	Router reset	28
43	Version with RS232 interface	29
44	RS232 connector	30
45	Meter connection to router	30
46	Version with RS232-RS485/422 interface	31
47	RS232 connector	31
48	RS485/422 connector	32
49	Connection of jumpers	32
50	Version with SWITCH board	33
51	Version with RS232-RS485-ETH interface	34
52	Ethernet connector	35
53	RS485 connector	35
54	RS232 connector	35
55	Router connection	37
56	Entering the IP address of the router	38
57	Entering login information	38
58	Router web interface	39

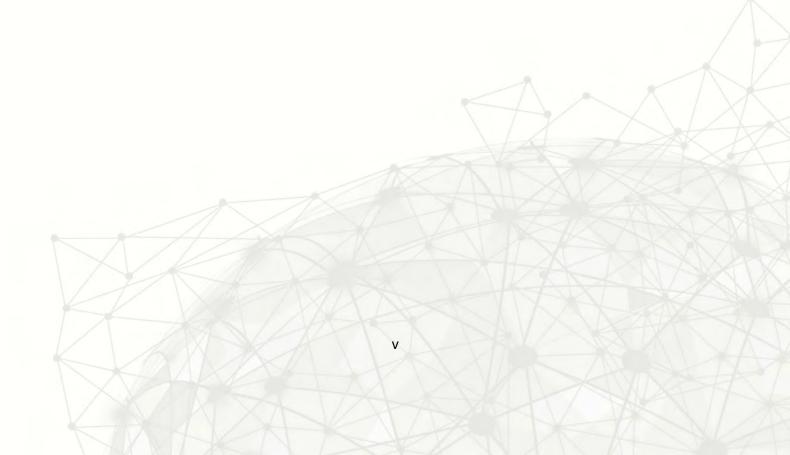



List of Tables

1	Router versions	1
2	Delivery identification	3
3		4
4	Power over Ethernet	4
5	Type of router box	5
6	Type of power supply	5
7	Examples of order code	5
8	Front panel description	8
9		9
10	Connection of power connector	20
11	Technical specifications of microSD card	22
12	Connection of Ethernet connector	23
13	Insulation strength of Ethernet ports	24
14	Connection of USB connector	26
15	Connection of I/O port	26
16	Characteristics of inputs	27
17	Description of reset and restart router	28
18		29
19	State indication of RS232 interface	30
20	RS232 interface technical specification	30
21		31
22	Connection of RS485 connector	31
23	Connection of RS422 connector	32
24	Technical specification of RS232 and RS485	33
25	State indication of the SWITCH interface	33
26		34
27	·	34
28	Connections of Terminal Block Connector RS485	35
29	Connections of Terminal Block Connector RS232	35
30	State indication of the RS232-RS485-ETH interface	36
31	Technical specification of RS232, RS485 and Ethernet	36
32		Ю
33	Standards and regulations	11
34	Type tests and environmental conditions	11
35	Technical parameters of LTE module	12
36		13
37		13
38		14
39		14
10		11

41	Other technical parameters	4
+ 1	Olliel lecillical balanieleis	 Τ.



1. Safety Instruction



Please, observe the following instructions:

- The router must be used in compliance with all applicable international and national laws and in compliance with any special restrictions regulating the utilization of the router in prescribed applications and environments.
- To prevent possible injury and damage to appliances and to ensure compliance with all relevant provisions, use only the original accessories. Unauthorized modifications or the use of unapproved accessories may result in damage to the router and a breach of applicable regulations. Unauthorized modifications or use of unapproved accessories may void the warranty.
- The router can not be opened.
- Turn off the router and disconnect it from power supply before handling of the SIM card.



- Caution! The SIM card could be swallowed by small children.
- Power supply must not exceed 60 V DC max.
- Do not expose the router to extreme ambient conditions. Protect the router against dust, moisture and high temperature.
- The router should not be used in locations where flammable and explosive materials are present, including gas stations, chemical plants, or locations in which explosives are used. We remind the users of the duty to observe the restrictions concerning the utilization of radio devices at such places.
- Switch off the router when travelling by plane. Utilization of the router in a plane may endanger the operation of the plane or interfere with the mobile telephone network, and may be unlawful. Failure to observe these instructions may result in the suspension or cancellation of telephone services for the respective client, or, it may result in legal sanctions; it may also result in both eventualities.
- When using the router in the close proximity of personal medical devices, such as cardiac pacemakers or hearing aids, you must proceed with heightened caution.
- The router may cause interference when in the close proximity of TV sets, radio receivers or personal computers.
- It is recommended that you should create an appropriate copy or backup of all the important settings that are stored in the memory of the device.

2. Product Disposal Instructions

The WEEE (Waste Electrical and Electronic Equipment: 2002/96/EC) directive has been introduced to ensure that electrical/electronic products are recycled using the best available recovery techniques to minimize the impact on the environment. This product contains high quality materials and components which can be recycled. At the end of it's life this product MUST NOT be mixed with other commercial waste for disposal. Check the terms and conditions of your supplier for disposal information.

3. Router Description

SmartFlex SR305 is an industrial cellular router intended for the North American market (NAM). This router is an ideal device for wireless communication in mobile networks that make use of LTE, HSPA+, UMTS, EDGE or GPRS technology. Due to the high speed of data transfer up to 100 Mbit/s (download) and up to 50 Mbit/s (upload) is this router an ideal solution for specialized M2M devices and IoT as well as for wireless connection of traffic and security camera systems, individual computers, LAN networks, automatic teller machines (ATM) and other self-service terminals.

The standard configuration includes two Ethernet 10/100 ports, one USB 2.0 Host port, two binary inputs and one output (I/O connector). The device also has two readers for 3 V and 1.8 V SIM cards, which are located on the rear panel of the router. The router also includes a microSD card port that supports up to 64 GB card storage (32 GB in the case of SDHC cards). The router can be equipped with a WiFi module, but this must be part of the initial configuration – it cannot be added to the router at some point in the future.

The router can be equipped with PoE PD (Power over Ethernet – Powered Device), which allows the router to be powered via Ethernet. It can also be equipped with PoE PSE (Power over Ethernet – Power Source Equipment), which lets the router power other devices via Ethernet. The SmartFlex can also be configured with a wide variety of port options. These can be SWITCH – three switched Ethernet ports; RS232 – serial interface; RS232-RS485/422 – combination of serial interfaces; RS232-RS485-ETH – combination of serial interfaces and Ethernet port with higher insulation; SmartMesh IP – support for IEEE 802.15.4 wireless technology creating a full-mesh networks. The router can be provided in either a plastic or metal casing, depending upon the customer's requirements.

Configuration of the router may be done via a password-protected Web interface. Web interface provides detailed statistics about the router's activities, signal strength, detailed system log etc. The router supports the creation of VPN tunnels using IPSec, OpenVPN and L2TP to ensure safe communication. DHCP, NAT, NAT-T, DynDNS, NTP, VRRP, control by SMS, backup primary connection and many other functions are supported.

The router provides diagnostic functions which include automatically monitoring the PPP connection, automatic restart in case of connection losses, and a hardware watchdog that monitors the router status. The user may insert Linux scripts which are started on various actions. It is possible to create up to four different configurations for the same router. These configurations can be switched whenever necessary via Web interface, SMS or binary input status. The router can automatically upgrade its configuration and firmware from your central server. This allows for mass reconfiguration of numerous routers at the same time.

The router also supports additional software like R-SeeNet for permanent traffic monitoring of routers.



Examples of possible applications

- mobile office
- fleet management
- security system
- telematic

- telemetric
- · remote monitoring
- vending and dispatcher machines

3.1 Usage of the Router

The router is primarily intended for these four basic situations:

I. Access to the Internet from LAN

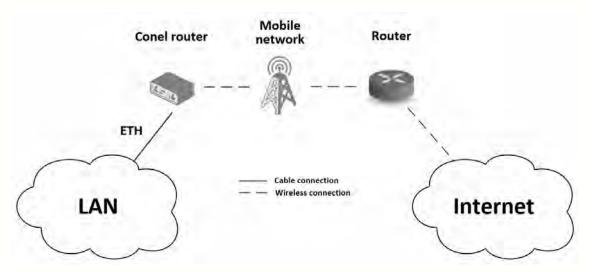


Figure 1: Access to the Internet from LAN

II. Backed up access to the Internet (from LAN)

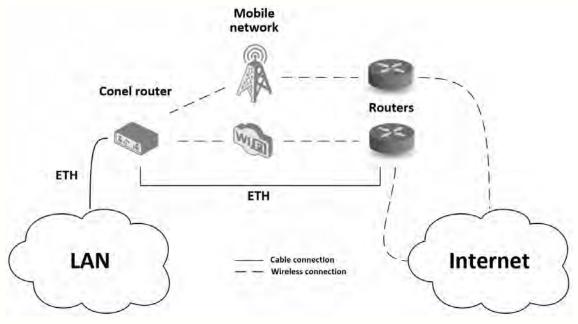


Figure 2: Backed up access to the Internet

III. Secure networks interconnection or using VPN

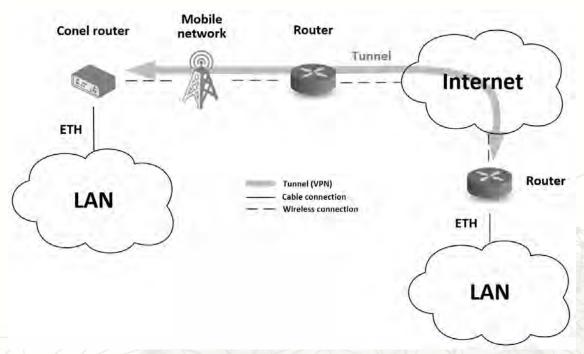


Figure 3: Using VPN tunnel

IV. Serial Gateway


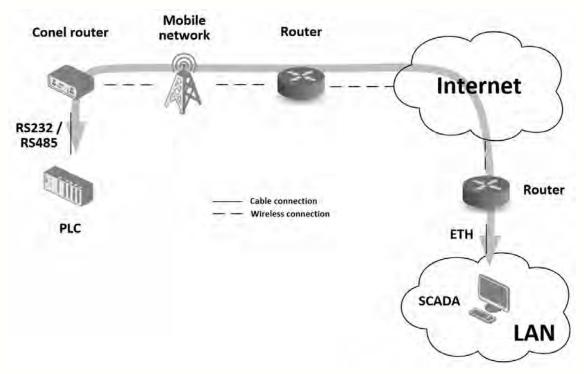


Figure 4: Serial Gateway



4. Contents of Package

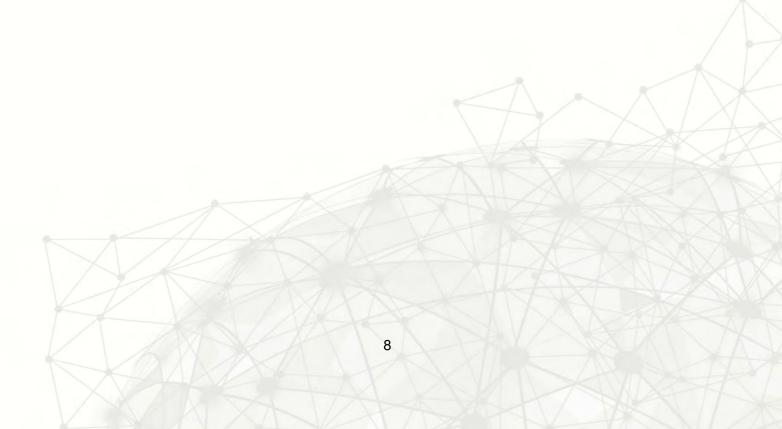

Basic delivered set of router includes:

- router,
- · power supply,
- · crossover UTP cable,
- loose power and I/O connector (+8 pins¹),
- 4-pins and 5-pins terminal block for RS485 and RS232 (only for version with interface RS232-RS485/422),
- 3-pins and 4-pins terminal block for RS485 and RS232 (only for version with interface RS232-RS485-ETH),
- clip for the DIN rail,
- paper start guide.



Figure 5: Contents of package



Temperature range for power supply is reduced to 0 °C to +40 °C!

¹These pins are designed for cables with a diameter from 0.2 to 0.8 mm²

4.1 Recommended Accessories

The following list contains the recommended accessories. These accessories are not included in the package!

- LTE antennas:
 - Terminal antenna Taoglas TG.30.8113, order code: TG.30
- WiFi antenna:
 - Sectron AW-A24G-SRPK-2 (2.4 GHz), order code: AW-A24G-SRPK-2
- SmartMesh IP antenna:
 - Sectron AW-A24G-SRPK-2 (2.4 GHz), order code: AW-A24G-SRPK-2

5. Router Design

5.1 Router versions

SmartFlex SR305 router is supplied in the following versions (see table below). All versions are available in plastic or metal box according to customer requirements. All versions are available with PoE PD (Power over Ethernet – powered device) so you can power the router from both ETH0 and ETH1 interfaces, or with PoE PSE (power source equipment) so you can power other devices by the router.

Router versions	SIM	BIN	BOUT	USB	SD	EH	WiFi	232	485	SMIP
Basic version	2 x	2 x	1 x	1 x	1 x	2 x				
Basic version with WiFi	2 x	2 x	1 x	1 x	1 x	2 x	1 x			
Version with SWITCH board	2 x	2 x	1 x	1 x	1 x	5 x				
Version with SWITCH board & WiFi	2 x	2 x	1 x	1 x	1 x	5 x	1 x			
Version with RS232 board	2 x	2 x	1 x	1 x	1 x	2 x		1 x		
Version with RS232-RS485/422 board	2 x	2 x	1 x	1 x	1 x	2 x		1 x	1 x	
Version with RS232-RS485/422 & WiFi	2 x	2 x	1 x	1 x	1 x	2 x	1 x	1 x	1 x	
Version with RS232-RS485-ETH board	2 x	2 x	1 x	1 x	1 x	3 x		1 x	1 x	
Version with RS232-RS485-ETH & WiFi	2 x	2 x	1 x	1 x	1 x	3 x	1 x	1 x	1 x	
Version with SmartMesh IP	2 x	2 x	1 x	1 x	1 x	2 x				1 x
Version with SmartMesh IP & WiFi	2 x	2 x	1 x	1 x	1 x	2 x	1 x			1 x

Table 1: Router versions



Figure 6: Basic version (plastic)



Figure 8: Basic version (metal)



Figure 7: Basic version with WiFi (plastic)



Figure 9: Basic version with WiFi (metal)



Figure 10: Version SWITCH (plastic)



Figure 15: Version SWITCH (metal)



Figure 11: Version SWITCH and WiFi (plastic)



Figure 16: Version SWITCH and WiFi (metal)



Figure 12: Version RS232 (plastic)



Figure 17: Version RS232 (metal)



Figure 13: Version RS232-RS485 (plastic)



Figure 18: Version RS232-RS485 (metal)



Figure 14: Ver. RS232-RS485 & WiFi (plastic)



Figure 19: Version RS232-RS485 & WiFi (metal)



Figure 20: Version RS232-RS485-ETH (plastic)



Figure 22: Version RS232-RS485-ETH (metal)



Figure 21: RS232-RS485-ETH & WiFi (plastic)



Figure 23: RS232-RS485-ETH & WiFi (metal)

5.2 Delivery identification

Trade name	Type name	Other
SmartFlex SR305	SmartFlex	Router in a plastic or metal box

Table 2: Delivery identification



Figure 24: Label examples

5.3 Order codes

Order codes overview is shown in the table below.

Product Name	Order code	Features – interfaces
SR305	SR3050x0yz*	LTE module for NAM, 2x ETH, 1x USB, 2x BI, 1x BO, 1x microSD reader, 2x SIM reader
SR305	SR3051x0yz*	LTE module for NAM, 2x ETH, 1x USB, 2x BI, 1x BO, 1x microSD reader, 2x SIM reader, WiFi
SR305	SR3050x1yz*	LTE module for NAM, 5x ETH, 1x USB, 2x BI, 1x BO, 1x microSD reader, 2x SIM reader
SR305	SR3051x1yz*	LTE module for NAM, 5x ETH, 1x USB, 2x BI, 1x BO, 1x microSD reader, 2x SIM reader, WiFi
SR305	SR3050x2yz*	LTE module for NAM, 2x ETH, 1x USB, 2x BI, 1x BO, 1x microSD reader, 2x SIM reader, RS232
SR305	SR3050x3yz*	LTE module for NAM, 2x ETH, 1x USB, 2x BI, 1x BO, 1x microSD reader, 2x SIM reader, RS232, RS485
SR305	SR3051x3yz*	LTE module for NAM, 2x ETH, 1x USB, 2x BI, 1x BO, 1x microSD reader, 2x SIM reader, WiFi, RS232, RS485
SR305	SR3050x4yz*	LTE module for NAM, 3x ETH, 1x USB, 2x BI, 1x BO, 1x microSD reader, 2x SIM reader, RS232, RS485
SR305	SR3051x4yz*	LTE module for NAM, 3x ETH, 1x USB, 2x BI, 1x BO, 1x microSD reader, 2x SIM reader, WiFi, RS232, RS485
SR305	SR3050x5yz*	LTE module for NAM, 2x ETH, 1x USB, 2x BI, 1x BO, 1x microSD reader, 2x SIM reader, SmartMesh IP
SR305	SR3051x5yz*	LTE module for NAM, 2x ETH, 1x USB, 2x BI, 1x BO, 1x microSD reader, 2x SIM reader, WiFi, SmartMesh IP

Table 3: Order codes overview



^{*} Replace the letters "x", "y" and "z" with the values from the following tables:

Letter "x" – Power over Ethernet (PoE)

Power over Ethernet (PoE)	Number "x" in code
Version without PoE	0
PoE PSE – Power Source Equipment – powers other devices	8
PoE PD - Powered Device - can be powered via Ethernet	9

Table 4: Power over Ethernet

Letter "y" - type of the router box

Type of box	Number "y" in code
Plastic	1
Metal	2

Table 5: Type of router box

Letter "z" - type of the power supply connector

Type of power supply	Number "z" in code
North America	4
Without accessories	0

Table 6: Type of power supply

Examples of complete order code:

Order code	Features – interfaces	Box	Power supply
SR30508014	LTE module for NAM, 2x ETH, 1x USB, 2x BI, 1x BO, 1x microSD reader, 2x SIM reader, PoE PSE	plastic	North America
SR30509124	LTE module for NAM, 5x ETH, 1x USB, 2x BI, 1x BO, 1x microSD reader, 2x SIM reader, PoE PD	metal	North America
SR30500210	LTE module for NAM, 2x ETH, 1x USB, 2x BI, 1x BO, 1x microSD reader, 2x SIM reader, RS232	plastic	None
SR30510520	LTE module for NAM, 2x ETH, 1x USB, 2x BI, 1x BO, 1x microSD reader, 2x SIM reader, WiFi, SmartMesh IP	metal	None

Table 7: Examples of order code



You can use the order codes configurator on the www.bb-smartcellular.eu web pages.

5.4 Basic dimensions of the router box



Figure 25: Basic dimensions of the router box

5.5 Mounting recommendations

- Possibility to be put on a work surface,
- DIN rail EN 60715 with included clip CPD3 (or CKD2 for metal version).

For the most of applications with a built-in router in a switch board it is possible to recognize two kinds of environments:

- No public and industry environment of low voltage with high interference,
- Public environment of low voltage without high interference.

For both of these environments it is possible to mount router to a switch board, the following there is no need to have examination immunity or issues in connection with EMC according to EN 61439-1:2011.



Compliance of EN 61439-1:2011 specification it is necessary to observe next assembly of the router to the switch – board:

- For whip antennas we recommend to observe a distance of 6 cm from cables and metal surfaces on every side due to the elimination of interference. While using an external antenna except for the switch-board it is necessary to fit a lightening conductor.
- Before mounting a router on sheet-steel we recommend using a "cable" antenna.
- For every cables we recommend to bind the bunch, we recommend for this use:
 - Length of the bunch (combination of power supply and data cables) can be maximum 1.5 m. If the length of data cables exceeds 1.5 m or in the event of, the cable leads towards the switch board. We recommend installing over voltage protectors (surge suppressors).

- With data cables they mustn't carry cables with reticular tension \sim 230 V/50 Hz.
- Sufficient space must be left before individual connectors for handling of cables,
- For correct function of the router we recommend to use in the switch-board earth-bonding distribution frame for grounding of power supply of router, data cables and antenna.

5.6 Removing from the DIN rail

DIN holder is suitable for DIN rail according to EN 60715 standard only. Default position of CPD3 holder (or CKD2 holder for metal version), which is used for mounting the router on a DIN rail, is shown in the following figure:



Figure 26: Default position of DIN holder

For removing from the DIN rail it is necessary to lightly push upward the router so that the top part of the CPD3 holder (or CKD2 for metal version) hitched to the DIN rail get out of this rail and then fold out the top part of the router away from the DIN rail.



Figure 27: Removing from the DIN rail

5.7 Description of the rear panel

The rear panel contains only two holders for SIM cards (*SIM1* and *SIM2*), holder for SD card (*SD*) and *RST* button used to restore default configuration and reboot the router.

5.8 Description of the front panel

On the front panel is the following:

Caption	Connector	Description
PWR	2-pin	Connector for the power supply
ETH0	RJ45	Connector for connection into the computer network, PoE (only for PoE PSE or PoE PD versions)
ETH1	RJ45	Connector for connection into the computer network, PoE (only for PoE PSE or PoE PD versions)
ANT	SMA	Connector for main antenna
DIV	SMA	Connector for diversity antenna
GPS	SMA	Connector for GPS antenna
WiFi	R-SMA	Connector for WiFi antenna (only for versions with WiFi module!)
SM IP	R-SMA	Connector for SmartMesh IP antenna (only for versions with SmartMesh IP module!)
USB	USB-A 2.0 Host	Connector for connection of USB devices to the router. Supports devices with PL-2303 and FTDI USB/RS232 converters.
I/O	6-pin	Connector for connection of the binary inputs and output

Table 8: Front panel description



Figure 28: SmartFlex front panel

5.8.1 Status indication

About router status inform nine LED indicators on the front panel. Each ETH port has two additional LEDs that provide information about port status.

Caption	Color	State	Description
PWR	Green	Blinking On Fast blinking	Router is ready Starting of the router Updating firmware
USR	Yellow	_	Function of this LED diode can be selected by user
POE	Yellow	On Blinking On Blinking Off	PSE: insufficient power supply via PWR connector PSE: overload (device takes much power)/short circuit* PoE PD versions: The voltage present in ETH port PSE: correct power supply via PWR connector PSE: The device is powered via one of the ETH ports PD: The voltage not present in ETH port PSE: disabled (not enabled on any of ETH ports)
SIM	Green Yellow	On (Green color) On (Yellow color)	The first SIM card is active The second SIM card is active
WAN	Yellow	LED goes out 1x per one sec. LED goes out 1x per two sec. LED goes out 1x per five sec.	Signal strength is from -50 dBm to -69 dBm Signal strength is from -70 dBm to -89 dBm or difference between neighbours cells is exactly 3 dBm Signal strength is from -90 dBm to -113 dBm or difference between neighbours cells is smaller than 3 dBm
DAT	Red	Blinking	Communication in progress on radio channel
IN0	Green	On	Binary input no. 0 is active
IN1	Green	On	Binary input no. 1 is active
OUT	Yellow	On	Binary output is active
ETH0 ETH1	Green	On Off	Selected 100 Mbit/s Selected 10 Mbit/s
ETH0 ETH1	Yellow	On Blinking Off	The network cable is connected Data transmission The network cable is not connected

Table 9: Status indication

^{*} Additionaly it can indicate a device without PoE support connected on the other side of the cable. In this case the indication is caused by low impedance (lesser than 500 Ω) of this device without PoE support. You can solve this by disabling the PoE PSE feature on the proper ETH port in the router's Web interface, see *Configuration manual* [2].



State indication of WAN LED is updated every 10 seconds.

5.8.2 Power connector PWR

Panel socket 2-pin.

Pin number	Signal mark	Description
1	GND(-)	Negative pole of DC supply voltage
2	VCC(+)	Positive pole of DC supply voltage (+10 to +60 V DC)

Table 10: Connection of power connector



Figure 29: Power connector

Power supply for the router must be between +10 V to +60 V DC supply. Protection against reversed polarity without signaling is built into the router.

The router can be put into low power mode using a special command. Then it can be awakened for example by an activity on binary input or using an internal timer.



Circuit example:

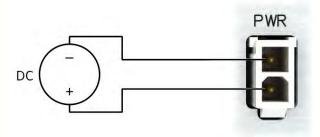


Figure 30: Connection of power supply



Note for PoE: See Chapter 5.8.7 for information on how PoE versions of the router impact the power supply usage. The power supply for PoE PSE router has to meet the specific requirements.

5.8.3 Antenna connector ANT, DIV, GPS and WiFi

Main, diversity and GPS antennas are connected to the router using the SMA connector on the front panel. There is also available R-SMA antenna connector through which the additional antenna can be connected, if the router is equipped with WiFi module.

ANT connector is used to connect the main antenna router. To connect the diversity antenna is used the second antenna connector DIV. The third connector (GPS) is intended for GPS antenna (router supports active GPS antenna). R-SMA connector named WiFi is designed for connection of WiFi antenna (available only for versions with WiFi module).



The router can not operate without connected main antenna marked as ANT!



For connection the antenna is used SMA connector. The antenna is connected by screwing this antenna to the SMA connector on the front panel of the router (see figure below).

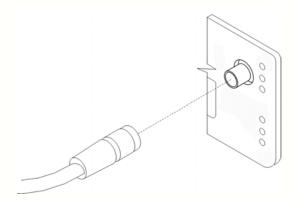


Figure 31: Connecting of the antenna



Diversity antenna improves radio features of the router at low signal strength.

5.8.4 SIM card reader

Two SIM card readers for 3 V and 1.8 V SIM cards are placed on the rear panel of the router. For getting the router to work is necessary to insert an activated SIM card with an unblocked PIN code. The SIM cards might be of different adjusted APN (Access Point Name).

Changing the SIM card:

- Before handling of the SIM card disconnect the router from power supply!
- Use a plastic opening tool, or your fingernail, to press the SIM card slightly deeper into its slot until you hear a click.
- After the click, release the card and it will pop out of its slot.
- Remove the SIM card and push any other SIM card into the slot until it clicks in place.



Figure 32: SIM cards

5.8.5 MicroSD card reader

The microSD card reader is placed on the rear panel of the router (the third slot). This card reader allows the router to operate with memory cards microSD. Technical specifications are stated in the table below.

Technical specifications of microSD card				
Supported technologies SDHC, SDXC				
Supported capacity	SDHC SDXC	up to 32 GB from 32 GB to 64 GB		
Supported microSD card fil	esystems	vfat, ext2, ext3, ext4		

Table 11: Technical specifications of microSD card



Changing the microSD card:

- Use the flat end of a spudger, or your fingernail, to press the microSD card slightly deeper into its slot until you hear a click.
- After the click, release the card and it will pop out of its slot.
- Remove the microSD card and push any other microSD card into the slot until it clicks in place.



Figure 33: MicroSD card

5.8.6 Ethernet Ports (ETH0 and ETH1)

Panel socket RJ45.

Pin	Signal mark	Description	Data flow direction
1	TXD+	Transmit Data – positive pole	Input/Output
2	TXD-	Transmit Data – negative pole	Input/Output
3	RXD+	Receive Data – positive pole	Input/Output
4	DC+	PoE power + (if it's equipped by PoE)	
5	DC+	PoE power + (if it's equipped by PoE)	
6	RXD-	Receive Data – negative pole	Input/Output
7	DC-	PoE power - (if it's equipped by PoE)	
8	DC-	PoE power - (if it's equipped by PoE)	

Table 12: Connection of Ethernet connector



Figure 34: Ethernet connector

Crossover UTP cable (Ethernet cable) plug into the RJ45 connector labeled as ETH0 or ETH1 (see figure below).

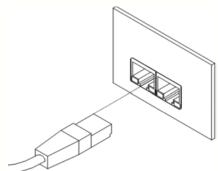


Figure 35: Connection of ethernet cable



The insulation strength of Ethernet ports from each other and from the rest of the router (grounding) is dependent on the router version:

Router Version	Insul. Strength from Router	Insul. Strength between Ports
Without PoE	1.5 kV	1.5 kV
PoE PD	1.5 kV	none
PoE PSE	none	none

Table 13: Insulation strength of Ethernet ports

5.8.7 Power over Ethernet (PoE)

On the router models with PoE, the PoE+ standard IEEE 802.3at-2009 and PoE standard IEEE 802.3af-2003 are supported in both Ethernet ports (ETH0, ETH1). The PoE PD version allows the router to be powered over Ethernet by another PoE PSE device. The PoE PSE version lets the router power other devices over Ethernet.

PoE PD

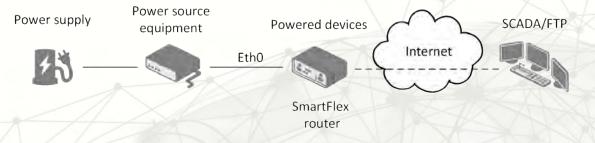


Figure 36: PoE PD usage

The PoE PD parameters can be found in Chapter 7.8. The PoE LED on the front panel of the router turns on with the green light on the voltage present in an Ethernet port so the user knows the router can be PoE powered. You can still power the router with this connector even if the router is powered with PoE (in PoE PD version), but the input voltage have to be higher than 15 V DC. If the input voltage is lower than 15 V DC and the PoE voltage is present (PoE LED green on), the router will be still powered from Ethernet connector via PoE.

Note: you can not power the router via SWITCH version ETH2 connectors. The PoE PD is available on the ETH0 and ETH1 ports only.

PoE PSE

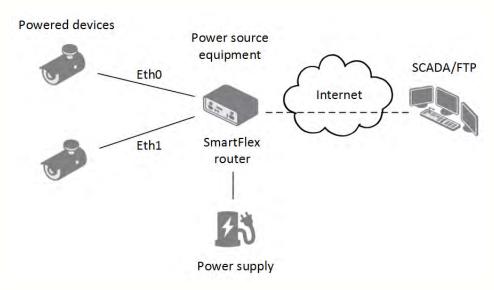


Figure 37: PoE PSE usage



Power supply used with the PoE PSE router has to provide the voltage from 44 to 57 V DC and the output power has to be at least 65 W for full PoE+ use (Class 4) in both Ethernet ports (ETH0 and ETH1).

The PoE PSE parameters can be found in Chapter 7.8. The state of PoE is indicated by the POE LED on the front panel of the router, see Chap. 5.8.1. The sufficient voltage (44 to 57 V) and power available is indicated by the green light. Yellow color of POE LED indicates unsufficient power or voltage on PWR connector. When a device is powered from the router, the POE LED is blinking green. Yellow blinking is for overload (the powered device takes too much power) or short circuit (incorrect wiring of the cable or the device without PoE support).

You can enable or disable the PoE PSE feature separately on ETH0 and ETH1 ports via the Web interface of the router. It can be found in the *LAN* configuration (*Primary* for ETH0, *Secondary* for ETH1). When PoE PSE is enabled, you can find the current, voltage, power and power class information on *General* page of router's Web interface. See *Configuration manual* [2]. Via SSH or in scripts you can use the Shell command pse.

5.8.8 USB Port

Panel socket USB-A.

Pin	Signal mark	Description	Data flow direction
1	+5 V	Positive pole of 5 V DC supply voltage, 0.5 A	
2	USB data -	USB data signal – negative pole	Input/Output
3	USB data +	USB data signal – positive pole	Input/Output
4	GND	Negative pole of DC supply voltage	

Table 14: Connection of USB connector



Figure 38: USB connector

5.8.9 I/O Port

Panel socket 6-pin.

Pin	Signal mark	Description
1	IN0	Binary input 0
2	IN0	Binary input 0
3	IN1	Binary input 1
4	IN1	Binary input 1
5	OUT	Binary output
6	OUT	Binary output

Table 15: Connection of I/O port

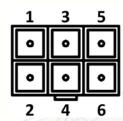


Figure 39: I/O connector

I/O user Interface is designed for processing of binary input and control (setting) binary output. Binary output is open in the default configuration. Isolation strength is 1.5 kV. The pins are isolated from each other with the same strength.

The input circuits are bipolar and allow connection as needed with common plus or minus (according to connection of an external voltage).

Binary inputs

• Characteristics of inputs:

logical 0/1*	Voltage	Current	Web interface status
log. 1 max	3 V	0.4 mA	Off
log. 0 min	5 V	0.7 mA	On
log. 0 type	12 V	2 mA	On
log. 0 max	60 V	7 mA	On

Table 16: Characteristics of inputs

- * The binary input status in the Shell returned via io get bin0 or io get bin1.
- Binary inputs connection with example:

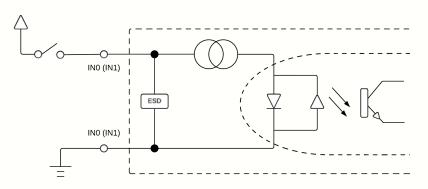


Figure 40: Binary inputs connection

Binary output

- Binary output parameters:
 - 60 V AC / 300 mA
 - 60 V DC/300 mA
- Current of binary output is limited by a resettable fuse (300 mA).
- Binary output connection with example:

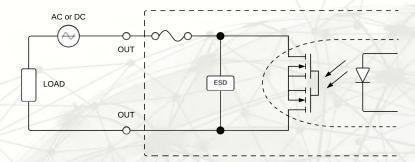


Figure 41: Binary output connection

5.8.10 Reset

When *PWR* LED starts flashing on the front panel, it is possible to restore the default configuration of the router by pressing the *RST* button on the rear panel. After pressing this button the default configuration is restored and then router reboots (green LED will be on).



For pressing the RST button could be used a narrow screwdriver.



Figure 42: Router reset



We recommend backing up configuration of the router (see *Configuration manual*) because reset of the router sets the configuration to the default state.

It is important to distinguish between reset and reboot the router.

Action	Router behavior	Invoking events
Reboot	Turn off and then turn on router	Disconnect and connect the power, Press the <i>Reboot</i> button in the web configuration
Reset	Restore default configuration and reboot the router	Press RST button

Table 17: Description of reset and restart router

5.9 Interfaces Description

Besides the basic version of SmartFlex router there are available versions with one of the following interfaces:

- RS232 interface
- RS232-RS485/422 interface
- SWITCH interface
- RS232-RS485-ETH interface

5.9.1 RS232 interface

This interface is physically connected on RJ45 connector. RS232 converter is protected against bus overload. State indication is provided by LEDs on the RJ45 connector, see the table below. Router in this version complies with the standards and temperature ranges declared in Chap. 7.1.



Figure 43: Version with RS232 interface

Connection of connector:

Pin	Signal	Description	Direction
1	RTS	Request To Send	Input
2	CTS	Clear To Send	Output
3	DTR	Data Terminal Ready	Input
4	DSR	Data Set Ready – connect to +3 V through R 330 Ohm	Output
5	GND	Signal ground	
6	TXD	Transmit Data	Output
7	CD	Carrier Detect	Output
8	RXD	Receive Data	Input

Table 18: Connection of RS232 connector



Figure 44: RS232 connector



Example of a meter connection to router:

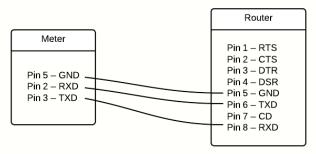


Figure 45: Meter connection to router

State indication of RS232 interface:

Description of indication		
Green LED	Indicates Receive data	
Yellow LED	Indicates Transmit data	

Table 19: State indication of RS232 interface

Technical specification of RS232 bus (EN 1434):

RS232 interface	
Max. operating bus current	15 mA
Max. data rate	230400 bit/s
Max. total cable length (300 Bd, 200 nF/km)	20 m

Table 20: RS232 interface technical specification

5.9.2 RS232-RS485/422 interface

These interfaces are physically connected on 5-pin and 4-pin terminal block connectors. The insulation strength is up to 2.5 kV. **Attention, connectors are not isolated from each other!** State indication is not provided for this interface. Router in this version complies with the standards and temperature ranges declared in chapter 7.1.



Figure 46: Version with RS232-RS485/422 interface

Connection of RS232 connector:

Pin	Signal	Description	Direction
1	CTS	Clear To Send	Output
2	RTS	Request To Send	Input
3	GND	Signal ground*	_
4	RXD	Receive Data	Input
5	TXD	Transmit Data	Output

Table 21: Connection of RS232 connector

* Both connectors (RS232 and RS485/422) have common ground.

 


Figure 47: RS232 connector

Connection of RS485 connector:

	Pin	Signal	Description	Direction
	1	TxRx-	RS485 B (-)	Input/Output
	2	TxRx+	RS485 A (+)	Input/Output
) :	3	TxRx-	RS485 B (-)	Input/Output
	4	TxRx+	RS485 A (+)	Input/Output

Table 22: Connection of RS485 connector

Connection of RS422 connector:

Pin	Signal	Description	Direction
1	RxD-	RS422 (-)	Output
2	RxD+	RS422 (+)	Output
3	TxD-	RS422 (-)	Input
4	TxD+	RS422 (+)	Input

Table 23: Connection of RS422 connector

 


Figure 48: RS485/422 connector

Selection of RS485 or RS422 can be performed using jumpers on the board. Positions where jumpers have to be mounted are shown on the port (see figure below). Three jumpers for RS485 interface or one jumper for RS422 interface are required.

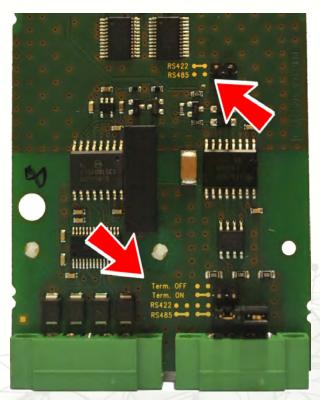


Figure 49: Connection of jumpers

Technical specification of RS232 and RS485 bus (EN 1434):

RS232 and RS485 interface	
Max. operating RS232 bus current	15 mA
Max. number of devices on RS485 bus (each 1,5 mA)	256
Max. data rate	230400 bit/s on RS232 38400 bit/s on RS485
Max. total cable length (300 Bd, 200 nF/km)	RS232 20 m, RS485 1200 m

Table 24: Technical specification of RS232 and RS485

5.9.3 SWITCH interface

Three LAN ports of SWITCH interface for SmartFlex routers (RJ45 connectors for connecting Ethernet devices) act as a typical switch device. This means that the router reads Ethernet frames (data packets on an Ethernet link) from any port on SWITCH interface and transmits them on other ports of the SWITCH interface. Each port can transmit frames independently on the other ports. State indication is provided on every connector. Router in this version complies with the standards and temperature ranges declared in Chap. 7.1 except for the lower maximum operating temperature which is $+70\,^{\circ}\text{C}$.



Figure 50: Version with SWITCH board

State indication of the interface:

Description of indication			
Green LED	On Off	Selected 100 Mbit/s Selected 10 Mbit/s	
Yellow LED	On Blinking Off	The network cable is connected Data transmission The network cable is not connected	

Table 25: State indication of the SWITCH interface

Technical specification of Ethernet IEEE 802.3:

Ethernet interface, IEEE 802.3 standard		
Maximum data rate	100 Mbit/s	
Max. total cable length (300 Bd, 200 nF/km)	100 m	

Table 26: SWITCH interface parameters

5.9.4 RS232-RS485-ETH interface

This interface board includes a panel RJ45 connector for Ethernet (ETH2 in the figure), four-pin and three-pin terminal block connectors for RS232 and RS485. The insulation strength is up to 2.5 kV between the ETH2 and RS485 interfaces and from the rest of the router, too. The RS232 interface is not insulated from the rest of the router. State indication is provided by LEDs above every connector, see the table below. Router in this version complies with the standards and temperature ranges declared in Chap. 7.1.



Figure 51: Version with RS232-RS485-ETH interface

Connection of ETH connector:

Pin	Signal	Description	Direction
1	TXD+	Transmit Data – positive pole	Input/Output
2	TXD-	Transmit Data – negative pole	Input/Output
3	RXD+	Receive Data – positive pole	Input/Output
4	_	-	_
5	_	-	_
6	RXD-	Receive Data – negative pole	Input/Output
7	_	-	_
8	_	-	_

Table 27: Connections of the Ethernet Connector



Figure 52: Ethernet connector

Connection of RS485 connector:

Pin	Signal	Description	Direction
1	GND	Signal ground*	_
2	TxRx-	RS485 B(-)	Input/Output
3	TxRx+	RS485 A(+)	Input/Output

Table 28: Connections of Terminal Block Connector RS485

* Signal ground is isolated from router's ground.



Figure 53: RS485 connector

Connection of RS232 connector:

Pin	Signal	Description	Direction
1	AUX	+5 V/500 mA	_
2	GND	Signal ground*	_
3	RXD	Receive Data	Input
4	TXD	Transmit Data	Output

Table 29: Connections of Terminal Block Connector RS232

* Common with router's signal ground.



Figure 54: RS232 connector

State indication of the interface:

Description of indication		
ETH2 – green LED	On Off	Selected 100 Mbit/s Selected 10 Mbit/s
ETH2 – Yellow LED	On Blinking Off	The network cable is connected Data transmission The network cable is not connected
RS485, RS232 – green LED		Indicates Receive data
RS485, RS232 – yellow LED		Indicates Transmit data

Table 30: State indication of the RS232-RS485-ETH interface

Technical specification of RS232 and RS485 bus (EN 1434) and Ethernet IEEE 802.3:

ETH2, RS485 and RS232 interface	
Max. operating RS232 bus current	15 mA
Max. number of devices on RS485 bus (each 1,5 mA)	256
Max. data rate	230400 bit/s on RS232 38400 bit/s on RS485 100 Mbit/s on ETH2
Max. total cable length (300 Bd, 200 nF/km)	RS232 20 m RS485 1200 m ETH2 100 m

Table 31: Technical specification of RS232, RS485 and Ethernet

6. First Use

6.1 Connecting the router before first use

Before putting the router into operation it is necessary to connect all components which are required to run your applications. Don't forget to insert SIM card.



The router can not operate without connected antenna, SIM card and power supply. If the antenna is not connected, router can be damaged.

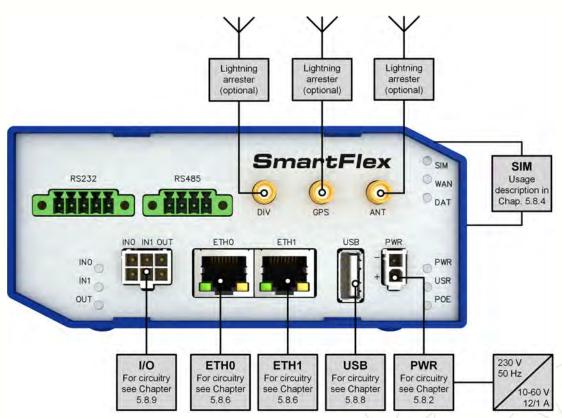


Figure 55: Router connection

6.2 Start

The router is put into operation when the power supply is connected to this router. By default, the router will automatically start to log on to the default APN. DHCP server will start to assign addresses for devices on the Ethernet port ETH0. Router behavior can be changed via the web interface. This is described in detail in the *Configuration manual for SmartFlex routers*.

6.3 Configuration



Attention! If no SIM card is inserted in the router, it is not possible to operate. Inserted SIM card must have activated data transmission.

6.3.1 Configuration over web browser

For status monitoring, configuration and administration of the router is available a web interface which can be accessed by entering the IP address of the router into the web browser. The default IP address of the router is 192.168.1.1. **Attention, it is necessary to use HTTPS protocol for secure communication over a network!**



Figure 56: Entering the IP address of the router

Configuration may be performed only by the user "root" with default password "root".



Figure 57: Entering login information

After successfully entering login information user gains access to the router via his internet browser.

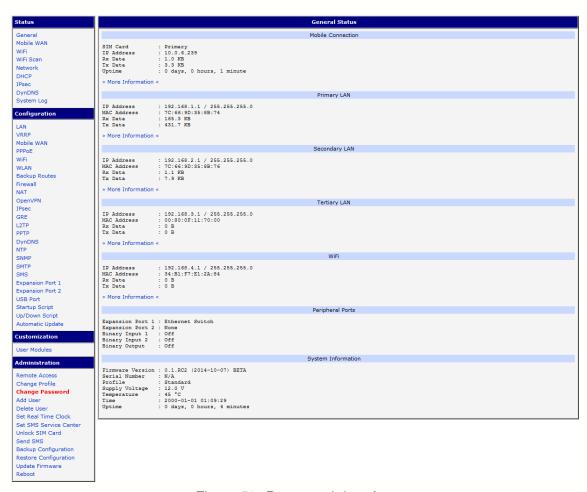


Figure 58: Router web interface



A detailed description of the router settings via the Web interface can be found in the document *Configuration manual for SmartFlex routers*.

7. Technical Parameters

7.1 Basic parameters

SmartFlex Router		
Temperature range	Operating	-40 °C to +75 °C
	Storage	-40 °C to +85 °C
Cold start	-35 °C	Data transfers via mobile network are available immediately
	-40 °C	Data transfers via mobile network are available approximately in five minutes after the start of the router. Everything else is functional immediately.
Humidity	Operating Storage	0 to 95 % relative humidity non condensing 0 to 95 % relative humidity non condensing
Altitude	Operating	2000 m/70 kPa
Degree of protection		IP30
Supply voltage		10 to 60 V DC
Consumption	Idle	2.5 W
	Average	4 W
	Peak	11 W
	Sleep mode	10 mW
Dimensions		55 x 97 x 125 mm (DIN 35 mm, EN 60715)
Weight	Plastic box Metal box	approximately 170 g (depends on interface) approximately 375 g (depends on interface)
Antenna connectors		SMA – 50 Ohm
User interface	2x ETH USB I/O	Ethernet (10/100 Mbit/s) USB 2.0 6-pin panel socket
		1 1 222 22

Table 32: Basic parameters



7.2 Standards and regulations

The router complies with the following standards and regulations.

Standards and regulations		
Telecom and emission	-	
EMC	ETSI EN 301 489-1 v1.9.2, IEC 61000-6-2:2005, IEC 61000-6-3:2006	
Safety	EN 60950-1:2006 + A11:2009 + A1:2010 + A12:2011 + A2:2013, EN 62311:2008	

Table 33: Standards and regulations

7.3 Type tests and environmental conditions

Phenomena	Test	Description	Test levels
ESD	EN 61000-4-2	Enclosure contact Enclosure air	\pm 6 kV (crit. A) \pm 8 kV (crit. A)
RF field AM modulated	IEC 61000-4-3	Enclosure	20 V/m (crit. A) (80 – 2700 MHz)
Fast transient	EN 61000-4-4	Signal ports Power ports Ethernet ports	± 2 kV (crit. A) ± 2 kV (crit. A) ± 2 kV (crit. A)
Surge	EN 61000-4-5	Ethernet ports Power ports I/O ports	\pm 2 kV (crit. B), shielded cab. \pm 0,5 kV (crit. B) \pm 1 kV, L to L (crit. A) \pm 2 kV, L to GND (crit. A)
RF conducted	EN 61000-4-6	All ports	10 V/m (crit. A) (0,15 – 80 MHz)
Radiated emission	EN 55022	Enclosure	Class B
Conducted emission	EN 55022	DC power ports Ethernet ports	Class B Class B
Power frequency magnetic field	EN 61000-4-8	Enclosure	160 A/m (crit. A)
Dry heat	EN 60068-2-2	+75 °C ¹ , 40 % rel. hu	umidity
Cold	EN 60068-2-1	-40 °C 1	
Dump heat	EN 60068-2-78	95 % rel. humidity (+4	ŀ0 °C)

Table 34: Type tests and environmental conditions

¹The temperatures are given for basic version of the router. For example, if the router is equipped with WiFi module, values are slightly worse.

7.4 Technical parameters of cellular module

Technical paramete	ers of LTE module
LTE features	Bit rate 100 Mbit/s (DL) / 50 Mbit/s (UL) 3GPP rel. 8 standard; UE CAT. 3 Output power: Class 3 (+23 dBm ±2 dB) Supported bandwidths: 5 MHz, 10 MHz, 20 MHz Supported frequencies: 700 (Bd13) / 700 (Bd17) / 850 (Bd5) / AWS (Bd4) / 1900 MHz (Bd2)
HSPA+ features	Bit rate 42 Mbit/s (DL) / 5,76 Mbit/s (UL) 3GPP rel. 7 standard; UE CAT. 14, 24 Data compression 3GPP TS25.212 Supported frequencies: 850 (BdV) / AWS (BdIV) / 1900 MHz (BdII)
UMTS features	PS bit rate 384 kbit/s (DL) / 384 kbit/s (UL) Output power: Class 3 (+24 dBm +1/-3 dB) Supported frequencies: 850 (BdV) / AWS (BdIV) / 1900 MHz (BdII)
GPRS/EDGE features	Bit rate 237 kbit/s (DL) / 59,2 kbit/s (UL) GPRS multislot class 12, CS 1 to 4 EDGE multislot class 12, CS 1 to 4, MCS 1 to 9 Supported frequencies: 850/900/1800/1900 MHz
GPRS/EDGE power classes	EGSM 850/900: Class 4 (+33 dBm ± 2 dB) GSM 1800/1900: Class 1 (+30 dBm ± 2 dB) GSM 850/900: Class E2 (+27 dBm ± 3 dB) GSM 1800/1900: Class E2 (+26 dBm +3/-4 dB)

Table 35: Technical parameters of LTE module

7.5 Technical parameters of GPS

GPS specifications	
Antenna	50 Ohms – active
Protocols	NMEA 0183 v3.0
Frequency	1575.42 MHz
Sensitivity	Tracking: -161 dBm* Acquisition (Assisted): -158 dBm** Acquisition (Standalone): -145 dBm**
Acquisition time	Hot start: 1 s Warm start: 29 s Cold start: 32 s
Accuracy	Horizontal: < 2m (50 %); < 5 m (90 %) Altitude: < 4 m (50 %); < 8 m (90 %) Velocity: < 0.2 m/s

Table 36: Technical parameters of GPS

7.6 Technical parameters of WiFi

WiFi	
Antenna connector	R-SMA – 50 Ohms
Supported WiFi band	2.4 GHz, 5 Ghz
Standards	802.11a, 802.11b, 802.11g, 802.11n
2.4 GHz supported channels	1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14
5 GHz supported channels	36, 40, 44, 48, 52, 56, 60, 64, 149, 153, 157, 161, 165
Type of device	Access point, station
Max. clients in AP mode	10
WiFi TX Output Power	17,3 dBm
WiFi RX Sensitivity	-96,3 dBm

Table 37: Technical parameters of WiFi

^{*} Tracking sensitivity is the lowest GPS signal level for which the device can still detect an in-view satellite 98 % of the time when in sequential tracking mode.

^{**} Acquisition sensitivity is the lowest GPS signal level for which the device can still detect an in-view satellite 50 % of the time.

7.7 Technical parameters of I/O port

Characteristics of inputs:

logical 0/1*	Voltage	Current	Web interface status
log. 1 max	3 V	0.4 mA	Off
log. 0 min	5 V	0.7 mA	On
log. 0 type	12 V	2 mA	On
log. 0 max	60 V	7 mA	On

Table 38: Characteristics of inputs

- Binary output parameters:
 - 60 V AC / 300 mA
 - 60 V DC/300 mA

7.8 Technical Parameters of Power over Ethernet (PoE)

Standards IEEE 802.3at-2009 (PoE+) and IEEE 802.3af-2003 (PoE) supported. Cabling needed is Category 5, up to 12.5 Ω . It is possible to use a passive PoE injector.

PoE PD: parameters for opposite PSE		
Input voltage range	42.5 – 57 V	
Power available	25.50 W	
Maximum current	600 mA	

Table 39: PoE PD: parameters for opposite PSE

PoE PSE parameters	
Power supply needed	44 – 57 V, 65 W
Power available	2x 25.50 W (ETH0, ETH1)

Table 40: PoE PSE parameters

^{*} The binary input status in the Shell returned via io get bin0 or io get bin1.

7.9 Other Technical Parameters

Other technical parameters		
CPU power	2 DMIPS per MHz	
Flash memory	256 MB	
RAM	512 MB	
M-RAM	128 kB	

Table 41: Other technical parameters

8. Recommended Literature

[1] Advantech B+B SmartWorx: Start Guide,

[2] Advantech B+B SmartWorx: Configuration Manual for SmartFlex Routers.

9. Troubleshooting

If you can not connect to the router from your PC, your network card may be configured the way it is not possible to connect to the router. Take one or more of the following steps to solve the problem:

- Select the communication rate 10 MB/s in the properties of your network card.
- Connect the router to the PC via Switch.
- Connect the router to the PC, start the router first and then start the PC after the router's initialization.

9.1 FAQ

- I have NAT enabled. My equipment is not connecting to the network.
 - The device's gateway has to be configured as the router.
- In the router resets itself and the Ethernet connection fails.
 - The router will not function without an antenna. Keep the antenna as far as possible from the power supply.
- Lan't access the Web server over NAT.
 - The remote HTTP access of the router has to be disabled, the default server address has to be your web server and the gateway of the web server has to be the IP of the router.
- Mobile WAN connection fails. (DAT LED off)
 - Check signal power. If the signal power is weak, you will have to use a better antenna. If the neighboring cells have a similar signal strength, you will need to use a directional antenna. For proper operation, the signal levels have to be in the range from -50 dBm to -90 dBm.
 - It is necessary to set ping, which will check the connection and, in the case of failed ping, restart connection.
- Mobile WAN connection cannot be established. (DAT LED off)
 - Recheck GPRS settings APN, name, password and IP address.
 - Try to enter PIN verify if the SIM card has the PIN code set.
 - In a private APN, switch the DNS server send off.
 - Switch the system log on and observe where the error occurs.



47

Ethernet connection fails or isn't establishing.

• It is possible to turn auto negotiation off and set a rate and duplex manually on the Ethernet interface of the router.

DynDNS doesn't function.

- With private APN this is not functional.
- If the same IP address is recorded in your canonic name as dynamically assigned address, it means that the operator is using NAT or firewall.
- Verify NAT using ping to the static server address.
- Verify Firewall accessing remotely to the router's Web interface.
- The operator may not provide the address of DNS server and without DNS server's adress it is impossible to connect to the dyndns.org server. There will be these messages in the system log:
 - DynDNS daemon started
 - Error resolving hostname: no such file or directory
 - Connect to DynDNS server failed

L2TP or IPSec isn't establishing.

• Check the system log for error messages.

I switched the router to offline mode by SMS message, but the router is in online mode after restart.

• SMS messages do not change the router configuration. They remain in effect only until the router is restarted.

FTP doesn't function.

• Router doesn't support active FTP mode. It supports passive mode only.

RS232 doesn't function.

Verify that the router supports RS232 communications. Also verify the RS232 communication settings. To do so, open the router's configuration menu via the web browser, select the appropriate expansion port and verify the settings in the configuration menu.

10. Customers Support

10.1 Global Customer Support

You can find up to date information about this product on our website:

www.bb-smartcellular.eu



Upkeep-advices:

- The SIM-card must be handled carefully as with a credit card. Don't bend, don't scratch on this and do not expose to static electricity.
- During cleaning of the router do not use aggressive chemicals, solvents and abrasive cleaners!

FCC compliance statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Important: Changes or modifications to this product not authorized by Advantech B+B SmartWorx could void the electromagnetic compatibility (EMC) and wireless compliance and negate your authority to operate the product. This product has demonstrated EMC compliance under conditions that included the use of compliant peripheral devices and shielded cables between system components. It is important that you use compliant peripheral devices and shielded cables between system components to reduce the possibility of causing interference to radios, televisions, and other electronic devices.

10.2 Customer Support for NAM

Up to date product information is on the website:

www.bb-smartworx.com

For Technical Support:

Call 815-433-5100