


 A Phoenix Mecano Company	Issue department: Bedding Division	Date:	2017-08-23
	Product Function instruction	Author:	Kyle
		No: CB1522	
CB.15.22.01	Version:	1.1	
	Page 1 of 5		

CB1522 Function instruction

1. Electrical configuration diagram:

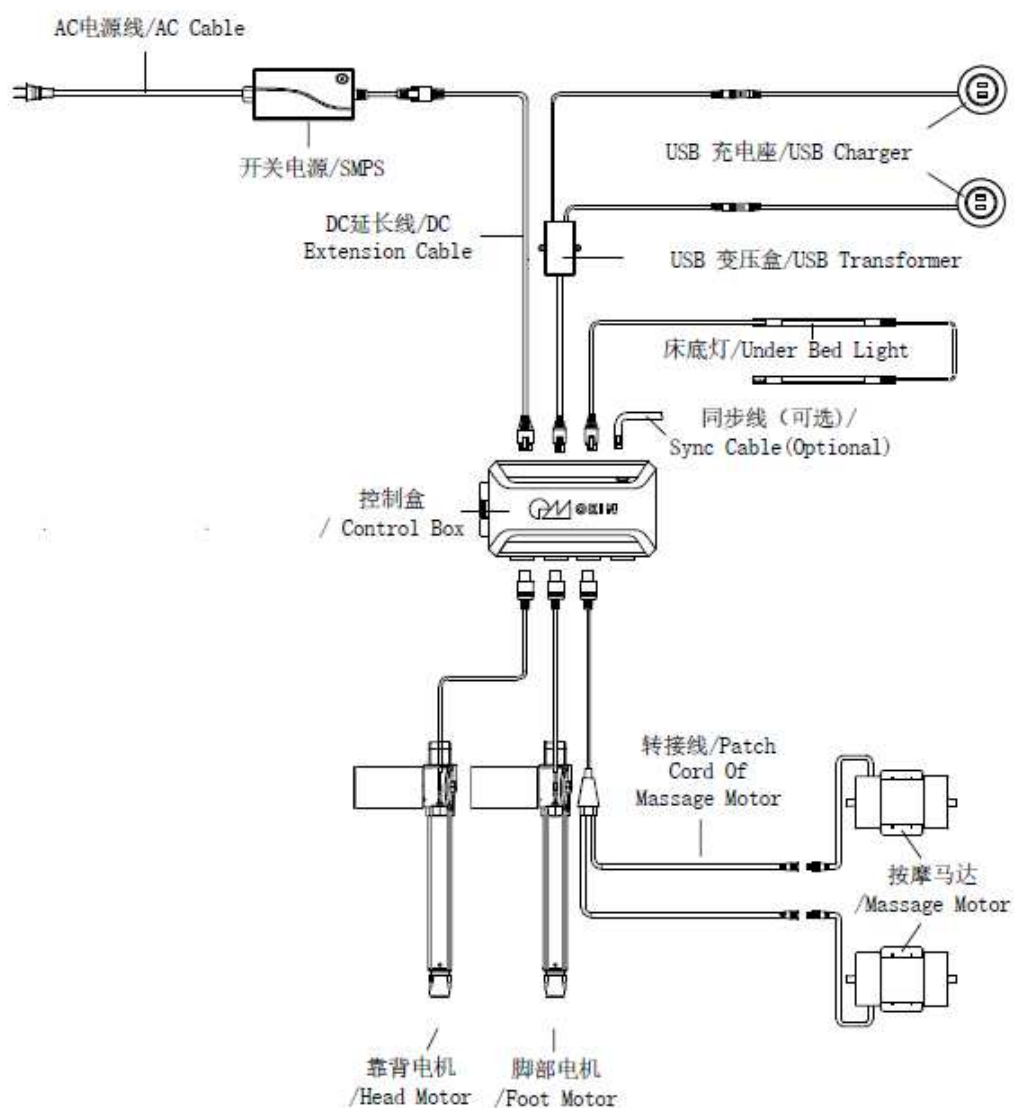

 A Phoenix Mecano Company	Issue department: Bedding Division	Date:	2017-08-23
	Product Function instruction	Author:	Kyle
		No: CB1522	
	CB.15.22.01	Version:	1.1
Page 2 of 5			

2. Function Picture



1. Process of test

1.1. HEAD MOTOR

Connect to head actuator, control by remote single:

Click head up button on the remote, head actuator moves out, stop when released;

Click head down button, head actuator moves in, stop when released;

This function takes effect only by pressing the corresponding button on the remote.

1.2. FOOT MOTOR

Connect to foot actuator, control by remote single:

Click foot up button, foot actuator moves out, stop when released;

 A Phoenix Mecano Company	Issue department: Bedding Division	Date:	2017-08-23
	Product Function instruction	Author:	Kyle
		No: CB1522	
	CB.15.22.01	Version:	1.1
		Page 3 of 5	

Click foot down button, foot actuator moves in, stop when released;
This function takes effect only by pressing the corresponding button on the remote.

1.3. Massage

Connect to head & Foot massage, control by remote:
Click head massage + button, head massage strengthens by one level;
Click head massage - button, head massage weakens by one level;
This function takes effect only by pressing the corresponding button on the remote.

1.4. Test for underbed light

Click button of underbed light, turns on (or turns off) the underbed light, switch the status once when click once;
This function takes effect only by pressing the corresponding button on the remote.

1.5. SYNC port

Connect with the same other Control box or Other accessories;

1.6. Power LED & PAIRING LED

Power supply for control box, PAIRING LED of control box is blue, POWER LED is green.

1.7. Power

Connect to the 29V DC;

1.8. RESET button

Press and hold the RESET button, the Head, Foot actuators will move to lower position.

1.9. Pair Function

Double click RESET button, pairing LED turns on, the control box enters into mode of code pairing;
Press and hold the pairing LED of Remote, the backlight of pairing LED flashes, the backlight of remote flashes, the remote enters into mode of code pairing;

 OKIN REFINED A Phoenix Mecano Company	Issue department: Bedding Division	Date:	2017-08-23
	Product Function instruction	Author:	Kyle
		No: CB1522	
	CB.15.22.01	Version:	1.1
Page 4 of 5			

The backlight of paring LED of remote stops flashing, and the paring led of control box turns off, it indicates that the code paring is successful;

If fails, repeat all the processes above;

1.10. FLAT function

Press and release the FLAT button on remote, the head and foot actuators moves to lower position(when the actuator is free, can turn off the vibration motor and turn off the indicator light when press once), stop when press any buton;

This function takes effect only by pressing the corresponding button on the remote.

1.11. ZERO G position function

Press and release ZERO G button on remote, the head and foot actuator moves to preset memory position, stop when press any button;

This function takes effect only by pressing the corresponding button on the remote.

1.12. Bluetooth function

Use the APP to connect Bluetooth to control the control box. For details, see < ORE_BLE_USER MANUAL >;

FCC Warning:

Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two

 A Phoenix Mecano Company	Issue department: Bedding Division	Date:	2017-08-23
	Product Function instruction	Author:	Kyle
		No: CB1522	
	CB.15.22.01	Version:	1.1
Page 5 of 5			

conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

ISED RSS Warning:

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radioexempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.