# MakeID

# Label Printer-S1 Pro

# User Manual

-----English

# Packaging List (actual items may vary)

1\* Printer

1\* User Manual (warranty card and product certificate included)

1\* Quick-Start Guide

1\*Charging Cable

1\* Ordinary White Label Roll (15mm\*50mm)

## **User Instructions**

## 1. Label Roll Installation

\*This printer can only print die-cut labels. Please ensure that you use official MakeID labels, otherwise the printer may be damaged or abnormal printing might occur.

Step1.

Push the Cover-Open button open and put in the label roll as in the direction shown in the figure with the printable side facing down.



Step2. When using a new label roll, pull the transparent leading label out of the Label Exit. The transparent leading label is unprintable.

Step3. Shut the cover after the label roll is correctly placed. Tear off the transparent leading label before use.



## 2. APP Download

Scan the QR code to download the APP directly, or you may go to Google Play or APP store to search for 「MakeID-Life」 APP to download.



# APP Download MakeID-Life

## 3. Button Initial Settings

Step1. This label printer is powered by lithium battery. When the battery power is sufficient, long press the Power button for 2 seconds to light up the screen to power on the printer.Step2.: For initial use of the printer, connect it to the APP to set the button initialization. Please follow the steps below to do the settings before use.

a.

Open the APP on the phone and allow its all requested permissions.

Allowing the permissions is only for searching for and connecting to the printer. It will not violate your privacy.



b.

After selecting the S1 Pro printer theme, search for it. Click on the searched printer and connect.

Please connect the printer in the APP. Do not connect it to Bluetooth in the phone system setting.

C.

Set the Date button as instructed and select your preferred calendar format in the APP. After successful setting, the default date is the current date's day. You may select the date of 30 days before or after by clicking on the Selection button.

\*

Such a step is required.



Such a step is required.  $I\!\!I$ 

•••••• 中国的遗学 9:41 AM 100% 🗰	9:41	all 🗢 🚃
MakelD st •	< Kitchen	₫ ⊙
How to use MakelD label printer?	Pork 📈	
Welcome to MakelD-S1 printer!	Beef 2	
It is the first time to use S1, please follow me to complete the printer button setting-	Pork 🧷	Conver (E)
	Pork 🧷	
	Pork 🖉	
	Pork 🖉	
Kitchen Custom Data EXP	Pork 🗷	
Finance click bern to set the	Pork 🧷	
kitchin key	Pork 🧷	
<u>6</u> O <u>2</u>	Append	C Foliesh
History Ma		

e.

Set the Custom button and the Expiry Date button as instructed in the APP. Then, click on

to finish the setting before you can print out the label directly by clicking on the Print button.

Step3.

After successfully setting all the steps above, you can print out the label directly by clicking on the Print button.

### 4. Button Usage

\*

Button must be set to be used after the printer is connected in the APP. Kitchen button, Custom button Step1. 1<sup>st</sup>, click on the Kitchen button or the Custom button.
Step2. 2<sup>nd</sup>, click on the Selection button to select the text.
Step3. 3<sup>rd</sup>, click on the Print button to print out the label.



### Date button

Step1. 1<sup>st</sup>, click on the Date button,

Step2.

2<sup>nd</sup>, you may select the date of 30 days before or after by clicking on the Selection button. The default date is the current date's day.

Step3.

3<sup>rd</sup>, click on the Print button to print out the date label.



### Expiry Date button

- Step1.  $1^{st}$ , click on the Expiry Date button.
- Step2. 2<sup>nd</sup> , click on the Selection button to select preferred expiry date.
- Step3. 3<sup>rd</sup>, click on the Print button to print out the expiry date label.



## 5. How to Use the APP

# \* You could also edit the text in the APP to print after the printer is connected by following the steps above.

Step1.

 $1^{st}$ , the printer is powered on and the label roll has been correctly installed, then connect the printer to the phone in the APP.

Step2.

2<sup>nd</sup>, enter the label-editing page in the APP.

<	Gap editor 😋	Unconnected
	• Moe	Inter Entitiet Entitier
		Ī
	2m	
m		B
Templatu	Text Sticker 1	Noture Painting
and a second	C and	
Sten3		Lave
3 <sup>rd</sup> click on	A to edit the text	t and <b>T</b> to cha
Step4.		
4 <sup>th</sup> , click on	to insert sticke	rs or icons.
Step5. $5^{\text{th}}$ . click on	Print to enter the	e print preview pa
Step6.		
6 <sup>™</sup> , Tear off th *	ne label from the l	abel exit after prii
<b>T</b>		

To prevent causing any potential damage to the label and the printer, do not attempt to tear off the label while the printer is operating.

### 6. How to Stick the Label

Each label comes with an adhesive on the backside. Tear off the backing paper before sticking it onto any object surfaces.

### 7. Charging Method

The printer is powered by lithium battery with a Type-C input port of 5v=2A charging input; Please use the Type-C charging cable that comes with the printer. Charge the printer by using a standard Type-C charging head;

If the printer is left unused for a long period, please charge once every 3 months in case the lithium battery cannot be recharged due to natural wear and tear over time.

## **Printer Parameter**

Printing Method	Thermal Printing
Printing Resolution	203dpi
Supported Label Type	Die-cut Label
Label Tearing Method	Manually
Printing Width	12mm
Compatible Label Width	9-12mm wide; 7.4m long
Printer Size	85.5mm*85.5mm*33mm
Package Size	117mm*117m m*43mm
Battery Capacity	3.7v/1450mAh
Battery Life	90 days
Connection Method	Bluetooth connection/ Shortcut button panel operation

## Safety Notes

Your personal safety is very important in the operation and maintenance of the product. This manual includes warnings and precautions for safe operation. Please read carefully and understand all warnings and precautions before use.

Do not attempt to repair or adjust the product yourself. If you still fail to fix the troubles according to the suggested methods described in this manual, please power off the product and contact us at <u>iryx@jingjingfun.com</u> for further assistance.

# Precautions

1.

Do not use the printer for any use or purpose other than those described in this manual, as that may cause accidents or damage to the product.

2.

Only MakeID official labels can be used for this printer. Thus, please do not use other branded labels as the replacement, as this may cause damage to the printhead and shorten its life. damage to the printhead caused by the use of poor-quality labels are not covered by the warranty.

3.

Do not touch the printhead to prevent static electricity from causing damage to sensitive components. If the printhead gets dirty, please clean it with anhydrous alcohol.

4.

Do not scratch the printhead with hard objects. damage to the printhead caused by improper

maintenance or use are not covered by the warranty.

5.

Do not place any foreign objects outside the label exit, as this may cause damage to the printer. 6.

Do not press or hit the printer, as this may cause damage to the components or the printer to malfunction.

7.

If the printer is soaked in water or damaged, stop using it immediately.

8.

The printer should be kept away from direct sunlight or the rain, heaters and other heatgenerating devices, dashboards, the rear of the cars, nor exposed to extremely high or low temperatures, high humidity, or dusty areas. The standard operating temperature range is from 5°C to 35°C;

9.

If there is a large temperature difference between indoors and outdoors, it is not recommended to use the printer immediately when it is taken from outdoors to indoors. It needs to be left to stand for a period of time to ensure that the printer is frost-free before use;

10.

Do not stick the label where your hands often touch. Sweat and friction will make the printings fade.

11.

Do not leave the labels in contact with chemical liquids, such as hand sanitizer, laundry detergent, detergent, alcohol, etc. for a long period, otherwise, it will affect the preservation

time.

12.

Do not wipe the labels with any cleaning tools that contain alcohol.

13.

Thermal inkless printing is a special printing technology. The printings might fade if it is improperly used. We recommend sticking the label in room temperature in dry, flat, and infrequently touched places.

14.

To prevent labels from jamming due to multiple printings, please remove and tear off the label at the label exit after each printing task is finished.

15.

Do not disassemble the printer to avoid possible electrocution, mechanical injury, or causing damage to the printer components and other accidents.

16. Power off the printer immediately to avoid burns if the printer shows abnormalities such as

emitting smoke or odor, etc.

17.

To prevent unexpected situations, do not force to open the cover to remove the label roll when the printer is operating.

18.

Do not touch the printhead to avoid burns because the printhead is still in a high-temperature

state after the printings have just finished.

19.

As the printhead is a precision component, and to better protect the printhead and extend its life, it is recommended:

a.Not to print more than 2 meters for each continuous printing.

b.Not to print more than a total length of 20 meters per day.

19.

Due to the structural reason, the printhead is a fragile component, please pay attention to the

following notes to avoid corrosion.

a.Do not touch the printhead surface.

b.Do not use carbon ribbons or thermal labels that contain sodium, potassium, or chloride ions.

c.Printhead should be avoided contact with any liquids or wet objects.

d.Printhead can be only cleaned with anhydrous alcohol.

# Troubleshooting

Description	Reasons and troubleshooting
Printer unable to power	Printer might run out of power.
on or shut-down occurs	Please try again after recharge.

during operation			
Printer not work or incomplete printing	Check if the label roll is correctly installed. Please refer to the Label Roll Installation section. Labels have run out. Please change. Check if the cover is securely shut.		
Blurred printing	Check if the printer is being used in low temperatures. The ideal working temperature is from 5°C to 35°C. Printhead might be dirty, please clean it with anhydrous alcohol.		
「MakeID-Life」 APP download failure	Make sure your phone is connected to the Internet. Then, scan the QR code to download the APP directly, or you may go to Google Play or APP store to search for [MakeID-Life] APP to download.		
Connection failure	<ul> <li>a.</li> <li>Check if [MakeID-Life] APP is correctly downloaded.</li> <li>b.</li> <li>Check if the printer is powered on.</li> <li>c.</li> <li>Check if the requested permissions from Bluetooth are all allowed.</li> <li>d.</li> <li>Open the APP and allow all permissions as requested.</li> <li>e.</li> <li>Search for the printer to connect in the APP. Do not connect to the Bluetooth in the phone system settings.</li> </ul>		

Warranty Policy	
Other issues	Please contact us at jryx@jingjingfun.com
Abhormar printing	Reboot the printer, uninstall and reinstall the APP before trying again.
Abnormal printing	b.
	a. Deheat the printer legent the ADD before the equip

### \_\_\_\_\_

Warranty Period

MakeID will provide you with free limited liability repair or product replacement services for 1 year from the date of purchase of this product in the event of a hardware failure on the condition that you have installed and used this product in full accordance with the normal working conditions and methods specified in this user manual.

### Kind Reminder

- 1. Documents such as user manual, guide card, and all cables such as the charging cable, etc that come with the product are not covered by the warranty.
- 2. Discounted or complimentary items that come with the product are not covered by the warranty.
- 3. ; Order number, contact information and delivery details which shall include your name, phone number and full address are needed for after-sale services of your product due to quality or function issues within the warranty period.

### Ineligibility for the Warranty Service

Malfunctions or damage of this product belonging to the following situations are not covered by the free warranty, please choose paid repair service:

1.

The product or its components exceed the warranty period.

2.

Failure to install and use in accordance with the manual.

3.

Repaired or disassembled by non-MakeID staff.

4.

Non-MakelD labels or unsupported print media are used.

5.

The operating environment does not conform to the conditions specified in the manual.

6.

Substandard packaging or transportation methods are used by users during the transportation and handling of the product.

7.

Non-MakeID components are used.

8.

Malfunctions or damage due to force majeure such as man-made or natural disasters (e.g. earthquake, fire, etc.)

9.

Other malfunctions or damage that is not caused by product quality issues.

This policy does not affect your legal rights as a consumer.

Under the environment with Electrostatic Discharge Test Results the sample may be disconnected, but it can be resumed to normal operation by user after test.

### This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio

communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/ TV technician for help.

### **FCC Radiation Exposure Statement**

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

**Warning:** Changes or modifications to this unit not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.