

M/N: ATRW323UB-WH

DO NOT connect any speaker wires to the metal body or chassis of the vehicle. DO NOT connect the speaker common (-) wires to each other. Connect each speaker wire directly to each speaker terminal. All speaker common (-) wires must remain floating.

E4 10R-06 5049

50_{mm}

90mm

