





# WIRELESS DOORBELL + Extra Socket

Operation Manual VE-WDOR

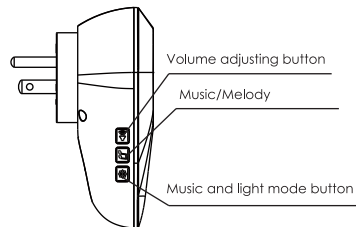

## SPECIFICATIONS

- 1300 FT Range
- IP55 Water-resistant
- LED Indicator
- 58 Tunes
- Touch Button
- Memory function
- Frequency: 433 MHz
- Volume: 4 Levels
- Receiver: 110-240V
- Wattage: <0.5W
- Transmitter: <10mW
- 1 CR2032 battery (included)
- FCC ID: 2AANZWDOR

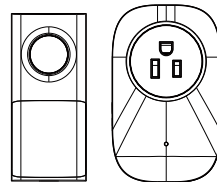

1

## INSTALLATION

1. Take off the adhesive sticker and paste it underneath the transmitter.
2. Choose a good area, and attach it by putting a little pressure to ensure the transmitter is attached.
3. Plug the doorbell into a regular socket within the operating range.
4. Press button on receiver of "Music" & "Volume" to choose music and volume.
5. Press "Music" & "Light Mode" button to choose preferred mode, and the light will light up.

## SELF-LEARNING CODE FUNCTION OPERATION

Press and hold "music" & "light mode" button for about 3 seconds, the bell will ring (bird voice). Press the transmitter 2 times within 30 seconds, if the doorbell rings, the pairing is successful. If the doorbell does not ring, please press the transmitter again, until the pairing is successful. For matching multiple transmitters, please repeat the above operation.

## DELETE PAIRING

Press and hold the "music" & light mode button" about 10 seconds until the bell rings two times. All pairing codes will be deleted.

## CAUTION

1. Please do not open PCB or repair without professional guide in order to avoid break down of components.
2. Operating range may be affected by environmental factors and nearby interference sources.
3. Proper use will prolong life span of wireless doorbell effectively.

**⚠ WARNING:** This product contains a Button Call Battery. A swallowed Button Call Battery can cause internal chemical burns leading to death in as little as two hours. Dispose of used batteries immediately. Keep new and used batteries away from Children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention. Do not mix with used other types of batteries.

## FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Please note that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## FCC INSTRUCTIONS FOR A CLASS B DIGITAL DEVICE OR PERIPHERAL

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.