


# DC POWER CEILING FAN REMOTE CONTROL MANUAL

## LEARNING PROCESS

**NOTE:** The Hand Held Remote Control System is equipped with a learning frequency function which has code combinations to prevent potential interference from other remote units.

**Step: 1.** Factory would be installed the 3V, CR2032, 1pc Lithium battery before delivery. So just take the battery isolated film out. Within 30 seconds of turning the Receivers AC power ON. Press the transmitter's "LEARN" button.

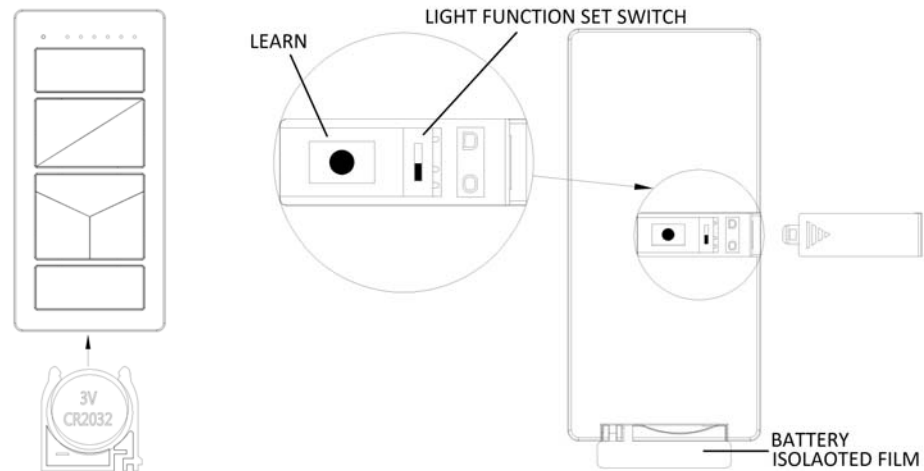

**Step: 2.** Hold the "LEARN" button for over 5 seconds, once the receiver has detected the frequency, the receiver will make sound, Bi Bi, twice. This will indicate the receiver has learned the frequency that was previously selected on the transmitter.

**NOTE:** After the AC power is on, do not press any other button on the transmitter before pressing the "LEARN" button, Because doing so will cause the procedure to fail.

After completing the steps above, you should be able to operate the ceiling fan and light. If the fan is not responding to the transmitter, please turn the power off to the receiver. And repeat step 1 and 2.

## LIGHT FUNCTION SWITCH

For fans with dimmable bulbs, slide the "Light Function" switch (O/D) to the position marked "D". If you are using non dimmable bulbs slide the "Light Function" switch to the "O" position

**NOTE:** Remove the battery if not used for long periods of time to prevent damage to the hand held remote.

## FUNCTIONS OF TRANSMITTER

### 1. FAN SPEED control:

Press fan speed increase or decrease button to turn on ceiling fan and set up fan speed.

The LED indicators, on right position of transmitter, will flash for showing fan speed as pressing the button. For example 6pcs are on, it is at high speed. 1pc is on for lowest fan speed.


The LED indicator, on left position of transmitter, will flash as pressing any button. If you press button and it is off, please change and use new battery.

### 2. FAN OFF: Turn off ceiling fan.

### 3. FAN TIMER: When the fan turned on.

1hr : Setting up that the ceiling fan will turn off after 1 hour automatically. The 1pc LED indicator on right top position of transmitter, will flash as pressing the button.

3hr : Setting up that the ceiling fan will turn off after 3 hours automatically. The 3pcs LED indicators on right

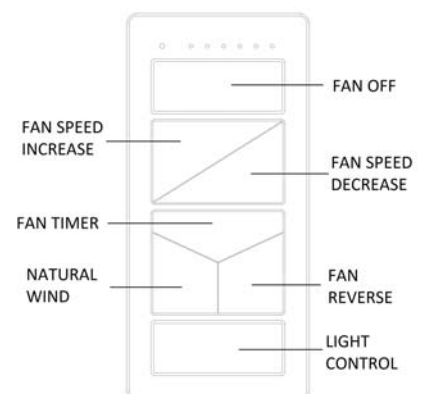

top position of transmitter, will flash as pressing the button.

6hr : Setting up that the ceiling fan will turn off after 6 hours automatically. The 6pcs LED indicators on right top position of transmitter, will flash as pressing the button.

Press FAN OFF button can cancel fan timer setting.


4. FAN REVERSE:-Hold this button 2 seconds to set fan wind direction up or down.
5. NATURAL WIND: Fan speed will modulate to simulate a natural breeze.
6. LIGHT CONTROL:

ON/OFF- Press and release immediately to turn on or off the light

DIMMER- Press and hold on to dimmer or brighten the light. (For the tungsten bulb and "light function select switch" is at D position.)

Remark: These functions will update as per order.

### Installation of transmitter wall mount holder with two screws.

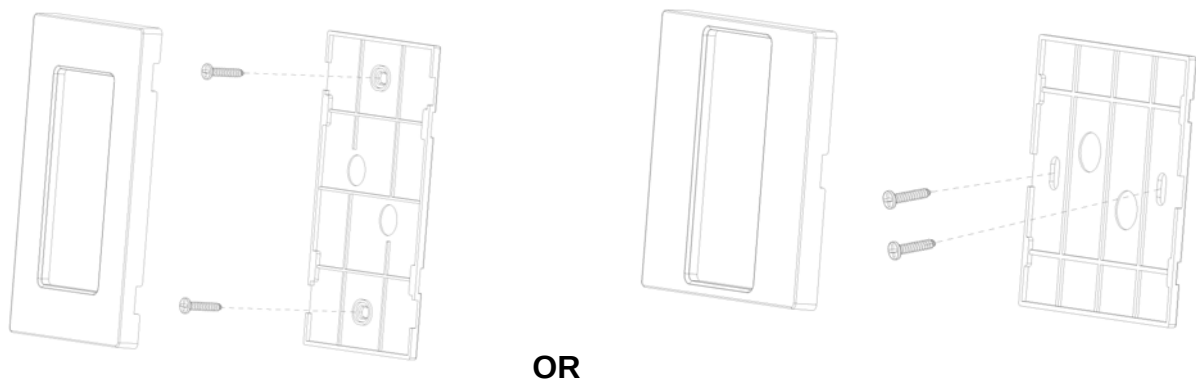

Remark: Factory use one option for accessory before delivery.

### To assure continued FCC compliance:

#### FEDERAL COMMUNICATIONS COMMISSION INTERFERENCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

--Reorient or relocate the receiving antenna. --Increase the separation between the equipment and receiver. --Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. --Consult the dealer or an experienced radio/TV technician for help.

#### FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTE 1:** Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.