

NAUTICA

UCCSP08

WIRELESS SPEAKER



Thank you for purchasing an original
**Nautica Wireless Speaker
UCCSP08**

You are getting a high quality product that's built to combine
technology and design for your everyday use.


Please read the below info carefully to get the most out of your
new product.

WHAT'S IN THE BOX

PORTABLE WIRELESS
SPEAKER1.64 FT / 50 CM
MICRO USB
CABLE

USER'S MANUAL

HOW TO USE

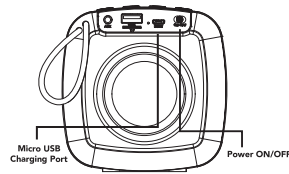

BLUETOOTH PAIRING

The speaker will automatically be in Bluetooth pairing mode once
powered ON. Now that your Nautica Wireless Outdoor Speaker is
searching for a Bluetooth device to pair with, locate "UCCSP08" on
your device among available Bluetooth connections.

CHARGING

For the best experience, it is
recommended to charge the unit
before first use. Plug the
micro-USB end of the included
USB rechargeable cable into the
charging port. Plug the other end
into a USB port on your computer
or other devices made for USB
charging. Red LED light and RGB
light illuminates indicating that the
device is being charged. It needs
up to 1 hour to complete charging.
Once the speaker is fully charged,
red LED light would turn OFF.

Micro USB
Charging Input

TWS FUNCTION DESCRIPTION

1. Please purchase 2 Bluetooth speaker if you want to use TWS function.
Turn on one speaker, connect the speaker via Bluetooth to your device via
before steps.
2. Turn on both speakers then perform a long press on the "+" button on
both speakers. Upon completion, you will hear a tone indicating that the
devices are connected in TWS mode.
3. To disconnect the speaker from TWS, long press "+" button on the first
speaker.
You will hear a tone sound, the devices are disconnected from TWS
mode.
To connect TWS again repeat the steps above.

TECHNICAL SPECIFICATIONS

Bluetooth Version	5.0
Channel	Mono speaker
Impedance	4 Ω
Input	5V / 1A
Output Power	15 W PMPO
SNR	≥85dB
Speaker unit	2.25"/57mm diameter
Battery Capacity	1200mAh
Play Time	Up to 7 hours
Charging Time	2 hours
Charging Port	Micro USB
Material	ABS plastic
Product Dimensions	4"10" X 3"10" X 4"10" inc
Product Weight	0.580 lbs / 263 g

SAFETY AND MAINTENANCE

Before you use the device, read the following precautions carefully to
ensure optimal product performance.

Keep the speaker away from heat sources, direct sunlight, humidity,
water and other liquids, dust and lint.

Do not expose the unit to extremely high or low temperature as this will
shorten the life of electronic devices, destroy the battery, or distort
certain plastic parts.

Do not dispose of the unit in fire as it will result in an explosion.
Batteries (battery pack or batteries installed) shall not be exposed to
excessive place, such as direct sunshine, fire etc.

Avoid dropping the unit onto the floor. The internal circuit might get
damaged. Do not use the speaker if it has been dropped or damaged.

Please do not disassemble, repair, or transform the product. Repairs to
electrical equipment should only be performed by a qualified
electrician. Improper repairs may place the user at serious risk.

Do not insert objects into any of the openings.

Do not use this speaker for any other purpose than intended.

Do not use abrasive cleaning solvents to clean the unit.

Do not expose the unit to contact with sharp objects as this will cause
scratches and damage.

WARRANTY INFORMATION

We do our best to make sure that this product is free from defects in
materials and workmanship for a period of 1 year.

The following conditions must be met for your warranty claim to be
approved.
You must have purchased the product from a Nautica or Technofash-
ion authorized dealer.

You must provide proof as to the date of purchase from the Nautica
or Technofashion authorized dealer.

You must have used the product only as intended and in accordance with
the product's care instructions.

Within 12 months after the purchase, in case of the product is
determined to be defective (at the date of original purchase) due to
improper materials or workmanship, you are entitled to free repair or

exchange of goods. The product should be returned to
Technofashion. The warranty does not cover defects caused by
third-party modifications, repairs, or replacement parts.

Punctures, scratches, normal wear and tear and the natural
breakdown of colors and materials over extended time and use are
not warranted. Warranty applies to the USA only.

We will make every effort to replace limited edition or discontinued
products but cannot guarantee availability for replacement.

Any limited edition or discontinued product still under its applicable
warranty that cannot be replaced with an identical product will be
replaced with the equivalent model based on availability.

We may make changes to products and designs in the time you
purchased your product and submitted a warranty claim.

Products repaired or replaced under this warranty may or may not
incorporate these changes.

SUPPORT

For any questions, email us at
support@technofashion.com

FCC ID: 2A280-N00030

This device complies with Part 15 of the FCC Rules. Operation is
subject to the following two conditions: (1) this device may not cause
harmful interference, and (2) this device must accept any interference
received, including interference that may cause undesired operation.

This device has been tested and found complying with the limits for a
Class B digital device, pursuant to Part 15 of the FCC Rules. These
limits are designed to provide reasonable protection against harmful
interference in a residential installation. This device generates, uses,
and can radiate radio frequency energy and, if not installed and used
in accordance with the instructions, may cause harmful interference to
radio communications.

However, there is no guarantee that interference will not occur in a
particular installation. If this device does cause harmful interference to
radio or television reception, which can be determined by turning the
device off and on, the user is encouraged to try to correct the
interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to
which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
Changes or modifications not expressly approved by the party
responsible for compliance could void the user's authority to operate
the equipment.

NAUTICA

designed, manufactured, distributed by
TECHNOFASHION

© Technofashion, Inc. All Rights Reserved.
Designed in USA. Made in China.

