

# 技术要求:

- 1.材质:双铜128G
- 2.规格:单页尺寸85x110mm
- 3.性能要求:风琴折,6P5折,双面印刷 内容色号:PANTONE 431C

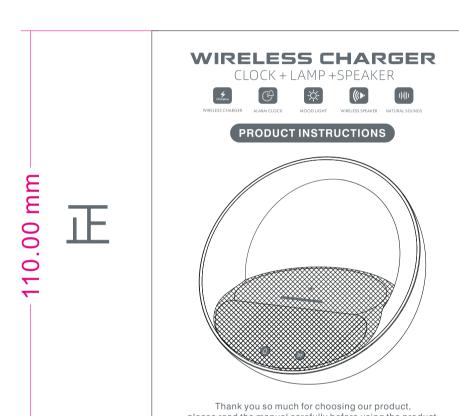

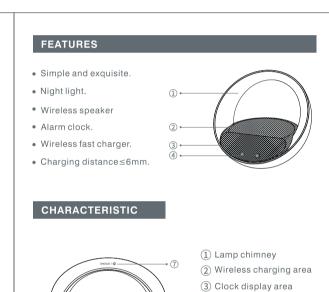


# 1. Connect the USB port of the USB data cable to the power adapter and the Type-C portWireless charger. The charging indicator light [ <code>DC</code>] n the clock display area flashes and enters the charging state. The indicator light stays on when fully charged. 2. Place the required wireless charging device in the charging indication area of this product, and the clock will display The regiona charging indicator light [ / ] is always on to enter the charging state and the indicator light goes out when fully charged. NIGHT LIGHT FUNCTION

 
- Touch the first gear of the switch to start the light,
- and the light brightness is 30%. Touch switch second gear, light brightness is 70%.

HOW TO OPERATE

- Touch switch third gear, marquee.
- Touch the fourth position of the switch to turn off the lights.
  - Turn on the lights in sequence.



# BUTTON FUNCTION

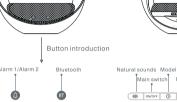 

### HOW TO SWITCH 12/24 HOURS

- Short press [ 🕓 ] 3 times, the clock display area 12/24 starts to flash and enters the setting state. • Short press [+/-] to switch between 12/24 hours.  $\bullet$  Long press [  $\bigcirc$  ] to save the current settings and return to the time

### HOW TO SET THE CLOCK

- Short press [ 🕓 ] in the clock display area, the clock starts to flash, and enters the clock setting state.
- Short press [+] to increase the number Short press [ — ] to decrease the number. • Short press [()] again to switch to the minutes, the minutes will start to flash and enter the minute setting state. Short press [ + ] to increase
- the number, Short press [ ] to decrease the number • Long press [ ( ) ] to save the current settings and return to the time

### HOW TO SET AN ALARM

- In normal clock display mode: Alarm setting method 1
- Long press the [ 🚳 ] alarm icon, clock display area, alarm 1 [ 🌗 ] icon and clock start Flashes and enters the alarm 1 clock setting s Short press [ + ] to increase the number, short press [-] to decreas
- to flash and enter the minute setting state. Short press [ + ] to
- increase the number, short press [ ] to decrease the number. • Long press twice [ □ ] clock display area, alarm 2 [ 2] icon and
- clock start Flashes, entering the alarm 2 clock setting state. The setting method of alarm 2 is the same as that of alarm 1. Long press [ 🕓 ] to save the current settings and return to the time

- In normal clock display mode: Alarm setting method 2
- Short press [ ] 4 times, the clock display area, the alarm 1 [ ◀ ] ] icon and the clock start to flash, and enter the alarm 1 clock setting state Short press [ — ] to increase the number, short press [ — ] to
- Short press [ ⊙ ] again to switch minutes, the minutes will start to flash and enter the minute setting state. Short press [ →] to increase the number, and short press [—] to decrease the number. • Short press the [()] clock display area again, the Alarm 2 [42] icon and the clock start to flash, and enter the Alarm 2 clock setting state. The setting method for Alarm 2 is the same as Alarm 1. • Long press [©] to save the current settings and return to the time

### Open / close 🚳

### Wake function

When you set the alarm, the lights will automatically turn on slowly from dark to bright half an hour in advance. For example, the alarm clock is set to 7 o'clock, and the lights slowly turn on from dark to bright at 6:30.

• When the alarm rings, short press [SNOOZE / ☼] to snooze. The snooze duration is 5 minutes.clock, you can snooze 4

• When the alarm clock enters the snooze state, the [ Z ] icon is displayed on the screenThe area flashes. • If the snooze is not over, touch and hold the night light switch to cancel the snooze state.



- Short press [ ||||||] to select the sound source.
- Alarm 2 sound source setting
- Short press [||i|||] to select the sound source. Short press the alarm button [ 🔘 ] 3 times. In the clock display area, the alarm icon [42] flashes 3 times and turns off, indicating that the sound source has been set successfully.
- There are 7 sound sources (sleeping fire wind chimes bells birds - ocean - streams - natural sounds of electric fan breeze).

### ADJUST SCREEN BRIGHTNESS

• Short press [ \*• ] to adjust the clock screen brightness. High brightness - medium brightness - low brightness - off to adjust the screen brightness in sequence.

• Short press [ ON/OFF] to turn on and off the machine

to restore to factory settings.

### HOW TO USE WIRELESS SPEAKERS

Long press the Bluetooth switch [ ), there will be a prompt sound, he Bluetooth function is turned on, and the clock display area is Bluetooth The icon  $[egin{array}{c} eta T \end{array}]$  flashes, indicating that it is ready for pairing At this time, turn on the Bluetooth function of your phone. In the Bluetooth device, search for the Bluetooth speaker and the word "S11" appears. Click to select the "S11" device. Name;

(4) Function button

(5) Output Interface

6 Input interface

7) Touch night light switch

8 Silicone foot pads

Mobile phone bezel

automatically enters the pairing state. After the connection is successful, there will be a prompt sound. Long press [ 📵 ] again to turn off Bluetooth.

### When the speaker is playing:

• Short press [+] to increase the volume, long press [ + ] to switch to the next song. • Short press [ — ] to reduce the volume, long press [ — ] to switch to the previous song. • Short press [ 1 ] to pause/play, • Double-click [ a ] to disconnect Bluetooth and re-search.



### HOW TO USE NATURE SOUNDS

- Short press [ |||||] to turn on the natural sound, long press [ |||||] to turn off the natural sound.
- When natural sound is on:
- ullet Short press [ + /-] to adjust the volume • Short press [ ||||||] to cycle through the natural sounds of sleep fire -wind chimes-clock-birds-ocean-stream-electric fan breeze
- Double click [ ||||| ] to start flashing in 30 minutes and enter the countdown setting. Short press [ ||||| ] to cycle through 60-90-30. After 3 seconds without any operation, the countdown starts. The clock display area displays the remaining time of the countdown. After the countdown is over, a natural sound automatically
- Automatically close. If you want to cancel the countdown before the countdown is over, double-click [ |||||| ] to exit the countdown.

### APPLICABLE DEVICE

his product supports fast wireless charging, which complies with the QI wireless charging standard; it realizes short-distance wireless power transmission through magnetic induction. **This device** supports all wireless charging devices that meet the QI standard. When using a 5V output adapter , Wireless charging supports 5W load. When using an adapter that meets QC2.0 and above standards, the wireless charging supports 10W load; Support overcharce protection (9V) and overcurrent protection (2A).

- temperature places for a long time
- Do not charge in places too close to magnetic cards, magnetic
- recording media, and precision instruments. Do not disassemble or modify this product.
- Do not touch the AC adapter with wet hands.

by one or more of the following measures:

- Keep this product away from water or other liquids.
- If you want to clean the product, please disconnect the power. Product working environment temperature range: -20~45°C.

# FCC Warning Statement Changes or modifications not expressly approved by the party

- sponsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference
- Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver. -- Connect the equipment into an outlet on a circuit different from that -- Consult the dealer or an experienced radio/TV technician for help.

- nplies with part 15 of the FCC Rules. Operation is narmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- RF Exposure Statement (Bluetooth) The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition

## RF Exposure Statement (Wireless Charger)

equipment should be installed and operated with minimum distance of 20cm the radiator your body.

### WIRELESS CHARGING SPECIFICATIONS

- Material:Imported ABS+PC+hardware
- Input:DC5V/3A 9V/2A Charging efficiency:75%
- Power:5W/7.5W/10W/15W
- Battery: 2400mAh Product size:220x176x187mm
- Charging port: Universal Type-C

### SPEAKER SPECIFICATIONS

- Bluetooth distance:10m
- Speaker power:4Ω5WX2 Speaker specifications:50mm