

YS3010-WT-GUNDAM-1

Instruction Manual

WALKIE TALKIE FEATURES

- USES 2 x 9 Volt Batteries
- ON/OFF SWITCH
- CODE KEY
- FLEXIBLE ANTENNA

HOW TO OPERATE

1. To put batteries into one pair of walkie talkie, open battery compartment and snap in a 9 Volt Battery to each walkie talkie. Replace the cover firmly.
2. To operate the walkie talkie, switch the power ON/OFF (fig.3) to "ON".
3. Press the "Push-to-talk" button for transmission and speak at a normal voice level into the speaker.
4. Release the "Push-to-talk" button for reception.
5. To send morse code signals, push the "Push-to-talk" button, press the morse code signal key and quickly release to send a dot (.) or hold the key longer to send a dash (-).
6. To turn off the unit, switch the Power On/Off (fig. 3) to "OFF"

CAUTION:

- Your transceiver set has been fully adjusted prior to shipment. Be sure not to touch the internal components other than replacing the batteries.
- When the sound becomes weak, it is time to change the battery.
- Always turn the power On/Off to the OFF position after use.
- Keep your set in a dry place.
- Take out batteries when walkie talkie are not in use
- Non-rechargeable batteries are not to be recharged.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Do not mix old and new batteries
- Replacement of batteries must be done by an adult.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries
- Only batteries of the same or equivalent type as recommended are to be used

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modification could void the user's authority to operate the equipment.