



SC-1425WSW
2.1CH SOUND BAR



USER'S MANUAL

Table of Contents

Getting Started	3
1. Warning	3
2. Important Safety Instructions	4
3. Preparation for Use	5
4. Important Notes	6
5. Soundbar Controls and Connections	7
6. Remote Control	8
7. Remote Control Battery Replacement	9
Operation Instructions	10
1. Setting the Soundbar	10
2. Pairing the subwoofer	10
3. Pairing Mode	11
4. AUX Mode	12
4. USB Mode	12
5. HDMI Mode	12
6. Optical Mode	12
7. FM Mode	13
Aux-in / Optical / HDMI(ARC) Connection	14
Troubleshooting	16
Care and Maintenance	16
Package contains	16
Warranty	17
FCC Statement	17

GETTING STARTED

Warning



Caution:

To reduce the risk of electric shock, do not dismantle the product and do not expose the apparatus to rain or moisture. No user-serviceable parts inside. Refer servicing to qualified personnel only.



The lightning flash within an equilateral triangle is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute an electric shock to a person or persons.



Important! This symbol alerts you to read and observe important warnings and instructions on the unit or in this manual.

Notice:

This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

1. To prevent possible hearing damage, do not listen at high volume levels for long time periods or a sudden high volume level.



2. Never use the device unsupervised! Switch off the device whenever you are not using it, even if this only for a short while.

3. The appliance is not intended to be operated by means of an external timer or separate remote control system.

4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

5. Before operating this system, check the voltage of this system to see if it is identical to the voltage of your local power supply.

6. The unit should not be impeded by covering the ventilation opening with items such as newspaper, table-cloths, curtains etc. Make sure that there are at least 20 cm of space above and at least 5 cm of space on each side of the unit.
7. The apparatus must not be exposed to dripping or splashing and that objects filled with liquids, such as vases, must not be placed on the apparatus.
8. To prevent fire or shock hazard, do not expose this equipment to hot places, rain, moisture or dust.
9. Do not locate this unit near any water sources e.g. taps, bathtubs, washing machines or swimming pools. Ensure that you place the unit on a dry, stable surface.
10. Do not place this unit close to a strong magnetic field.
11. Do not place the unit on an amplifier or receiver.
12. Do not place this unit in a damp area as the moisture will affect the life of electric components.
13. Do not attempt to clean the unit with chemical solvents as this might damage the finish. Wipe with a clean, dry or slightly damp cloth.
14. When removing the power plug from the wall outlet, always pull directly on the plug, never pull on the cord.
15. Depending on the electromagnetic waves used by a television broadcast, if a TV is turned on near this unit while it is also on, lines might appear on the TV screen. Neither this unit nor the TV is malfunctioning. If you see such lines, keep this unit well away from the TV set.
16. The mains plug is used as the disconnect device, the disconnect device must remain readily operable.

Important Safety Instructions

1. Read these instructions. Keep these instructions. Follow all instructions. Heed all warnings.
2. Do not use this apparatus near water.
3. Clean only with dry cloth.
4. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
5. Do not install near any heat sources such as radiators, heaters, stoves, or other apparatus (including amplifiers) that produce heat.
6. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, ask an

electrician to replace the obsolete outlet.

7. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles and the point where they exit from the apparatus.
8. Only use attachments/accessories specified by the manufacturer.
9. Unplug this apparatus during lightning storms or when unused for long periods of time.
10. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
11. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
12. The AC cord must not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on apparatus.
13. The AC plug is used as a disconnect device and it must remain readily accessible during intended use. In order to disconnect the apparatus from the AC power completely, the AC plug must be removed from the AC outlet completely.
14. The battery must not be exposed to excessive heat such as sunshine, etc.

NOTE: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

Preparation for Use

Unpacking and Set Up

- Remove the Soundbar from the carton and remove all packing material from the Soundbar. Save the packing material, if possible, in case the Soundbar ever needs to be serviced or transported. The original carton and packing material is the only safe way to pack your Soundbar to protect it from damage in transit.
- Remove any descriptive labels or stickers on the front or top of the cabinet. Do not remove any labels or stickers from the back or bottom of the cabinet.
- Place your Soundbar on a level surface such as a table, desk or shelf, convenient to an AC outlet, out of direct sunlight, and away from sources of excess heat, dirt, dust, moisture, humidity, or vibration.

Protect Your Furniture

This model is equipped with non-skid rubber 'feet' to prevent the product from moving when you operate the controls. These 'feet' are made from non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil based furniture polishes, wood preservatives, or cleaning sprays may cause the rubber 'feet' to soften, and leave marks or a rubber residue on the furniture. To prevent any damage to your furniture we strongly recommend that you purchase small self-adhesive felt pads, available at hardware stores and home improvement centers everywhere, and apply these pads to the bottom of the rubber 'feet' before you place the unit.

Power Source

This sound bar is designed to operate on normal AC power source. It works only under AC 110~240V, 50/60Hz. Don't attempt to operate the sound bar on any other power source. You could cause damage to the sound bar that is not covered by your warranty.

 
 
 
 
Important Notes

- This soundbar was especially developed for LED/LCD/Plasma TV's: It should not be used in combination with CRTTV's (Cathode Ray Tube TV's) in order to avoid image interferences.
- Safety and operating instruction manual should be retained for future reference.
- The apparatus should not be exposed to dripping, splashing or placed in a humid atmosphere such as a bathroom.
- Do not install the product in the following areas:
 - Places exposed to direct sunlight or close to radiators.
 - On top of other stereo equipment that radiate too much heat
 - Blocking ventilation or in a dusty area.
 - Areas where there is constant vibration.
 - Humid or moist places.
 - Do not place near candles or other naked flames.
- Operate the product only as instructed in this manual.
- Make sure the power cord is properly connected.
- For safety reasons, do not remove any covers or attempt to gain access to the inside of the product. Refer any servicing to qualified personnel.
- Do not attempt to remove any screws, or open the casing of the unit; there are no user serviceable parts inside. Refer all servicing to qualified service personnel.


Soundbar Controls and Connections

FUNCTIONS

Sound bar

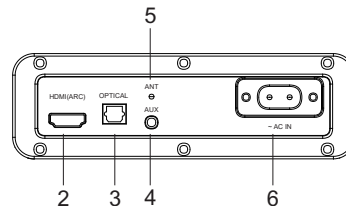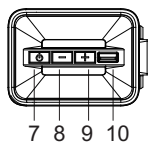


Subwoofer

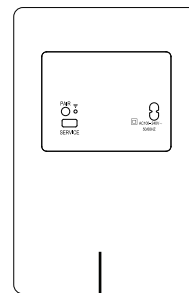 

1. LED INDICATOR
2. HDMI (ARC)
3. OPTICAL
4. AUX IN
5. ANT
6. ~AC IN
7. POWER/MODE
8. VOL-
9. VOL+
10. USB
11. SUBWOOFER

 
Remote Control

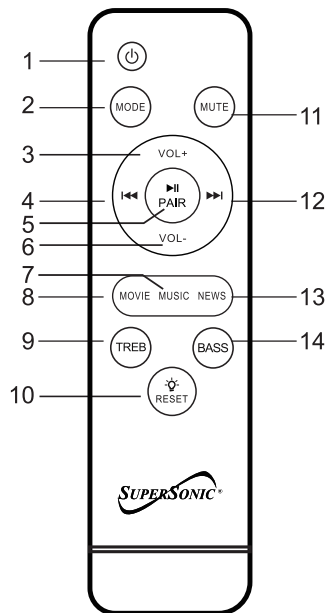


1. POWER
2. MODE
3. VOL+
4. PREV
5. PLAY/PAUSE/PAIR
6. VOL-
7. MUSIC
8. MOVIE
9. TREB
10. LIGHT ON OR OFF /RESET
11. MUTE
12. NEXT
13. NEWS
14. BASS

Remote Control Battery Replacement

 
Please insert the batteries as indicated below

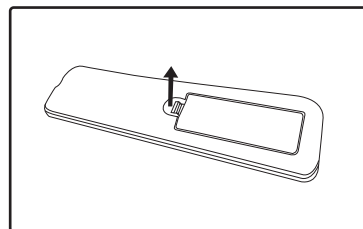

A: Remove the battery cover

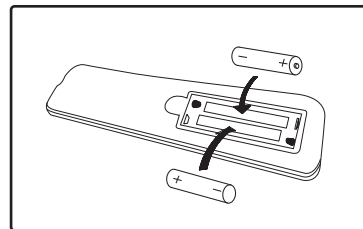 

 B: Insert 2 AAA batteries according to the markings inside battery slot

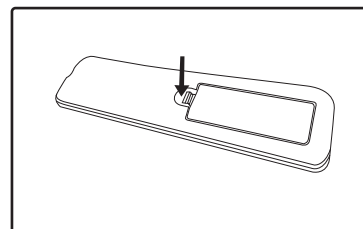

C: Close the battery cover

OPERATE INSTRUCTIONS

Setting the Soundbar

- 1) Plug the subwoofer cable into the SW port on the main soundbar.
Plug in the power cord and the indicator will lit up (stand by mode)
- 2) Switch on the soundbar by using power button on soundbar or by using STANDBY button on remote. After switching on, the default input mode will appear on display
- 3) Input modes can be changed by pressing the power button again or by using the INPUT button on remote

Below are the input modes:

Bluetooth-Aux in-Optical-HDMI (ARC)-FM

Note: USB input mode is not available in the source selection. It will get enabled only after inserting a compatible USB Drive (appears as US in display)

Pairing the subwoofer

This soundbar and subwoofer in the same gift box will be automatically pairing when it is on.

If there is no pairing,do as follows:

Pairing by ⑪ MUTE key on Remote Control:

1. Plug the soundbar and the subwoofer into the main socket at same time.
2. Press ⑪ STANDBY key to turn the soundbar ON after it has been connected to main socket. Then press ⑫ MODE key to set the soundbar in Bluetooth (BLUE) status (keep soundbar disconnected from any other Bluetooth).
3. Long press ⑪ MUTE key to pair the soundbar with the subwoofer. The red indicator light on the back of the subwoofer will stay solid if pair in successfully.
4. The soundbar and subwoofer will pair automatically after the first successful pair, even if they are switched off and on.



Manual Pairing

If the PAIR button on the back of the subwoofer is accidentally pressed, the subwoofer will proactively disconnect from the soundbar (the red indicator light on the back of the subwoofer will flash). Double-click the PAIR button on the back of the subwoofer to reconnect it to the soundbar (the red indicator light on the back of the subwoofer will stay solid).

If the play/pause button on the soundbar is accidentally long-pressed, the soundbar will proactively disconnect from the subwoofer (the red indicator light on the back of the subwoofer will flash). Long-press the play/pause button on the soundbar again, and when the word 'PAIR' displays, the soundbar will reconnect to the subwoofer (the red indicator light on the back of the subwoofer will stay solid).

Pairing Mode

- Connect

1. Plug in the power cord and the indicator will lit up (stand by mode)
2. Switch on the soundbar using power button and change the input mode to bluetooth.
3. Search for new Bluetooth device on your Bluetooth audio player (smartphone, tablet, computer). Choose the device named SC-1425WSW in the list of new devices detected and select it.
The LED light will stop flashing when the sound bar is paired successfully. You don't need to make this pairing procedure again the next time you connect the same Bluetooth player to the sound bar, it will be re-connected automatically

when it is in the neighborhood of the sound bar with Bluetooth function activated

Note: When unable to detect the Soundbar while pairing, please restart it and try pairing again

- Disconnect

Go to the Bluetooth settings of your Bluetooth audio player, select SC-1425WSW in the list of devices and choose the option «disconnect».
Note that if the sound bar is connected with a Bluetooth audio player, you need to disconnect it first from this player before you can connect it to another one.

AUX Mode

- 1) After switching on the soundbar, change to AUX input mode
- 2) Plug in the 3.5mm AUX cable to the AUX IN connector on the soundbar and start playing from the music device

USB Mode

- 1. Plug in the USB drive.
- 2. The music in the USB drive will play automatically and you can use the remote controller to control it.

HDMI/ARC Mode

- 1.The Soundbar supports HDMI with Audio Return Channel (ARC). If your TV is HDMI (ARC) compliant, you can hear the TV audio through your SoundBar by using a single HDMI cable (HDMI cable not provided).
- 2. Using a High Speed HDMI cable, connect the HDMI TV (ARC) connector on the soundbar to the HDMI (ARC) connector on the TV
 - The HDMI (ARC) connector on the TV might be labelled differently. For details, see the TV user manual.
- 3. On your TV, select source as HDMI (ARC) mode. For details, see the TV user manual

Optical Mode




- 1.Using an optical cable, connect the OPTICAL connector on the Sound-Bar to the OPTICAL OUT connector on the TV or other device.

FM Mode

Open the external antenna (as close to the window as possible). Press "MODE" to enter into "FM" mode, long press Pause button **⏸** on remote for FM Auto search. Search for previous FM channel (**⏮**). Search for next FM channel(**⏭**).

Speaker Specification	
Soundbar Rated Power	40W
Subwoofer Rated Power	40W
Power Input	AC 110-240V ~ 50/60Hz
RMS Power	80W
Input signal source	Optical,AUX terminal,Bluetooth,HDMI(ARC)
Dimensions for sound bar	800*92*68mm
Dimensions for subwoofer	180*295*280mm
ACCESSORIES:	Remote control, Audio line, AC cable, mountable screws, manual

   Aux-in / Optical / HDMI(ARC)

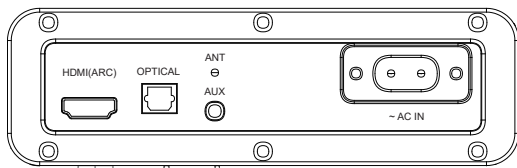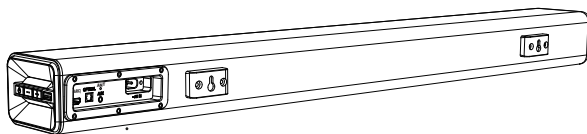

PC/MAC

TV

Mobile Device

Aux-in

Optical

OR

HDMI(ARC)

* Sold separately. Not included.

TV Audio Output : Optical
Digital Audio format : PCM



* Sold separately. Not included.

TV Audio Output : ARC
Digital Audio format : PCM



TV

TROUBLESHOOTING

ISSUES	PROBLEMS	SOLUTIONS
Sound	No sound from SoundBar speakers	Connect the audio cable from your SoundBar to your TV or other devices. However, you do not need a separate audio connection when the SoundBar and TV are connected through HDMI(ARC) connection. On the remote control, select the correct audio input.
	Distorted sound or echo	If you play audio from the TV through the SoundBar, make sure that the TV is muted. Restart the soundbar and try pairing again
Bluetooth	A device cannot connect with the SoundBar	You have not enabled the Bluetooth function of the device. See the user manual of the device on how to enable the function.
		The device is not correctly connected.
		The SoundBar is already connected with another Bluetooth device. Disconnect the connected device, then try again.
	Quality of audio play from a connected Bluetooth device is poor.	The Bluetooth reception is poor. Move the device closer to the SoundBar, or remove any obstacle between the device and the SoundBar.
	The connected Bluetooth device connects and disconnects constantly	The Bluetooth reception is poor. Move the device closer to the SoundBar, or remove any obstacle between the device and the SoundBar.

CARE & MAINTENANCE

After Using the Soundbar System

Set it to standby

Care and Cleaning

1. All care and cleaning operations should be carried out with the unit unplugged from the main power.
2. The surface of the unit can be cleaned with a barely damp cloth and then dried carefully.
3. Never use abrasives, abrasive cloths or chemical solvents.
4. Loudspeaker grilles can be cleaned carefully with a soft brush.

Package Contains

Sound Bar (1)
Subwoofer (1)
Aux In Cable (1)
AC cable (1)

Wall Mounting Brackets (2)
Wall Mounting Screws (2)
Wall Mounting Sponges (4)
Remote Control (1)
User Manual (1)

Warranty

Supersonic Inc. ("Supersonic") warrants this product to the original purchaser ONLY, to be free from defects in materials and workmanship under normal use, for ninety (90) DAYS from the date of original purchase. Proof of purchase (receipt) required. Please visit <https://www.supersonicinc.com/pages/warranty> for additional information.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. To maintain compliance with FCC's RF exposure guidelines, the distance must be at least 20 cm between the radiator and your body, and fully supported by the operating and installation configurations of the transmitter and its antenna(s).

材质：70G书写纸 黑白印刷 打骑马订

尺寸:100x140mm