

N14550: Quick Start Guide

Quick Start Guide  
N14550

In the box

14" Laptop

Quick start guide

Adapter

Buttons and ports

- 1 Charging indicator light
- 2 DC input
- 3 USB 3.0
- 4 Mini HDMI
- 5 USB type C (data only)
- 6 Camera
- 7 Power indicator light
- 8 Caps lock indicator light
- 9 Num lock indicator light
- 10 Function/Shortcut keys
- 11 Power button
- 12 USB 2.0
- 13 MicroSD card slot
- 14 3.5mm headphone jack
- 15 SSD slot
- 16 Touchpad
- 17 Dual speakers

Getting started

POWER ON: Press and hold the POWER button until the tablet turns on.  
LOCK: Briefly press the POWER button to lock the tablet.  
POWER OFF: Select **Start** > **Power** > **Shut down**.

Note: The device should be shut down through the Windows OS as shown above. However, if you need to force the device to shut down, press and hold the POWER button until the display turns off and the device shuts down.

Adapter  
DC charger port

Using the touchpad

After completing the Windows setup, the home screen will be displayed.

Click to see all the pre-installed apps.

The touchpad provides the functionality of a mouse. It has a touch sensitive surface that senses the motion and position of your fingers).

NOTE: Do not press down on the area in gray below, it is for touch commands only.

Scroll: Place two fingers on the touchpad and slide them to scroll in any direction on the page or program

Zoom: Place two fingers on the touchpad and then move them apart or closer to zoom-in or zoom-out

Switch program: Place three fingers on the touchpad and swipe to either side to switch between open windows and programs.

Function/Shortcut keys

To access the shortcuts of the Function keys, F1 through F12, press & hold the **Fn** button and select the desired Function key.

Windows 10 S Mode

Your laptop is shipped with Windows 10 S Mode which is a version of Windows 10 that's streamlined for security and performance, while providing a familiar Windows experience. To increase security, it allows only apps from the Microsoft Store, and requires Microsoft Edge for safe browsing.

For more info, visit <https://www.microsoft.com/en-us/windows/s-mode>

Switching out of S mode

To increase security and performance, Windows 10 in S mode runs only apps from the Microsoft Store. If you want to install an app that isn't available in the Microsoft Store, you'll need to permanently switch out of S mode. There's no charge to switch out of S mode, but you won't be able to turn it back on. To switch out of S mode follow the steps below.

1. On your PC running Windows 10 in S mode, open Settings > Update & Security > Activation.

Expanding the storage

You can expand the storage of your laptop (up to 1TB) by adding a SATA M.2 SSD (not included) into the slot on the bottom of the laptop.

Note: Make sure your laptop is shutdown while you are installing or removing the SSD.

SATA M.2 SSD (not included)

2. Find the "Switch to Windows 10 Home" or "Switch to Windows 10 Pro" section, then select "Go to the Store."

Note: Don't select the link under "Upgrade your edition of Windows." That's a different process that will keep you in S mode.

3. On the page that appears in the Microsoft Store (Switch out of S mode or a similar page), select "Get." After you confirm this action, you'll be able to install apps from outside the Microsoft Store.

Note: After installing the SSD it must be formatted. For instructions on how to format the SSD, please go to: <https://www.southtelem.com/en-us/laptops>

Legal information

FCC Part 15

This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: The dealer or an experienced radio/TV technician for help. Do not attempt to repair or modify this equipment.

Warning: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Standard USB cables must be used with this unit to ensure compliance with the Class B FCC Rules.

Information Regarding Exposure to Radio Frequency Energy

Your device is designed and tested to meet the requirements for a Class B digital device under Part 15 of the FCC Rules. The device is designed to limit the exposure to RF energy up to the Federal Communications Commission of the United States (FCC). Information on your device is available with the FCC and can be found under the Display Group website of <http://www.fcc.gov/oet/rfsafety> after searching for the FCC ID of your device, which can be found on the back of the device. If you are pregnant, please consult your physician for additional information on the use of this device. If you are pregnant, please consult your physician for additional information on the use of this device. If you are pregnant, please consult your physician for additional information on the use of this device. If you are pregnant, please consult your physician for additional information on the use of this device.

IC Statement

This device complies with Industry Canada license-exempt RSS (Standard) Operation is subject to the following conditions:

- (1) This device may not cause interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation of the device.

Revised equipment with IC certification requires the user to follow the following instructions:

- (1) This device must be used in accordance with the instructions, a copy of which is available on the back of the device.
- (2) This device must be used in accordance with the instructions, a copy of which is available on the back of the device.

ADDITIONAL IC

- (1) Cet appareil ne cause pas d'interférence.
- (2) Cet appareil doit accepter toute interférence reçue, y compris celle susceptible de provoquer un fonctionnement indésirable de l'appareil.

Battery Disposal & Recycling

This device contains a lithium-ion battery. The battery must be recycled or disposed of properly. Contact your local waste management office for information on battery recycling or disposal.

5-Year Limited Warranty

Territory: United States/Canada

LIMITED WARRANTY TO ORIGINAL CONSUMER

This product (including any accessories included in the original packaging) is warranted against defects in materials and workmanship for a period of five (5) years from the date of purchase. This warranty is limited to the original consumer purchaser against defects in materials and workmanship. It does not cover damage caused by misuse, accident, fire, flood, theft, or any other cause outside the control of the manufacturer. The warranty is void if the product is not used in accordance with the instructions. For more information, please visit our website at [www.southtelem.com](http://www.southtelem.com).

Select Service Request and RMA card to begin your inquiry

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products returned damaged as a result of shipping will require you to file a claim with the carrier.

Warranty service not provided

The warranty does not cover damage resulting from liquid damage, misuse, unauthorized modification, or any other cause outside the control of the manufacturer. The warranty is void if the product is not used in accordance with the instructions. For more information, please visit our website at [www.southtelem.com](http://www.southtelem.com).

DESIGNED AND MANUFACTURED BY SOUTHERN TELECOM INC., BROOKLYN, NY 11220

© 2018 Southern Telecom Inc.

Patented by Southern Telecom Inc.

All other trademarks and trade names are those of their respective owners.

Images included and/or used may differ from the actual product.