

VICTROLA™



THE LIBERTY

MODEL: VTA-75 INSTRUCTION MANUAL

PLEASE READ THIS INSTRUCTION MANUAL CAREFULLY
BEFORE USE AND KEEP IT FOR FUTURE REFERENCE.





The lightning flash with arrowhead within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

CAUTION

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**

**CAUTION: TO PREVENT
RISK OF ELECTRIC SHOCK,
DO NOT REMOVE COVER (OR BACK).
NO USER-SERVICEABLE PARTS INSIDE.
REFER SERVICING TO QUALIFIED
SERVICE PROFESSIONAL.**



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION: DO NOT REMOVE THE EXTERNAL CASES OR CABINETS TO EXPOSE THE ELECTRONICS. NO USER SERVICEABLE PARTS ARE INSIDE. USE OF CONTROLS, ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

CAUTION: THE PRODUCT SHALL NOT BE EXPOSED TO DRIPPING OR SPLASHING LIQUIDS AND NO OBJECT FILLED WITH LIQUIDS, SUCH AS VASES, SHALL BE PLACED ON THE PRODUCT. DO NOT INSTALL THIS EQUIPMENT IN A CONFINED SPACE SUCH AS A BOOK CASE OR SIMILAR UNIT.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.

12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



13. Unplug this apparatus during lightning storms or when unused for long periods of time.

14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

- Do not expose this apparatus to drips or splashes.
- Do not place any objects filled with liquids, such as vases, on the apparatus.
- Do not install this apparatus in a confined space such as a book case or similar unit.
- The apparatus draws nominal non-operating power from the AC outlet with its POWER switch in the OFF position.

BEFORE USE

Read this before operating the unit.

- As the unit may become warm during operation, always leave sufficient space around the unit for ventilation.
- The voltage supplied to the unit should match the voltage as printed on the rear panel. If you are in any doubt regarding this matter, consult an electrician.
- Choose the installation location of your unit carefully. Avoid placing it in direct sunlight or close to a source of heat. Also avoid locations subject to vibrations and excessive dust, heat, cold or moisture.
- Do not place the unit on an amplifier/receiver.
- Do not open the cabinet as this might result in damage to the circuitry or electrical shock. If a foreign object should get into the unit, contact your dealer or service company.
- When removing the power plug from the wall outlet, always pull directly on the plug, never yank the cord.
- Do not attempt to clean the unit with chemical solvents as this might damage the finish. Use a clean, dry cloth.
- Keep this manual in a safe place for future reference.

DO NOT MOVE THE UNIT DURING PLAYBACK


During playback, the record rotates at a high speed. DO NOT lift or move the unit during playback/ Doing so may damage the record or unit.

WHEN MOVING THE UNIT

When changing the unit's location, or packing the unit for moving, be sure to remove the record. Moving this unit with the record or disc loaded may result in damage to this unit. If the unit is to be packed and moved a great distance, it is also advisable to remove the legs when transporting.

HANDLING VINYL RECORDS

- Do not touch the record's grooves. Only handle records by edges or label. Make sure your hands are clean. Skin oils from even clean hands can leave a residue on the record surface that will gradually deteriorate the quality of your record.

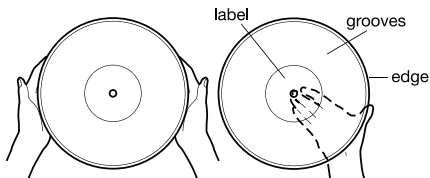

- Keep your records away from dust. Store in a cool, dry place.
- Keep records in sleeves and jackets when not in use to avoid dust and scratches.
- Store records upright on edges. Records stored horizontally will bend and warp.
- Do not expose records to direct sunlight or high humidity and temperature. Long exposure to high temperatures will warp records.
- Do not store records in the trunk of a car.
- Store records in an area with a stable temperature and low humidity.
- Should the record become dirty, gently wipe surface in a circular motion, using a soft anti-static cloth.



HOW TO OPEN/CLOSE THE TURNTABLE COVER




TO OPEN:

1. Unclasp the buckles on either side of the unit.
2. Lift up the turntable cover all the way until it stops.
3. Secure the hinge on the right side of the unit so that the cover will remain open.
Caution: Make sure you don't pinch your fingers when securing the hinge.

TO CLOSE:

1. Slightly lift the cover and pull the hinge.
2. Lower the cover until it closed, then re-clasp the buckles on the side of the unit.
Caution: Make sure you don't pinch your fingers when closing the cover.

TURNTABLE PARTS

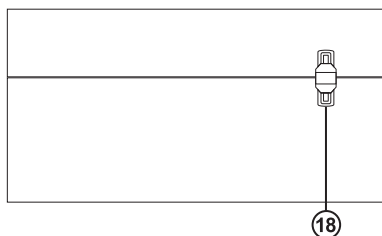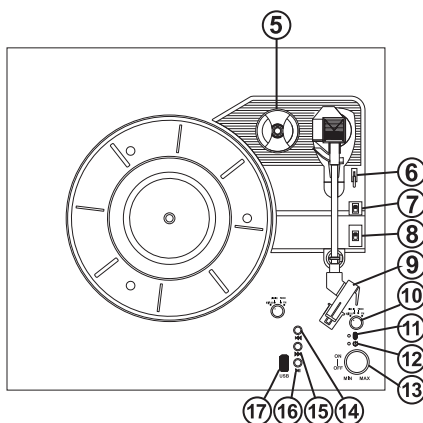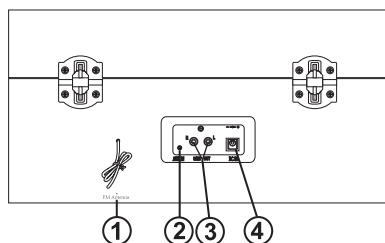

1. FM Antenna
2. AUX IN
3. DC 5V Jack
4. RCA Line Out Jack
5. 45 RPM Adaptor
6. Lift Lever
7. Speed Selector
8. Auto-Stop Switch
9. Turntable Cartridge
10. Function Knob
11. Bluetooth LED Indicator
12. Power LED Indicator
13. Volume/Power Knob
14. PREVIOUS Button (FM/USB)
15. NEXT Button (FM/USB/DEL)
16. PLAY/PAUSE/RECORD Button
17. USB Port
18. Metal Bracket (On Both Sides)


ASSEMBLY INSTRUCTIONS - ATTACHING THE LEGS

Carefully turn the unit over and place it onto a flat, smooth surface. Line up the screws on the legs/feet to the metal mounting brackets on the bottom of the unit. Take each leg/foot and screw it into the metal brackets until they are tightly secure. When finished, turn over the unit and make sure it stands firmly on a flat surface.


NOTE: There are two legs options: Long Wood Legs (4x) and Short Feet (4x).

NOTE: When the legs/feet are installed properly, they should be at an angle, as shown.

PARTS INCLUDED

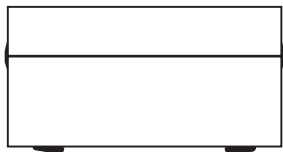

Unit with Metal Brackets

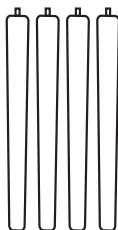


Long Wood Legs (4x)




Short Feet (4x)


STAND ASSEMBLY

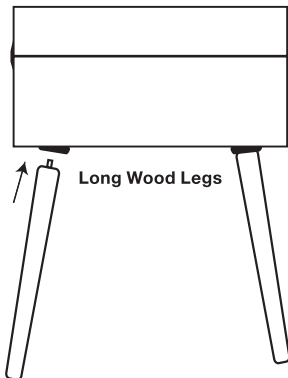

Long Wood Legs

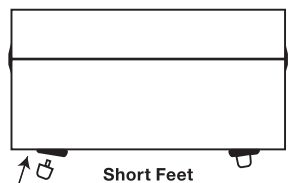

Short Feet

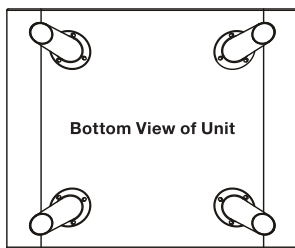

LISTENING TO THE RADIO

1. Turn the unit ON by switching the POWER knob.
2. Set the FUNCTION KNOB to the FM position.




3. Long press the ►|| button to auto-search the radio stations. Each successful station will be saved automatically the next time the FM Radio function is used.
4. Simply press the ►►| to listen to the next station.
5. Simply press the |◄◄ to listen to the previous station.
6. Turn the Volume knob to adjust the volume.
7. In FM mode, the LED Indicator will light up RED when a station signal is strong.

NOTE: If the station reception is poor, extend and move the FM antenna until you receive a station clearly.

LISTENING TO AN EXTERNAL DEVICE VIA RCA OUT


LINE OUT Jacks are on the back of the unit.

For amplifier device listening, first reduce the volume level to minimum. Insert the white and red plugs on the RCA cable (not included) into the back of the unit, then insert the opposite end into your amplifier device. Be sure to connect the white plug into the white jack and the red plug into the red jack.

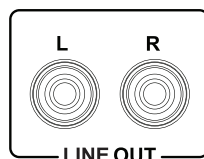


LISTENING TO A VINYL RECORD

1. Turn the unit ON by switching the Power Knob.
2. Set the Function Knob to the PHONO position.
3. Remove the White Needle Guard from the stylus.

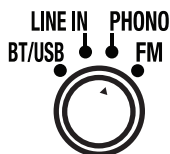


4. Select the record speed.


NOTE: When playing a 45 RPM record, use the included 45 adaptor.

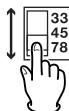

5. Place a record on the platter.
6. Gently push the Tone Arm Lock to the right to release the Tone Arm.

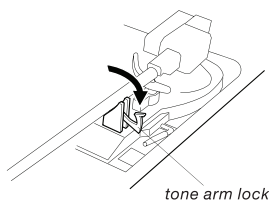


7. Raise the Lift Lever to lift the Tone Arm off the holder.

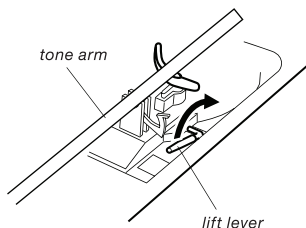


LISTENING TO A VINYL RECORD (CONTINUED)

8. Move the Tone Arm to the edge of the record (or the starting point of a track). The turntable will begin to turn.

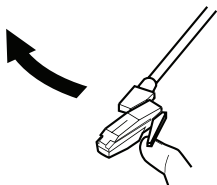




9. Gently lower the Tone Arm using the Lift Lever. You can lower the Tone Arm manually if the Lift Lever has not been raised.

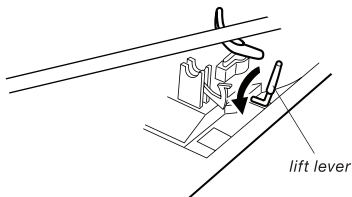

10. Turn the Volume Knob to adjust the volume.

11. When playback has finished, lift the tone arm using the Lift Lever and return it to the Tone Arm Holder. The record will stop rotating.

NOTE: The record will begin to spin only when the tone arm is moved over the record if the Auto Stop is turned on. If the **AUTO AND MANUAL STOP SELECTION SWITCH** is turned **ON**, the record will stop automatically when finished. If this switch is at **OFF** position, record will continue to spin.

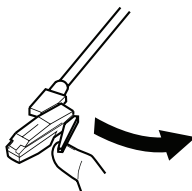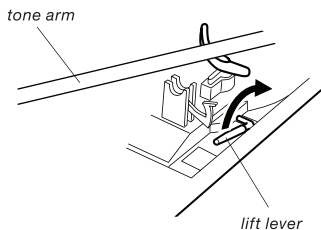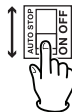


HOW TO REPLACE THE TURNTABLE NEEDLE

The stylus should last about 50 hours under normal use. It is recommended that the stylus be replaced as soon as you notice a change in sound quality. Prolonged use of a worn-out stylus may damage the record. Wear and tear on the stylus will be accelerated when playing 78 RPM records. The higher speed of 78 RPM records can wear the stylus faster.

REPLACEMENT NEEDLE # ITNP-S1


REMOVING THE STYLUS FROM THE CARTRIDGE

1. Set a screwdriver at the tip of the stylus and push down to the direction “A”.
WARNING: When applying force to stylus, too much may damage or break the stylus.
2. Pull the stylus out toward the direction “B”.

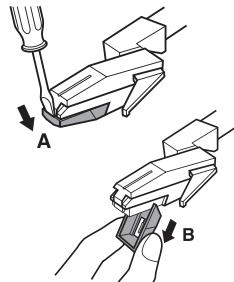

INSTALLING THE STYLUS

1. Hold the tip of the stylus and insert the other edge by pressing toward direction “C”.
2. Push the stylus up toward direction “D” until it locks at the tip.

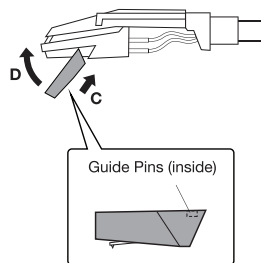


CAUTION

- Do not bend the stylus.
- To avoid injury, do not touch the needle.
- Turn off the unit before you replace the needle.
- Keep out of reach of children.
- Handle with care, as the stylus is delicate. Use of a bent or broken stylus may damage the record and cause the turntable to malfunction.
- Do not expose the stylus to extreme heat.

LISTENING TO AN EXTERNAL DEVICE VIA BLUETOOTH

1. Turn the unit ON by switching the POWER knob.
2. Set the FUNCTION Knob to the BT/USB position.
The Bluetooth LED Indicator will begin to flash Blue.

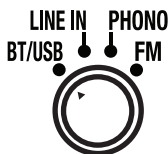


3. Ensure that the Bluetooth function is activated on your external device.
The device “**Victrola Liberty**” will appear on your device’s search list.
4. Select “**Victrola Liberty**” and a sound will chime indicating that the connection to the unit was successful. *A password may be required to enter depending on the device manufacturer, model or software version of your device. If a password is asked, type “0000” and press enter.*
5. Once the device is connected the Bluetooth LED Indicator will remain lit.
6. Turn the Volume Knob to adjust the volume.
7. Press ◀◀ and ▶▶ to choose the NEXT or PREVIOUS track.
Press ▶▶ to PAUSE or PLAY the current track.
NOTE: *An external Bluetooth device will automatically reconnect with the unit after being paired for the first time.*

LISTENING TO AN EXTERNAL DEVICE VIA AUX IN

An external (auxiliary) audio source (i.e. personal CD/MP3 Player/Mobile phone or computer) can be connected to this apparatus via the AUX IN JACK.

1. Plug a detachable Aux Cable (not provided) into the AUX IN socket on the back panel of the apparatus.
2. Turn the FUNCTION KNOB to the LINE-IN position, the LED will turn purple.
3. Plug the other end of the Aux Cable into the Headphone or Line Out socket of your External Source.
4. Power ON the unit by turning the VOLUME CONTROL KNOB clockwise.
5. Rotate the VOLUME CONTROL KNOB to adjust the sound level.

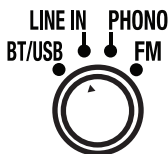

LISTENING TO AN EXTERNAL DEVICE VIA USB


1. Turn the unit ON by switching the POWER knob.
2. Set the FUNCTION KNOB to the BT/USB position.



3. When the Bluetooth LED Indicator is flashing, insert a USB Stick into USB port. The unit will automatically begin playing the music on the USB stick.
4. Press **⏮** and **⏭** to choose the NEXT or PREVIOUS track. Press **⏸** to PAUSE or PLAY the current track.
5. Long press **⏭** to delete the current playing music track stored inside of the USB

RECORDING FROM VINYL TO USB

1. Turn the FUNCTION KNOB to the PHONO position to play a vinyl record and then insert the USB stick into a USB port.

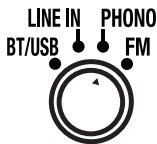

2. Long Press **⏸** to begin recording the record, the Bluetooth LED Indicator will light up. To stop recording, press **⏸** again and the LED Indicator will light up.
3. Follow the “Listening to a device via USB” directions for further playback instructions.

TROUBLESHOOTING

If you experience any problems with the unit, please take a moment to look through this guide and see if you can solve the problem yourself before you call your dealer.

General

No power:

- Check the connection to the AC power source. Make sure the AC source is not a switched outlet and if it is, turn the switch on. Make sure there is power to the AC outlet by plugging another item such as a lamp or fan.

No sound:

- Adjust the volume.

The sound has interference:

- The unit is too close to a TV set or similar appliance. Relocate the unit further away from them, or turn the other appliances off.

Radio

Cannot listen to any station, or signal is too weak:

- Tune in the station properly.
- If a TV is near the unit, turn it off.
- Rotate the unit or antenna wire for the best reception position.

Record Player

Will not play:

- Turn the VOLUME KNOB clockwise.
- Remove the white plastic stylus guard from the needle, failing to remove will not allow the needle to contact the grooves of the record and no sound will be heard!
- If the stylus is worn-out, change the stylus. Select the correct playback speed.

Sound skips:

- Place the unit on a stable surface to avoid vibration and shock. Make sure the unit is level both front to back and side to side.
- Clean the surface of the record/disc.
- Do not use scratched, damaged or warped records/discs.

If normal operation cannot be obtained, unplug the power cord from the outlet and plug it again.

Beware of condensation

When the unit (or a record) is moved from a cold to warm place, or used after a sudden temperature change, condensation may form; vapor in the air could condense on the internal mechanism, making correct operation erratic or impossible. To prevent this, or if this occurs, leave the unit turned off for one or two hours. The unit will stabilize at the temperature of its surroundings.

Maintenance

Always keep the turntable clean. If the surface of the unit gets dirty, wipe with a soft dry cloth or use a diluted mild liquid soap. Be sure to remove any excess liquid completely. Do not use thinner, benzine or alcohol as they may damage the surface of the unit. Allow the surface of the unit to dry completely before using.

SPECIFICATIONS

Amplifier

Output Power..... 2 x 2.5 W

Bluetooth

Working Range 33 feet (10 meters)

Tuner

Frequency Range (FM) 87.5MHz to 108MHz

Record Player

Motor..... DC servo motor

Drive System Belt Drive

Speed 33-1/3 RPM, 45 RPM, 78 RPM

Stylus..... ITNP-S1

Speaker System

Unit 1-way

Impedance..... 4 ohms

General

Power Requirements..... DC 5V/1.2A, AC 100-240V, 50/60Hz

Power Consumption..... 11.5W

Dimensions (with wood legs)..... L 383mm x W 345mm x H 703mm
L 15 in x W 13.6 in x H 27.6 in

Dimensions (with rubber feet)..... L 383mm x W 345mm x H 225mm
L 15 in x W 13.6 in x H 8.85 in

Dimensions (unassembled)..... L 383mm x W 345mm x H 215mm
L 15 in x W 13.6 in x H 8.46 in

Weight (with wood legs)..... 14 lbs / 6.35 kgs

Weight (with rubber feet)..... 12.2 lbs / 5.53 kgs

Weight (unassembled)..... 12 lbs / 5.44 kgs

Accessories Included

Owner's Manual

Warranty (Back of Manual)

AC Power Adaptor

45 RPM Adaptor

Turntable Sheet

Rubber Feet (4x)

Wood Legs (4x)

Design and specification are subject to change without notice.

Photos and illustrations may differ slightly from the production models.

Bluetooth is a registered trademark of Bluetooth SIG, Inc.

Other trademarks and trade names are those of their respective owners.

Made in China.

FCC & IC WARNINGS

FCC & IC RADIATION EXPOSURE STATEMENT:

This equipment complies with FCC and Canada radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

DÉCLARATION D'IC SUR L'EXPOSITION AUX RADIATIONS:

Cet équipement est conforme aux limites d'exposition aux radiations définies par le Canada pour des environnements non contrôlés. Cet équipement doit être installé et utilisé à une distance minimum de 20cm entre l'antenne et votre corps. Cet émetteur ne doit pas être installé au même endroit ni utilisé avec une autre antenne ou un autre émetteur.

FCC STATEMENT

Caution: the user is cautioned that charges or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC rules and Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils

radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) L'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.

WARRANTY

Victrola is a registered trademark of Innovative Technology Electronics, LLC.

United States

Victrola (Innovative Technology Electronics, LLC) warrants to the original retail purchaser that this product will be free from defective materials and workmanship for one (1) year from the date of purchase, subject to the limitations below. This warranty period is not extended if we replace the product.

To obtain a replacement under the terms of this warranty, you must contact the dealer from which it was purchased with your original receipt. If assistance from the dealer from which it was purchased is impossible, you may contact our customer service for warranty assistance at victrola.com/contact.

Except as limited below, if the product proves defective in either material or workmanship within one (1) year from the date of purchase, Victrola will replace the product at no charge. If the product model is no longer available and cannot be replaced with an identical model, Victrola will issue a merchandise credit for the purchase price to be redeemed at victrola.com.

Limitations:

- This limited warranty does not cover failure of the product arising, in whole or in part, from improper installation, storage, transportation, misuse, abuse, accident, neglect, mishandling, unauthorized repair, modification, or wear from ordinary use or environmental deterioration.
- This limited warranty does not cover cosmetic damage, including paint damage, or consequential damage to other components or premises which may result for any reason from the failure of the product.
- This limited warranty is null and void for products not used in accordance with Victrola's instructions.
- This limited warranty terminates if the original retail purchaser sells or otherwise transfers this product.
- This limited warranty is null and void for defects or damage caused by installation or repair performed by any person or entity other than a Victrola authorized installer or dealer.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state, jurisdiction to jurisdiction or country to country. All express and implied warranties for the product, including but not limited to any implied warranties of merchantability and fitness for a particular purpose, are limited in time to the term of this warranty. Some states, jurisdictions or countries do not allow the exclusion of certain implied warranties or conditions, or limitations on how long an implied warranty or condition lasts, so this limitation may not apply to you. Victrola's responsibility for malfunctions and defects in hardware is limited to replacement or repair as set forth in this warranty statement. Victrola does not accept liability for special, punitive, consequential or incidental damages or losses, whether direct or indirect, including without limitation, any liability for third party claims against you for damages or losses or for products not being available for use. The maximum liability for which Victrola may be responsible will be no more than the amount you paid for the product that is the subject of the claim. Some states, jurisdictions or countries do not allow the exclusion or limitation of special, indirect, incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Canada and US Territories

The Warranty on this product shall comply with applicable law when sold to a consumer in Canada or a US Territory. To obtain any applicable warranty service, please contact the dealer from which you purchased the product, or the distributor that supplied the product, with your original receipt.

If assistance from the dealer from which it was purchased is impossible, you may contact our customer service for warranty assistance at victrola.com/contact.

If this product proves defective in either material or workmanship, Victrola will replace the product at no charge. If the product model is no longer available and cannot be repaired effectively or replaced with an identical model, Victrola at its sole option may replace the unit with a current model of equal or greater value.

Outside the U.S, Canada, and US Territories

The Warranty on this product shall comply with applicable law when sold to a consumer outside of the United States, Canada, and US Territories. To obtain any applicable warranty service, please contact the dealer from which you purchased the product, or the distributor that supplied the product, with your original receipt.