

Remarks:
(1)Pairing mode will quit automatically after pairing is completed.
(2)Pairing mode will last for 5 seconds only.

4.Two or more transmitters pairing:
The pairing mode is available for a transmitter only each time. For two or more transmitters, please follow the pairing steps (1)-(3) once again to get transmitters paired one by one.

5. Reset:
Press forward button for 5 seconds to reset receivers to default. When receiver sounds 'Ding Dong' with LED flashing that means reset succeeds, setting is back to default: It comes back to the 1st music, no transmitter is paired with receiver.

4

Receiver And Transmitter Installation

Important: before installation, please test the doorbell range first.

For Receiver: Just plug receiver into standard outlet in room, then it will work.

For Transmitter: there are 2 methods to install the transmitter.

Transmitter Installation Method 1: Double-sided adhesive tap (Preferred install method)

- 1.After ensuring the right mounting position, please clean the flat area where you intend to install transmitter.
- 2.Tear off one side of the double-sided adhesive tap and stick it to the underside of transmitter; tear off the other side and put transmitter onto wall, then press for 10 seconds.

Transmitter Installation Method 2: Screw/Anchors (Optional install method)
Please prepare an electric drill, Phillips screwdriver and slotted screwdriver before installation.

- 1.Make two marks on the place of two mounting holes.
- 2.Drill two holes on the marked places, then insert 2 expansion bolts provided in the package.
- 3.Screw up the bracket or the base of the transmitter.

5

Troubleshooting

- 1.The receiver doesn't sound
 - Check the doorbell button battery, replace it if necessary.
 - The plug of receiver is loose.
 - The receiver could be out of range of the doorbell button.
 - The receiver may not have paired with the doorbell button.
 - Check that the volume control is not at the minimum setting.
- 2.Operating range is reduced
 - Metal structures, including uPVC door frames can reduce the range of the product. Avoid mounting the push or chime on or near metal structures.
 - Other equipment can cause radio interference that affects your doorbell.
 - Walls and ceilings will reduce the range.
 - Weak batteries will reduce range. Replace every 12–18 months.

6

FCC Caution:
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure condition without restriction.


WIRELESS DOORBELL
User Manual

1

What You Should Know Before Using

- 1.The transmitter(s) supplied with this kit is(are) paired with receiver(s) and set to default ringtone "Dingdong",IF NOT, please refer to the "Quick Start" to pair the transmitter(s) with receiver(s) and set your favorite ringtone(s).
- 2.It is not advisable to mount the transmitter onto metal surfaces as the material can block RF signals between the transmitter and the receiver. However, if this is the only option then we recommend that you use the sticky pad provided as opposed to using the provided screws.
- 3.Operating range will decrease if battery in transmitter is in low power status.
- 4.It is not advisable to mount the transmitter in the outdoor directly without any shelter which could accelerate aging of plastic materials.

Quick Start

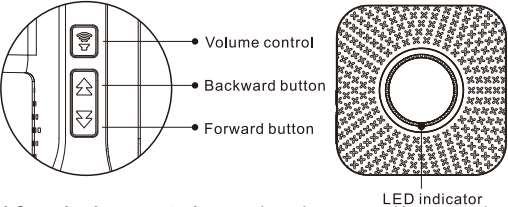

1.Sound volume control: press the volume control button on the receiver.This switch toggles between **High** and **Low** volume.

- 2.Set Ringtone:**
(1)Press Forward Button or Back Button to choose your favorite ringtone,the receiver playing is the ringtone selected.
(2)**Please follow the pairing steps (1)-(3) below to sync the new ringtone.** the new ringtone will be set for the most recently synced transmitter.

2

3.Pairing a transmitter to the receiver:

- (1)Please select your favourite ringtone before pairing.



Select ringtone

- (2)Hold and press the volume control button for 5s until a "Ding-dong" is heard and the LED indicator starts flashing,you are now in pairing mode.



Hold volume button for 5s

- (3)Active the transmitter to send a signal to the receiver.



Active the transmitter

3