


Quick Start Guide

2.8-inch Linux Visible Light Product

Version: 1.0

Pue to regular upgrades of systems and products, ZKTeco could not guarantee exact consistency between the actual product and the written information in this manual.


1. Components

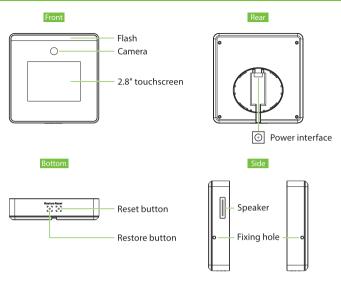

2. Installation


a. Mounting on the desktop holder

- 1. Plug the power cord into the power interface.
- 2. Fix the back plate to the desktop holder.
- 3. Insert the back plate into device. And use security screws to fasten the device to back plate.

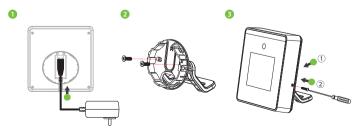


b. Mounting on the wall

- 1. Recommended height from the ground is 1.5m and can be adjusted according to the personnel average height.
- 2. Fix the back plate onto the wall using wall mounting screws.
- 3. Insert the device into back plate. (Plug the power cord into the power interface before installation.)
- 4. Use security screws to fasten the device to back plate.

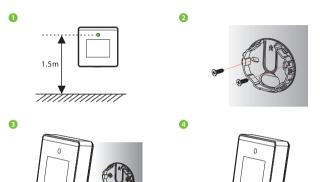

3. Power Connection

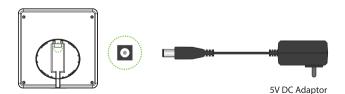

Recommended power supply:


- 5V ± 10%, at least 2000mA.
- Please use the supplied power adaptor.


4. Add User


When there is no super administrator set in the device, press \equiv to enter the main menu. After setting the super administrator, the system will request for the administrator's verification before entering the menu. For the security purpose, it is recommended to register a super administrator at the first time you use the device.

Click = to view the menu. Select [User Mgt.] and then add [New User]. Settings include user ID, name, user role, verification mode, face, password and user photo.

2020-03-03 (08:40	((:-				
	08:40					
	2020-03-03 Tuesday					
Welcome						
		-				
	\bigcirc					
5	User Mgt.					
All Users						
🔝 Display Style						

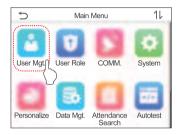

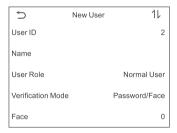

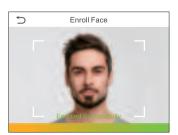



5. Configuring Wi-Fi

Click = > [Comm.] > [Wireless Network] to configuring Wi-Fi.

When **WIFI** is enabled, tap the searched network. Enter the password, and tap **Connect to WIFI** (**OK**). The connection succeeds, with icon $\widehat{\uparrow}$ displayed on the status bar.



6. Attendance Search

When users verify successfully, attendance records are saved in the device. This function enables users to check attendance logs.

Click \equiv > [Attendance Search] > [Attendance Record], enter User ID (if user ID field is left blank, records of all users will be displayed) > select **Time Range**, the corresponding attendance logs will be displayed.



5	Attendance Search				
Attendance Record					
1 Attendance Photo					
Blacklist ATT Photo					

7. Device Reset

a. Device power off and restart

Method 1: Click \equiv > [System] > enter System settings interface. Press [Reset] to power off the device and restart.

5	Main Menu	11	5		System
				Date Time	
	User Role COMM.	vIM. System∩.		Attendance	
-				Face	
	5		8	Reset	
Personalize	Data Mgt. Attend Sea				

Method 2: Use tool to press the **Reset button** on the bottom (slight click sound will be heard) for 3 seconds, then the device will power off and restart.

b. Restore Factory Settings

Restore the device, such as communication settings and system settings, to factory settings (The registered user data won't be deleted).

Use tool to press the **Restore button** on the bottom (slight click sound will be heard) for 3 seconds, then the device will power off and restart.

FCC Warning

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

ZKTeco Industrial Park, No. 26, 188 Industrial Road,

Tangxia Town, Dongguan, China.

Phone :+86 769 - 82109991

Fax :+86755-89602394

www.zkteco.com



Copyright © 2020 ZKTECO CO., LTD. All Rights Reserved.